

GlocalMe GLMU24A01

GlocalMe MeowGo G40Pro Portable WiFi Hotspot User Manual

Model: GLMU24A01

INTRODUCTION

The GlocalMe MeowGo G40Pro is an advanced 4G+ portable WiFi hotspot designed to provide high-speed internet connectivity in over 200 countries and regions. Featuring AI HyperConn and CloudSIM technology, it ensures stable and fast connections with download speeds up to 390Mbps. This device supports up to 10 connected devices simultaneously and offers flexible data plans without the need for a physical SIM card or contract.

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your MeowGo G40Pro device.

PACKAGE CONTENTS

- GlocalMe MeowGo G40Pro Device
- Charging Cable
- User Manual

PRODUCT OVERVIEW

The GlocalMe MeowGo G40Pro is a compact and lightweight device, designed for portability and ease of use. It features a 2-inch 1080P touchscreen for intuitive navigation and status display.



Figure 1: Front view of the GlocalMe MeowGo G40Pro portable WiFi hotspot, showing its display and GlocalMe branding.

Ultra Slim and Lightweight

Easy to carry, portable WiFi hotspot for travel

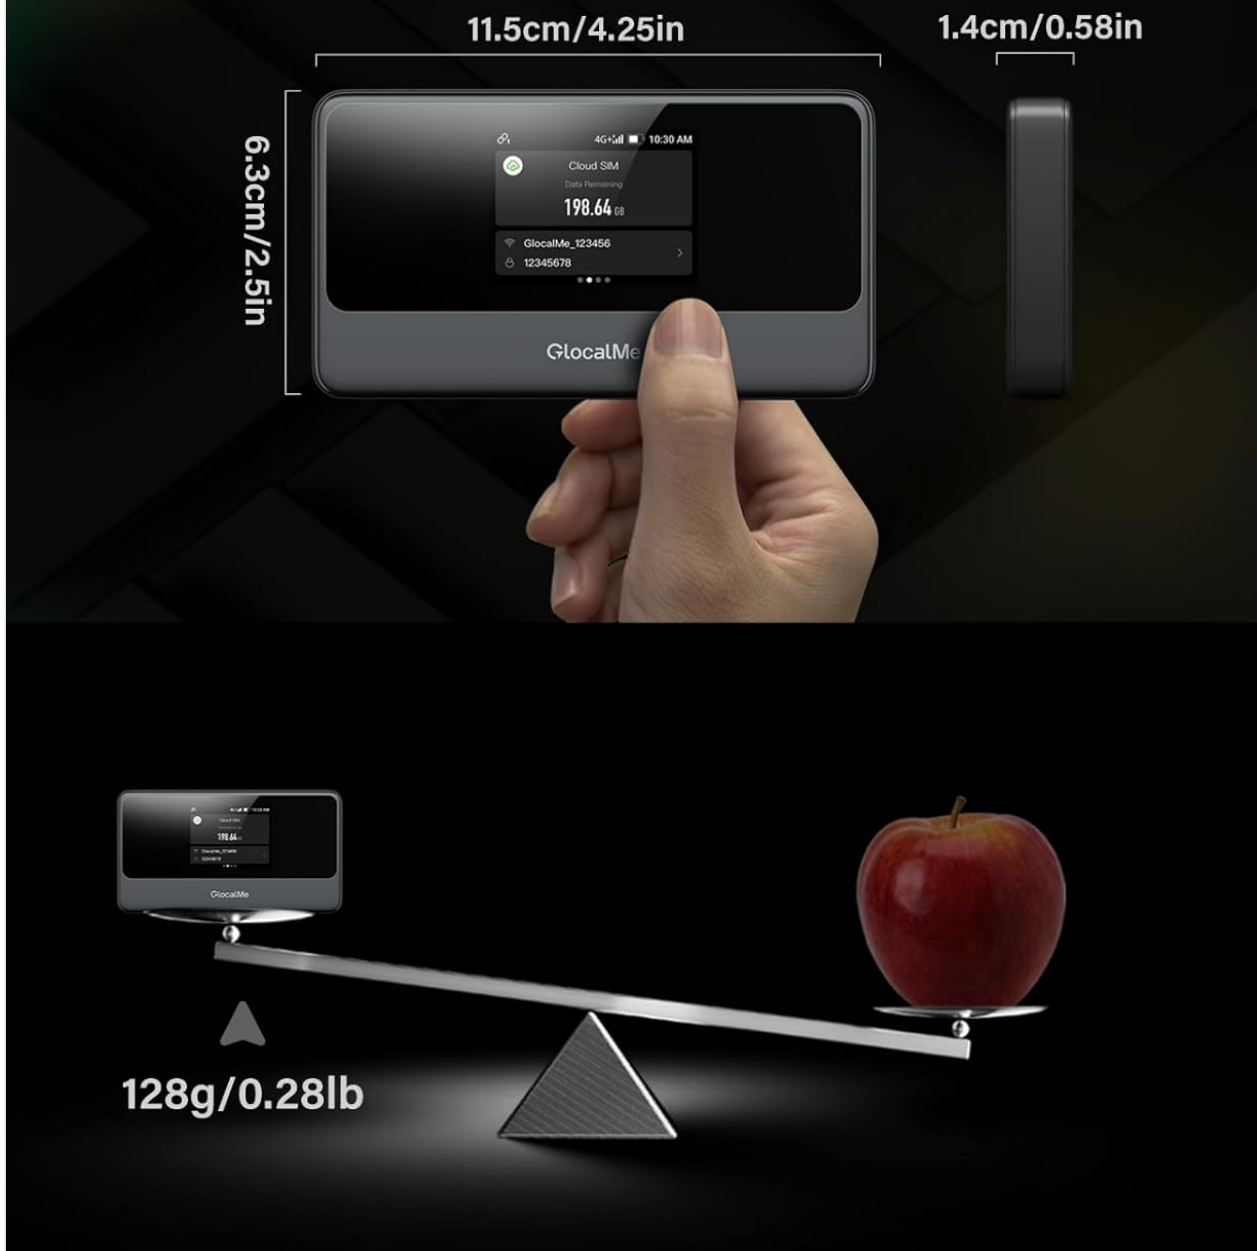 


Figure 2: Illustration of the GlocalMe MeowGo G40Pro's ultra-slim design and lightweight nature (128g), compared to an apple for scale.

SETUP

1. Initial Device Activation

1. Unpack your GlocalMe MeowGo G40Pro device.
2. Power on the device by pressing and holding the power button.

3. Download the GlocalMe APP from the Google Play Store or Apple App Store.
4. Register for a GlocalMe account within the app.
5. Link your device with the GlocalMe App by scanning the QR code displayed on the device's screen.
6. Upon successful linking, you will receive 1.1GB of global data.



The European Region Covered (50+)

Germany, France, Great Britain, Italy, Netherlands, Sweden, Austria, Belgium, Denmark, Finland, Ireland, Luxembourg, Norway, Switzerland, Spain, Iceland, Liechtenstein, Monaco, San Marino, Andorra, Estonia, Czech Republic, Slovenia, Poland, Portugal, Greece, Cyprus, Malta, Croatia, Slovakia, Lithuania, Latvia, Montenegro, Serbia, Bosnia and Herzegovina, North Macedonia, Albania, Bulgaria, Romania, Turkey, Ukraine, Moldova, Åland Islands, Faroe Islands, Guernsey, Isle of Man, Jersey and Gibraltar.

Figure 3: Visual representation of the quick start guide, detailing steps from getting the device to connecting to WiFi.

2. Connecting to the Hotspot

1. On your smartphone, tablet, or computer, open your Wi-Fi settings.
2. Locate the Wi-Fi network name (SSID) and password displayed on the MeowGo G40Pro's screen or on the sticker on the back of the device.
3. Select the GlocalMe network and enter the password to connect.
4. The device supports connecting up to 10 devices simultaneously.

OPERATING INSTRUCTIONS

1. Power On/Off

To power on the device, press and hold the power button until the screen lights up. To power off, press and hold the power button until a shutdown option appears on the screen, then confirm.

2. Navigating the Touchscreen

The 2-inch 1080P touchscreen allows you to view device status, data usage, network information, and manage settings. Swipe through the menus to access different functions.

3. Data Plan Management

Manage your data plans directly through the GlocalMe APP. You can purchase flexible and affordable data plans by the Day, Month, Region, or GB. The device automatically selects the strongest signal from over 390 global carriers in 200+ countries.

390+ Global Carriers Access Internet Coverage 200+ Countries

No SIM Card or Contract Required, Pay As You Go



Figure 4: Illustration showing the GlocalMe MeowGo G40Pro's access to over 390 global carriers across 200+ countries, highlighting its no SIM card or contract required feature.



Figure 5: Example of flexible and affordable data plans available for the GlocalMe device, including Day Pass and Monthly Pass options.

4. AI HyperConn Technology

The patented HyperConn technology ensures seamless connectivity through intelligent wireless evaluation, AI-driven network switching (4G/3G/WiFi), and three-layer access. It monitors real-time performance and automatically switches to optimal networks for uninterrupted connections, including automatic connection to Airplane WiFi.

High Flexibility Hotspot Device

Share WiFi up to 10 devices or
Connection to computer via USB



Figure 6: Diagram illustrating the HyperConn and CloudSIM technology, showing how the device connects to various carriers and networks (Travel, Home, Office, Airplane) and supports multiple connected devices.

Your browser does not support the video tag.

Video 1: Demonstrates the GlocalMe MeowGo G40Pro's AI HyperConn technology, showing seamless connectivity for navigation and music streaming in a car. This video highlights the device's ability to provide internet access even when out of coverage, ensuring continuous connectivity for travel.

Your browser does not support the video tag.

Video 2: Illustrates the GlocalMe MeowGo G40Pro's utility in a business meeting scenario, showcasing how it prevents conference interruptions due to signal loss. The video emphasizes multi-network coverage and the ability to share Wi-Fi with up to 10 devices for high-speed connection, making it an ultimate meeting companion.

Your browser does not support the video tag.

Video 3: Shows the GlocalMe MeowGo G40Pro providing seamless internet access for family connections, even when streaming is freezing or no signal is detected. It highlights the device's multi-network coverage and ability to share Wi-Fi with up to 10 devices, ensuring instant family connection anytime, anywhere.

Your browser does not support the video tag.

Video 4: Demonstrates the GlocalMe MeowGo G40Pro's capability to provide internet service underground, such as in a subway. It emphasizes multi-network coverage and the ability to share Wi-Fi with up to 10 devices, making it an underground-ready connection keeper for continuous connectivity.

MAINTENANCE

 
1. Battery Life

The MeowGo G40Pro is equipped with a built-in 3200mAh lithium battery, providing over 15 hours of continuous use. To maximize battery life, ensure the device is fully charged before extended use and power it off when not in use.

High-performance Lithium Battery

Built-in 3200mAh battery ensures up to 15 hours use

3200mAh

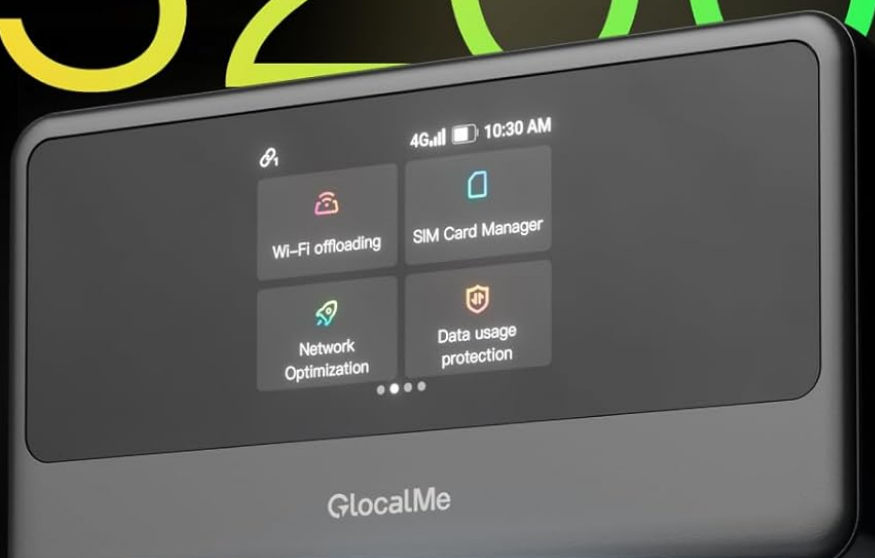

15 Hours

Figure 7: Image highlighting the GlocalMe MeowGo G40Pro's 3200mAh battery, which provides up to 15 hours of use.

2. Software Updates

Periodically check the GlocalMe APP for available software updates to ensure optimal performance and access to the latest features. Follow the in-app instructions to install any updates.

3. Cleaning and Storage

Wipe the device with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

1. No Internet Connection

- Ensure the device is powered on and has sufficient battery.
- Check your data plan status in the GlocalMe APP to ensure you have active data.
- Verify that your connected device (phone, tablet, laptop) is properly connected to the MeowGo G40Pro's Wi-Fi network.
- Restart both the MeowGo G40Pro and your connected device.
- If in a new location, allow the device a few minutes to automatically select the strongest local carrier.

2. Slow Connection Speed

- Ensure you are in an area with good 4G+ signal coverage.
- Reduce the number of connected devices, as sharing bandwidth among many devices can affect speed.
- Move the MeowGo G40Pro closer to your connected devices to improve Wi-Fi signal strength.
- Check for any background applications or downloads consuming bandwidth on your connected devices.

3. Device Not Turning On

- Connect the device to a power source using the provided charging cable and allow it to charge for at least 30 minutes.
- Attempt to power on the device again. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Description
Model Name	MeowGo G40 Pro
Item Model Number	GLMU24A01
Connectivity Technology	Wi-Fi
Wireless Communication Standard	802.11ac
Frequency Band Class	Dual-Band (5 GHz)
Special Feature	4G WiFi Hotspot, Speed Up to 390Mbps (Download), 150Mbps (Upload)
Battery	3200mAh Lithium Polymer (over 15 hours use)
Item Weight	8.8 ounces (249.5 grams)
Package Dimensions	5.94 x 4.41 x 1.14 inches

Feature	Description
Compatible Devices	Personal Computer, Tablet, Smartphone
Recommended Uses	Travel, Home, Business
Country of Origin	China

WARRANTY AND SUPPORT

Warranty Information



For detailed warranty information regarding your GlocalMe MeowGo G40Pro device, please refer to the warranty card included in your product packaging or visit the official GlocalMe website. Keep your proof of purchase for warranty claims.

Customer Support

If you encounter any issues or have questions not covered in this manual, please contact GlocalMe customer service. 24/7 customer support is available to assist you.

- Visit the [GlocalMe Store on Amazon](#) for product information and support resources.
- Refer to the GlocalMe APP for in-app support options and FAQs.

Related Documents - GLMU24A01

	<p>GlocalMe Numen Air Quick Start Guide: Setup and Usage</p> <p>Your essential guide to setting up and using the GlocalMe Numen Air mobile WiFi hotspot. Learn to connect via Cloud SIM or physical SIM, manage data plans, and access global internet.</p>
	<p>GlocalMe UPP Quick Start Guide: Connecting to the Internet</p> <p>This guide provides instructions on how to set up and use the GlocalMe UPP device, including Cloud SIM and physical SIM card usage, network optimization, and regulatory information.</p>



1 Insert SIM card



2 Turn on FirstG

- Press and hold the power button for 3 second
- When the light of stays on, it means successful connection.



3 Connect Wi-Fi

- Find the Wi-Fi name and password at the back of FirstG (or inside)
- Connect your mobile device in Wi-Fi setting



4 Unlock PIN

- If SIM card is set to PIN safety mode, connect to WiFi, visit 192.168.43.1 which will direct to unlock PIN webpage, enter correct PIN code to unlock.



5 Set APN

- If there is no connection after completion of preceding steps, you have to add APN manually.
- **Settings** → **Network settings** → **APN settings** → **Add manually** enter APN of your SIM card operator, save and use.



Manage My Device

Web: 192.168.43.1
Username: admin
Password: admin



GlocalMe FirstG Quick Start Guide

A concise guide to setting up and using the GlocalMe FirstG device, including SIM card insertion, device activation, Wi-Fi connection, PIN unlocking, and APN settings.



【How To Use GlocalMe Cloud SIM Service?】

(Highly Recommended)

1 Download GlobalMe App

- Download and install GlocMe app on your mobile phone.



2 Create a GlocalMe Account (In App)

- Click [Sign In] -> [Register]
- Follow the steps to register an account.
(You can register using an email or mobile number)



3 Purchase In-App GlocalMe Data Plans

- Choose the data plans that suit your needs. Note: In-app Plans have already ordered a data plan with the purchase of your device.



4 Link Device with GlocalMe App

- Open GlocalMe App and click [Link Device] -> [Activate Device]
- Scan the device QR code on the back of the U3 model



Data Flow Protection Reminder

This product has "Data Flow Protection" built on by default to prevent connected devices from using your data for unauthorized system and application updates, other than GlocalMe services. If you find you're unable to access the App Store or unable to download applications, Firewall may be temporarily remove the restriction of setting 192.168.4.1 in the browser.

5 Turn On U3

- Press and hold the power button for 3 seconds if you want to turn on U3 and connect to the Internet (the device will be charged).
- Once the light of [U3] app on it means your device is ready to connect.



6 Connect To Wi-Fi

- Find the Wi-Fi network name and password at the back of U3
- On your mobile device under Wi-Fi settings search for the network and connect



[How To Use A Physical SIM Card?]

U3 is default to use eSIM SIM services, but it also supports the use of physical SIM cards.

1 Insert The SIM Card

- Please insert your phone when inserting/using SIM card
- Open the SIM card tray with a pin and insert the SIM card as shown in the picture below. (Device only supports Nano SIM cards)



2 Unlock SIM Card (if PIN protected)

- If the SIM card is PIN protected, please enter the mobile device in the GlocalMe Wi-Fi network and enter 192.168.4.1 in your browser.

Username: admin, Password: admin

Please follow the steps to input the PIN code to unlock the SIM.



3 Set The APN Manually

- If you still cannot connect to the network after the above steps, please set the APN manually and enter 192.168.4.1 in your browser.

Settings -> [SIM card management] -> [APN settings] -> [Add manually]

enter the APN of your SIM card operator and click save.

 


4 SIM Card Selection

- Connect your mobile phone / laptop to GlocalMe Wi-Fi and enter 192.168.4.1 in the browser.
- Select [SIM] in the section of SIM Card Selection.



[U3 Light Indicator]

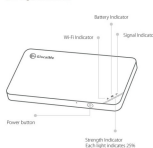

1 Battery Check

- Press power button once for checking the battery level

2 Signal Check

- Press power button twice for checking the signal level



GlocalMe U3 Quick Start Guide

A concise guide to using the GlocalMe U3 device for cloud SIM services and physical SIM card usage, including app integration, device setup, and network connection.

