

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MCombo](#) /

> [MCombo Dual Motor Oversized Power Recliner Chair PR607 User Manual](#)

MCombo PR607

MCombo Dual Motor Oversized Power Recliner Chair PR607 User Manual

Model: PR607

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and operation. Failure to follow these instructions may result in injury or damage to the product.

- Assembly required. Read all instructions carefully before assembly.
- Keep electrical components away from water.
- Unplug the power adapter when not in use.
- Do not operate the chair if the power adapter or electrical components are damaged.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Chair Base
- Backrest
- Power Adapter
- Remote Control
- Instruction Manual

SETUP AND ASSEMBLY

The MCombo PR607 recliner is designed for easy assembly without the need for additional tools. Follow these steps for quick setup:

1. Place the chair base on a flat, stable surface.
2. Align the backrest with the connectors on the chair base. Gently push down until the backrest securely locks into place.
3. Connect all electrical wiring located beneath the chair. Ensure all connections are firm.
4. Plug the power adapter into the chair's power input and then into a wall outlet.

Assembly is typically completed within 5 minutes for a novice user.

OPERATING INSTRUCTIONS

The MCombo PR607 features a dual motor system for independent control of the backrest and footrest, along with rocking and LED lighting functions.

Remote Control Functions

Use the wired remote control to adjust your seating position:

- **Recline/Incline:** Use the arrow buttons to independently adjust the backrest and footrest to your desired position. The maximum reclining angle is 155°.
- **One-Touch Reset:** Press the 'Home' button to smoothly return the chair to its original upright position in approximately 13 seconds.
- **USB Ports:** The armrest includes dual USB and Type-C ports to charge your devices.
- **LED Lighting:** Activate the LED ambient lighting for added relaxation.



Only footrest moves



Only backrest moves

Infinite Position

Adjust the **backrest and footrest independently** for optimal comfort, whether napping, watching TV, or reading.

Figure 1: Remote control for adjusting recline and other features.

Independent Backrest and Footrest Adjustment

The dual motor system allows you to adjust the backrest and footrest separately, providing a wide range of positions for TV watching, lounging, or sleeping.



Rocking in All Positions

Figure 2: Independent adjustment of footrest and backrest.

Rocker Function

The chair is designed with durable steel connectors that ensure a smooth and stable rocking motion at a 30° angle. This function is available even when the chair is in a reclined position.



LED Ambient Lighting

Figure 3: Rocking motion in all positions.

LED Ambient Lighting

Enhance your relaxation experience with the integrated LED ambient lighting feature.



Figure 4: LED ambient lighting feature.

Product Operation Video

Your browser does not support the video tag.

Video 1: Demonstrates the ultimate comfort and features of the MCombo PR607 armless power glider chair.

MAINTENANCE

To ensure the longevity and optimal performance of your MCombo recliner, follow these maintenance guidelines:

- Regularly inspect all electrical connections and the power adapter for any signs of damage.
- Keep the fabric clean by vacuuming regularly. For spills, gently blot with a clean, damp cloth. Avoid harsh chemicals.
- Ensure the chair is placed on a level surface to maintain proper rocking and reclining function.

TROUBLESHOOTING

If you encounter any issues with your MCombo recliner, please refer to the following common solutions:

- **Chair not reclining:** Check if the power adapter is securely plugged into both the chair and the wall outlet. Ensure the power switch (if present) is in the 'on' position.
- **Unusual noises during operation:** Ensure all assembly connections are tight. If noises persist, contact customer support.
- **Remote control not responding:** Verify the remote control cable is securely connected to the chair's wiring.

SPECIFICATIONS

Feature	Detail
Brand	MCombo
Model Name	Oversized Dual Motor Armless Power Recliner Chair (PR607)
Product Dimensions	42.9"D x 39.8"W x 40.2"H
Seat Length	38.2 Inches
Item Weight	118.6 pounds
Material	Textile (Fabric)
Max Reclining Angle	155°
Rocker Angle	30°
Special Features	Adjustable Backrest, Foot Rest, Power Recliner, Wide, LED Lighting, USB Ports

Ideal Height : 5'1"-6'1" Max Capacity : 350 lbs



TV



Lay Flat

Figure 5: Product dimensions and recline positions.

WARRANTY INFORMATION

The MCombo PR607 Dual Motor Oversized Power Recliner Chair comes with a 2-Year Limited Warranty covering the following components:

- Reclining Mechanism
- Electrical Parts
- Upholstery Material
- Cushions
- Wood and Metal Frame

For warranty claims or further details, please contact MCombo customer support.

CUSTOMER SUPPORT

For any questions, assistance, or to report issues with your MCombo recliner, please contact our

customer support team. Refer to your purchase documentation for specific contact details or visit the official MCombo website.