

[Manuals.plus](#) /

› [Fansbe Tech](#) /

› Fansbe Tech N8+ Kids Alarm Clock Star Projector Instruction Manual

Fansbe Tech N8+

Fansbe Tech N8+ Kids Alarm Clock Star Projector Instruction Manual

Model: N8+

INTRODUCTION

This manual provides comprehensive instructions for the Fansbe Tech N8+ Kids Alarm Clock Star Projector. Please read this manual thoroughly before using the product to ensure proper operation and to maximize its features. Keep this manual for future reference.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Fansbe Tech N8+ Alarm Clock Star Projector
- Remote Control
- USB Type-C Charging Cable
- User Manual
- Base Stand

PRODUCT FEATURES

The Fansbe Tech N8+ combines multiple functionalities into one device:

- **Dual Alarm Clock:** Set two independent alarms with 7 selectable alarm tones.
- **Snooze Function:** Provides an additional 5 minutes of sleep.
- **Star Projector:** Projects galaxy light effects with 6 color modes and 6 lighting modes, offering 21 combinations.
- **Bluetooth Speaker:** Connects to devices for audio playback.
- **White Noise Machine:** Features 14 soothing sounds.
- **Auto-Off Timer:** For Bluetooth and white noise functions (15, 30, or 60 minutes).
- **Adjustable Display Brightness:** Four levels for the LCD digital display.
- **Remote Control:** For convenient operation up to 6 meters.

- **Rechargeable Battery:** Built-in lithium battery with Type-C charging.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Charging:** Connect the provided USB Type-C charging cable to the alarm clock and a DC 5V/1A power adapter (included). The device will begin charging. A full charge provides up to 30 hours of standby time.
3. **Placement:** Place the alarm clock on a stable, flat surface. The included base stand can be used to adjust the projection angle.
4. **Remote Control:** Ensure the remote control has batteries installed.



Figure 1: Alarm clock connected to power with remote and base stand.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button (usually marked with a power symbol) to turn the device on or off.

2. Setting Time and Date

1. Press the 'SET' button (often represented by a gear icon or 'M' for Mode) to enter time setting mode.
2. Use the '+' and '-' buttons to adjust hours, minutes, and date.
3. Press 'SET' again to confirm each setting and move to the next.
4. The display supports 12/24 hour format. This can usually be toggled during time setting or via a dedicated button.

3. Setting Alarms (Dual Alarms)

The device supports two independent alarms.

1. Press the 'Alarm 1' button (often marked with a bell icon or 'AL1') to enter Alarm 1 setting mode.
2. Use the '+' and '-' buttons to set the desired alarm time.
3. Press the 'Alarm 1' button again to confirm the time and proceed to select the alarm tone. Choose from 7 available tones.
4. Press the 'Alarm 1' button once more to select the alarm frequency: Monday-Sunday, Monday-Saturday, or Saturday-Sunday.
5. Repeat steps 1-4 for 'Alarm 2' using the 'Alarm 2' button (or 'AL2').
6. To activate or deactivate an alarm, press its respective alarm button briefly. An indicator on the display will show if the alarm is active.

Dual Alarm Clock with 7 Alarm Sounds

Select your favourite alarm sounds to wake you up at any alarm time you set.



Figure 2: Dual alarm clock functionality with 7 alarm tones.

 **7** Alarm Clock Songs

 **14** Soothing Sounds

 **Built-in Bluetooth Speaker**



Figure 3: Overview of alarm sounds, white noise, and Bluetooth speaker features.

5 Minutes Snooze Function & Dual Alarm

Press any key (but not snooze key)
to sleep another 5 minutes



Figure 4: Dual alarm and snooze function.

4. Snooze Function

When an alarm sounds, press any button on the clock (except the dedicated SNOOZE button, if present, or the power button) to activate the snooze function. The alarm will pause for 5 minutes and then sound again.

5. Star Projector Operation

The star projector creates galaxy light effects.

1. Press the 'Projector' button (often marked with a light bulb or star icon) to turn the projection on or off.
2. Press the 'Color Mode' button to cycle through 6 different color modes.
3. Press the 'Lighting Mode' button to cycle through 6 different lighting effects.
4. The combination of color and lighting modes provides 21 unique projection effects.
5. The projection lights can also flash in sync with music when the Bluetooth speaker is active.

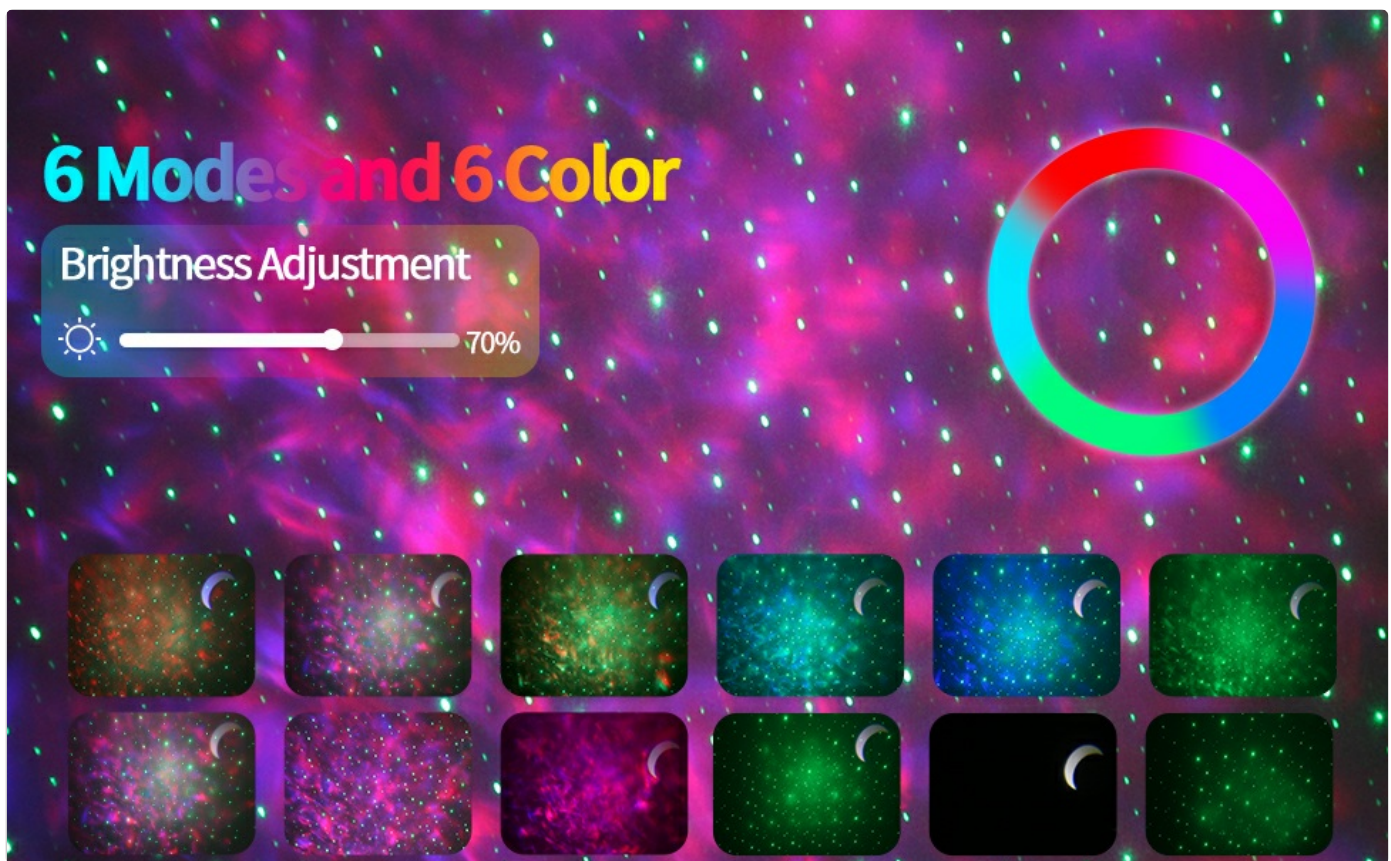


Figure 5: Star projector displaying galaxy light effects.



Figure 6: Detailed view of the 21 light projection effects available.

6. Bluetooth Speaker Function

1. Press the 'Bluetooth' button (often marked with a Bluetooth symbol) to activate Bluetooth pairing mode. The display may show a blinking Bluetooth icon.
2. On your mobile device or computer, search for Bluetooth devices and select "Fansbe Tech N8+" (or similar name).
3. Once paired, you can play audio from your device through the alarm clock's speaker.
4. Use the '+' and '-' buttons to adjust the volume.

7. White Noise Machine

The device includes 14 soothing white noise sounds.

1. Press the 'White Noise' button (often marked with a sound wave or musical note icon) to cycle through the available sounds.
2. Use the '+' and '-' buttons to adjust the volume.
3. To set an auto-off timer for the white noise, press the 'Timer' button (if available) and select 15, 30, or 60 minutes.



Figure 7: The 14 soothing sounds available for relaxation.



Figure 8: Volume control and auto-off timer settings for audio functions.

8. Display Brightness Adjustment

The LCD display has four levels of adjustable brightness.

1. Press the 'Brightness' button (often marked with a sun icon) to cycle through the brightness levels (e.g., 5%, 25%,

50%, 100%).

2. Select the desired brightness for comfortable viewing day or night.

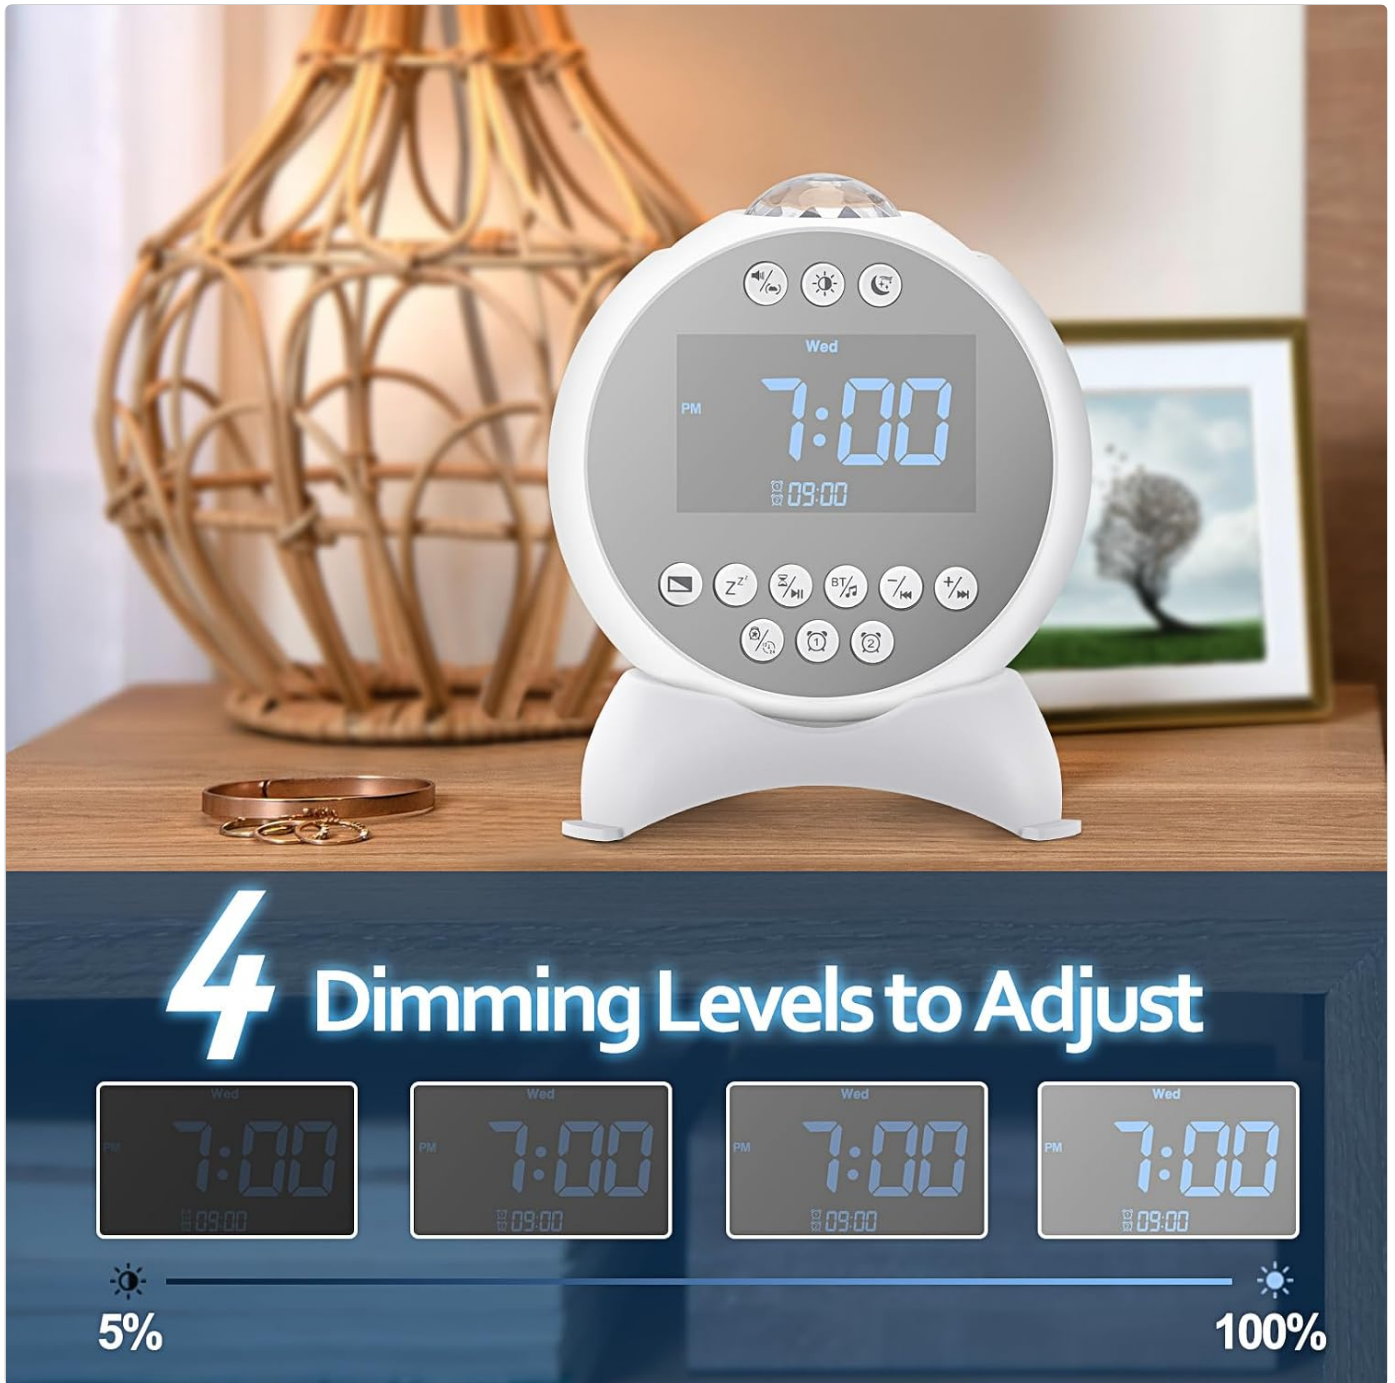


Figure 9: Four dimming levels for the display.

9. Remote Control Usage

The included remote control allows for convenient operation from a distance of up to 6 meters.

Refer to the remote control's button layout for specific functions. Buttons typically mirror the functions available on the device itself (e.g., power, alarm settings, projector modes, volume, brightness).

MAINTENANCE

To ensure the longevity and optimal performance of your Fansbe Tech N8+ Alarm Clock Star Projector, follow these maintenance guidelines:

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as

these can damage the surface.

- **Water Exposure:** Keep the device away from water and high humidity. It is not waterproof.
- **Temperature:** Avoid exposing the device to extreme temperatures (hot or cold) or direct sunlight for extended periods.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Recharge when the low battery indicator appears. If storing for a long period, charge the battery to about 50% every few months.

TROUBLESHOOTING

If you encounter issues with your Fansbe Tech N8+ Alarm Clock Star Projector, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not power on.	Low battery or no power connection.	Connect the device to a power source using the Type-C cable and included adapter. Ensure the adapter is working. Allow it to charge for a few minutes before attempting to power on.
Remote control is not working.	Dead batteries in remote, obstruction, or remote out of range.	Replace the remote control batteries. Ensure there are no obstructions between the remote and the alarm clock. Operate the remote within 6 meters of the device.
No sound from Bluetooth speaker.	Not paired, volume too low, or incorrect audio source.	Ensure the device is successfully paired via Bluetooth. Increase the volume on both the alarm clock and your connected device. Check that your device's audio output is directed to the Bluetooth speaker.
Star projector lights are dim or not working.	Projector off, low battery, or obstruction.	Ensure the projector function is turned on. Charge the device if the battery is low. Check for any obstructions blocking the projection lens.
White noise sounds are not playing.	White noise function not activated or volume too low.	Press the 'White Noise' button to activate the function. Increase the volume using the '+' button.

SPECIFICATIONS

Feature	Detail
Brand	Fansbe Tech
Model Number	N8+
Color	White
Display Type	Digital LCD
Power Source	Corded Electric (USB Type-C, DC 5V/1A)
Battery	1 Lithium Ion battery (included)
Product Dimensions	8.4"W x 4.7"H
Material	Plastic
Connectivity Technology	Bluetooth, USB
Special Features	Adjustable Brightness, Dual Alarm, Musical Tones, White Noise Machine, Star Projector, Remote Control

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Fansbe Tech customer service through the retailer's platform or the official Fansbe Tech website. Please have your product model number (N8+) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F4DG8ZHN>

More documents and user manuals: <https://manuals.plus/>