

CREATE WINDCALM S

CREATE WINDCALM S Ceiling Fan with Light User Manual

Model: WINDCALM S (82468_513764)

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your CREATE WINDCALM S Ceiling Fan with Light. Please read this manual thoroughly before installation and use, and retain it for future reference. This ceiling fan is designed for both indoor and outdoor use, featuring a silent DC motor, 6 speeds, 3 light color temperatures, and a remote control with timer and summer-winter functions.

2. SAFETY INSTRUCTIONS

- Ensure the power supply is disconnected before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with local electrical codes.
- The mounting structure must be capable of supporting the weight of the fan (refer to specifications for weight).
- Maintain a minimum clearance of 2.3 meters (7.5 feet) from the floor to the fan blades.
- Do not insert objects into the fan blades while the fan is operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation:

- Fan Motor Unit
- 3 ABS Blades (Light Wood Effect)
- Mounting Bracket

- Remote Control
- LED Light Kit
- Mounting Hardware (screws, anchors, etc.)
- User Manual

4. SETUP AND INSTALLATION

Follow these steps for proper installation. It is recommended to have two people for installation.

4.1 Pre-Installation

- Turn off power at the circuit breaker.
- Unpack all components and lay them out on a soft surface to prevent scratches.
- Ensure the ceiling junction box is securely mounted and can support the fan's weight.

4.2 Mounting the Bracket

Secure the mounting bracket to the ceiling junction box using the provided screws and anchors. Ensure the bracket is level and firmly attached.



Image: Assembly process of the fan blades.

4.3 Wiring Connections

- Connect the household supply wires to the fan wires according to the wiring diagram in the full manual. Typically, this involves connecting live, neutral, and ground wires.
- Ensure all connections are secure and insulated with wire nuts.

4.4 Attaching the Motor and Blades

- Carefully lift the fan motor assembly and attach it to the mounting bracket.
- Secure the fan motor to the bracket using the designated screws.
- Attach each blade to the motor housing using the provided screws. Ensure blades are securely fastened.

4.5 Installing the Light Kit

- Connect the light kit wires to the corresponding wires from the fan motor.

- Secure the light kit to the bottom of the fan motor housing.



Image: CREATE WINDCALM S ceiling fan installed in a bedroom.



Image: CREATE WINDCALM S ceiling fan installed on an outdoor patio.

5. OPERATING INSTRUCTIONS

Your CREATE WINDCALM S ceiling fan is controlled by the included remote control.

5.1 Remote Control Functions

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed:** Use the speed buttons (1-6) to adjust the fan's rotation speed. There are 6 available speeds.
- **Light On/Off:** Press the light button to turn the LED light on or off independently.
- **Light Temperature:** Cycle through the three light color temperatures (Warm White 2700K, Neutral White 3300K, Cool White 4000K) by pressing the light temperature button. *Note: Light intensity is not dimmable.*
- **Timer:** Set the fan to turn off automatically after 1, 2, or 4 hours using the timer buttons.
- **Summer/Winter Mode:** Switch between summer and winter modes to optimize airflow for the season.

Inverno

Verano

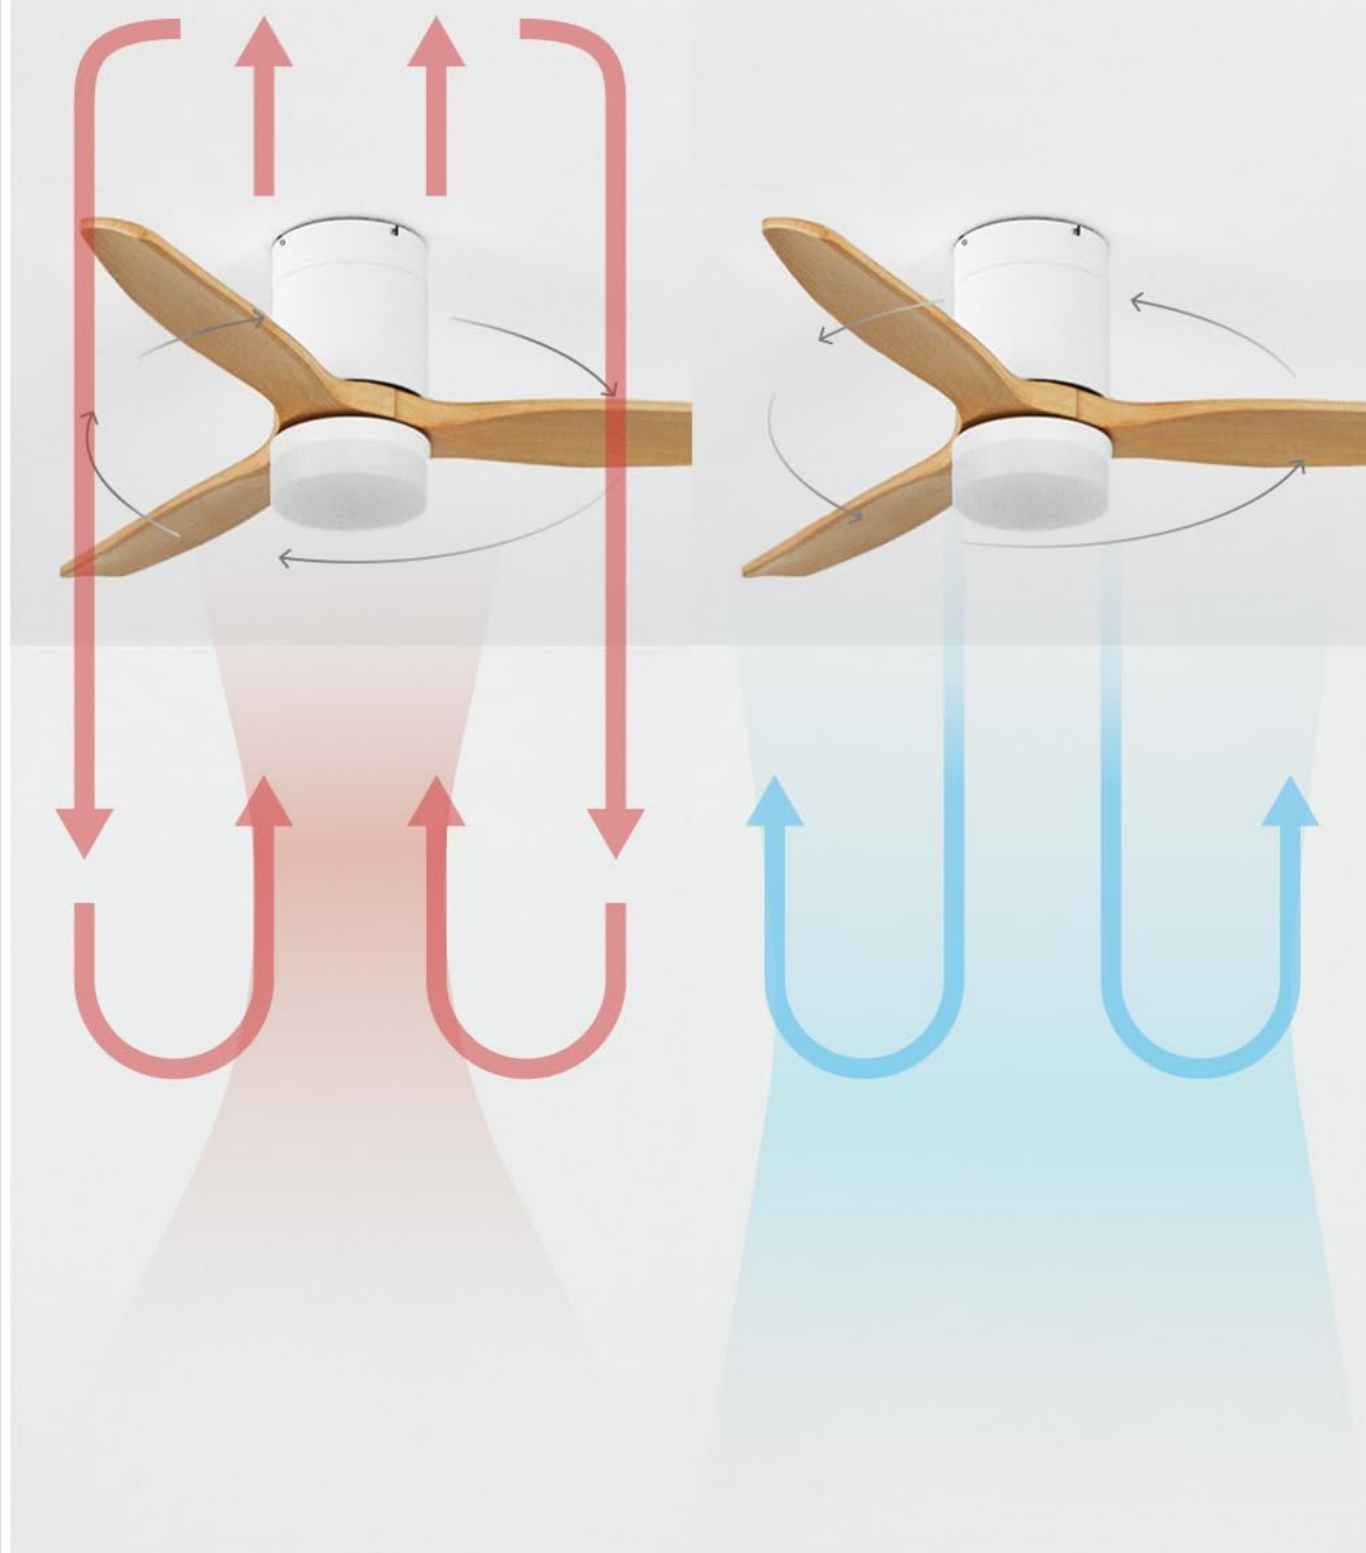 


Image: Remote control icons for timer, silent mode, and 6 speeds.

5.2 Summer/Winter Function

This fan features a reversible motor for year-round comfort:

- **Summer Mode (Counter-clockwise rotation):** The fan blades rotate counter-clockwise, pushing cool air downwards to create a refreshing breeze.
- **Winter Mode (Clockwise rotation):** The fan blades rotate clockwise, drawing cool air up and pushing warm air down from the ceiling, helping to distribute heat more evenly.

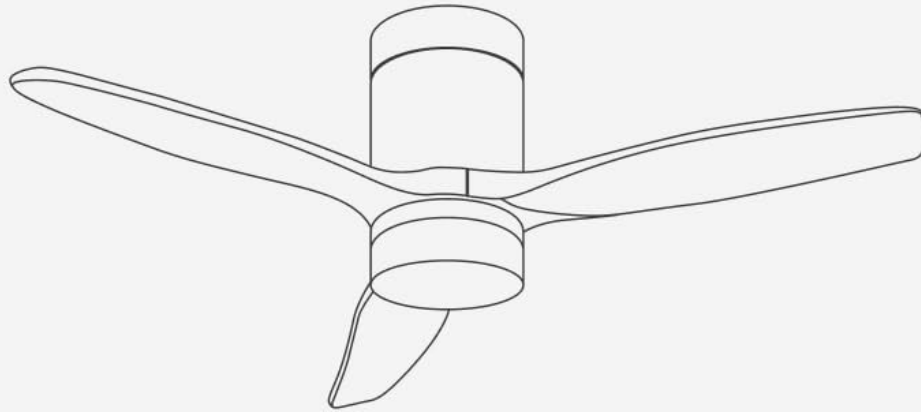 


Image: Summer and Winter mode airflow diagrams.

5.3 Light Temperature Settings

The integrated LED light offers three color temperature options:

- **Warm White (2700K):** Creates a cozy and inviting atmosphere.
- **Neutral White (3300K):** Provides a balanced and natural light.
- **Cool White (4000K):** Offers bright, crisp illumination suitable for tasks.

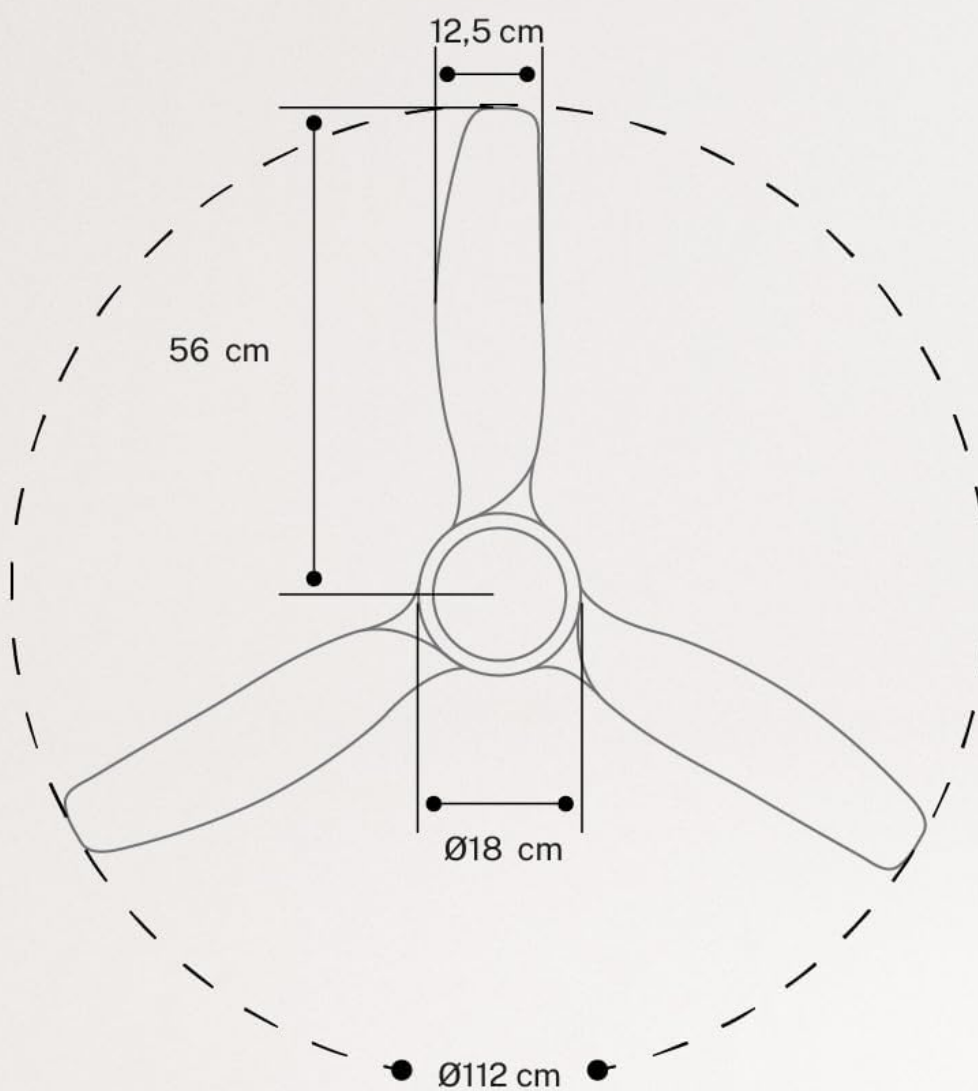 
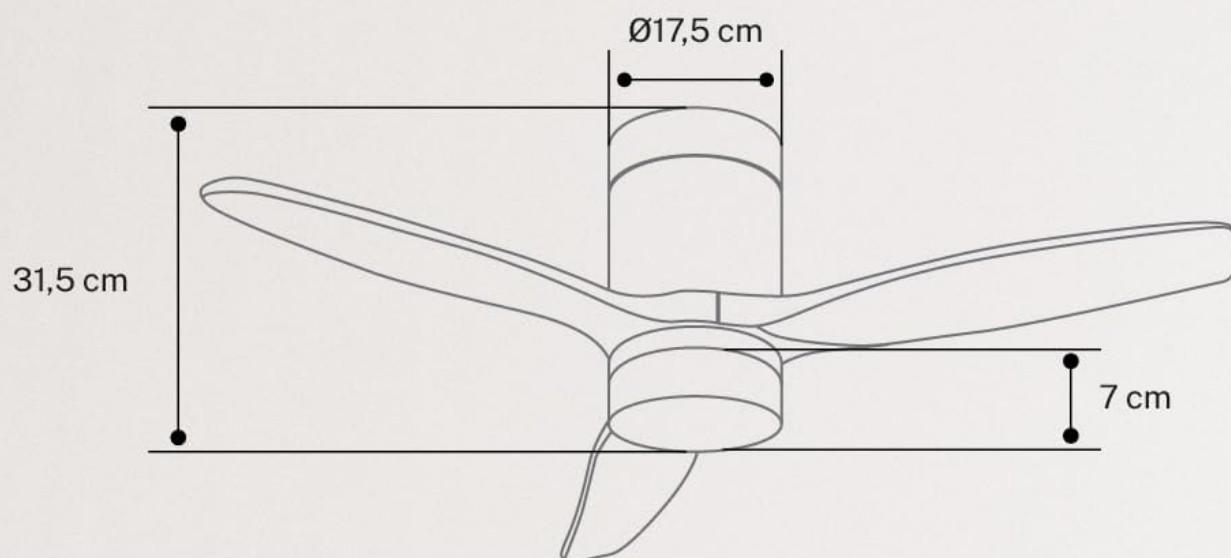 


Image: Three light temperature options.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing periodically with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Check the blades for any signs of damage or warping. Replace damaged blades immediately.
- **Tighten Screws:** Periodically check and tighten all screws on the mounting bracket and blade attachments to prevent wobbling and noise.
- **Light Source:** The LED light source is integrated and not user-replaceable. Contact customer support if the light fails.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote control battery low.	Check circuit breaker; Verify wiring connections; Replace remote control batteries.
Fan wobbles	Loose blades or mounting bracket; Unbalanced blades.	Tighten all screws; Ensure blades are securely attached; Check for blade balance (balancing kit may be required).
Light does not work	Loose wiring; LED failure.	Check light kit wiring; Contact customer support for LED issues.
Excessive noise	Loose screws; Motor issue; Blades hitting an obstruction.	Tighten all screws; Ensure no obstructions; If motor noise persists, contact support.

8. SPECIFICATIONS

Feature	Specification
Brand	CREATE
Model Name	WINDCALM S
Model Number	82468_513764
Color	White - Light Wood Effect
Fan Design	Ceiling Fan
Power Source	Electric Corded
Style	With Light
Dimensions (D x W x H)	112f. x 112an. x 31al. centimeters (112cm diameter)
Special Function	Wi-Fi Enabled (if applicable to variant), LED light with 3 color temperatures

Feature	Specification
Mounting Type	Ceiling Mount
Controller Type	Remote Control
Number of Speeds	6
Noise Level	50 Decibels
Power	40 Watts
Number of Blades	3
Airflow Capacity	180 Cubic Meters per Minute
Voltage	240 Volts
Indoor/Outdoor Use	Indoor (and Outdoor as per feature bullets)
Efficiency	F
Wireless	No (unless Wi-Fi variant)
Motor Type	DC
Blade Material	Plastic
Blade Length	56 Centimeters
Included Components	Remote Control



Image: Dimensional drawing of the fan.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official CREATE website. If you require technical assistance or have questions not covered in this manual, please contact CREATE customer support.

CREATE Customer Support: [Visit the CREATE Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question