

Manuals.plus /

› Uuoeebb /

› Uuoeebb Foldable Toddler Kitchen Tower Step Stool Instruction Manual

## Uuoeebb Stools-001

# Uuoeebb Foldable Toddler Kitchen Tower Step Stool

Model: Stools-001

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective use of your Uuoeebb Foldable Toddler Kitchen Tower Step Stool. Designed to promote independence and engagement for children aged 1-6 years, this versatile stool allows toddlers to safely participate in kitchen activities and other elevated tasks. Please read this manual thoroughly before initial use and retain it for future reference.

## 2. SAFETY INFORMATION

---

Your child's safety is paramount. Adhere to the following guidelines:

- Always ensure adult supervision when the child is using the kitchen tower.
- Ensure the kitchen tower is placed on a flat, stable, and non-slip surface.
- Verify that all connections are secure and the stool is stable before each use.
- The kitchen tower is equipped with safety railings to protect children from falling. Ensure these are properly engaged.
- Do not exceed the maximum weight limit of 200 pounds (approximately 90 kg).
- Prevent children from climbing on the outside of the tower or engaging in rough play while on the tower.
- Keep the tower away from heat sources, open flames, and electrical appliances.
- Regularly inspect the tower for any signs of wear, damage, or loose parts. Discontinue use if any damage is found.

## 3. PRODUCT OVERVIEW

---

The Uuoeebb Foldable Toddler Kitchen Tower is a versatile and sturdy wooden step stool designed to bring young children to counter height safely. It features a durable construction, multiple height adjustments, and a unique magnetic whiteboard for creative play.




Figure 3.1: Overview of the Uuoeebb Foldable Toddler Kitchen Tower.

## 4. FEATURES


- **Foldable Design:** The tower can be easily folded for convenient storage and portability, saving space when not in use.
- **Adjustable Height:** Features 3 adjustable height levels to accommodate children as they grow, ensuring a perfect fit for various counter heights. Adjustment is tool-free using plum blossom screws.
- **Magnetic Whiteboard:** Includes a magnetic whiteboard that can be used as a standing easel, promoting creativity and learning. It is dust-free and easy to wipe clean.
- **Sturdy and Safe Construction:** Made from high-quality wood and alloy steel, providing a stable and secure platform. Equipped with safety railings and stable side support feet to prevent tipping.
- **Easy to Clean:** The smooth surface is designed for easy wiping and cleaning.

## Premium Wood & Easy to Store

 
Smooth Touch  
Without Burrs

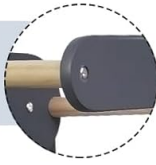

3 Height  
Adjustment

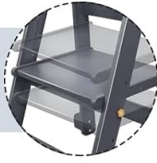 

Stable Side  
Support Feet

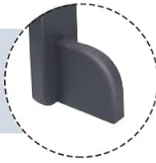 

Save Storage Space



Easy to Fold



Figure 4.1: Key features of the kitchen tower, including height adjustment and stability.

## 5. SETUP AND ASSEMBLY

The Uuoeebb Foldable Toddler Kitchen Tower requires minimal assembly. It is designed for quick setup and can be ready for use within minutes of unboxing.

1. Carefully remove all components from the packaging.
2. Unfold the main structure of the kitchen tower. Ensure the side support feet are fully extended and locked into place for maximum stability.
3. Verify that the safety railings are securely positioned.
4. The magnetic whiteboard can be attached or detached as needed. When the tower is folded, the whiteboard can be hung on the side to prevent clutter.



Figure 5.1: The kitchen tower's foldable design for easy storage.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Adjusting Height

The kitchen tower offers 3 adjustable height settings to grow with your child. To adjust the height:

1. Locate the plum blossom screws on the side of the tower that secure the foot pedal.
2. Unscrew these by hand (no tools required).
3. Carefully slide the foot pedal to the desired height level (1-level, 2-level, or 3-level).
4. Re-insert and tighten the plum blossom screws firmly to secure the foot pedal in its new position. Ensure both sides are at the same height and securely fastened.



Age:1-6 Years

# Foldable Toddler Tower



Figure 6.1: Height adjustment points and overall dimensions.

## 6.2 Using the Magnetic Whiteboard

The integrated magnetic whiteboard provides an additional activity for your child. It can be used for drawing with dry-erase markers or for magnetic letters/numbers.

- Ensure the whiteboard is securely attached to the tower when in use.
- Use only dry-erase markers and soft cloths for cleaning the whiteboard surface.
- When the tower is folded for storage, the whiteboard can be hung on the side to keep it organized.

## Whiteboard with Magnetic Suction Function

Safe & Environmentally Friendly



Figure 6.2: Child engaging with the magnetic whiteboard feature.

### 6.3 Folding and Unfolding

To fold the kitchen tower for storage:

1. Ensure no child is on or near the tower.
2. Carefully disengage any locking mechanisms (if present) that keep the tower in its open position.
3. Gently push the sides inward until the tower folds flat.
4. Store in a safe, upright position, or slide under furniture as shown in product images.

To unfold, reverse the steps, ensuring all parts click securely into place before use.

## 7. MAINTENANCE

Regular maintenance will ensure the longevity and safety of your Uuoeebb Kitchen Tower.

- **Cleaning:** Wipe down the wooden surfaces with a damp cloth and mild soap if necessary. Avoid abrasive cleaners or harsh chemicals. Dry immediately after cleaning.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight. Re-tighten if any looseness is detected.

- **Storage:** When not in use, store the folded tower in a dry place away from direct sunlight and extreme temperatures to prevent warping or damage to the wood.
- **Whiteboard Care:** Use only dry-erase markers. Clean the whiteboard regularly with a dry-erase board cleaner or a damp cloth to prevent ghosting.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tower feels wobbly or unstable.	Loose connections or not fully unfolded.	Ensure all plum blossom screws are tightened. Verify the tower is fully unfolded and the side support feet are extended and locked. Place on a flat, even surface.
Difficulty adjusting height.	Screws are too tight or mechanism is stiff.	Ensure plum blossom screws are fully loosened before attempting to slide the foot pedal. Apply a small amount of food-grade lubricant if the mechanism is stiff.
Whiteboard marks not erasing completely.	Using permanent markers or improper cleaning.	Only use dry-erase markers. Clean with a dedicated dry-erase board cleaner or a damp cloth immediately after use. Avoid leaving marks on the board for extended periods.

## 9. SPECIFICATIONS

<b>Brand</b>	Uuoeebb
<b>Model Name</b>	Stools-001
<b>Product Dimensions (D x W x H)</b>	19.4"D x 18.3"W x 35.57"H
<b>Material</b>	Alloy Steel, Wood
<b>Color</b>	Gray
<b>Age Range (Description)</b>	Toddler, Child (1-6 Years)
<b>Maximum Height</b>	35.6 Inches
<b>Weight Limit</b>	200 Pounds
<b>Number of Steps</b>	2
<b>Item Weight</b>	18.74 pounds
<b>Assembly Required</b>	No
<b>UPC</b>	717504188928
<b>ASIN</b>	B0F4DKY3QJ

## 10. WARRANTY AND SUPPORT

Specific warranty information for the Uuoeebb Foldable Toddler Kitchen Tower Step Stool is not provided in this manual. For details regarding warranty coverage, returns, or additional product support, please refer to the

purchase documentation or contact the seller directly through the platform where the product was purchased.  
You may also visit the official Uooeebb store on Amazon for more information:[Uooeebb Store](#)