

Wipro CPC201

Wipro Elato CPC201 Digital Electric Pressure Cooker Instruction Manual

Model: CPC201 | 6-Litre | 1000 Watts

1. INTRODUCTION

Thank you for purchasing the Wipro Elato CPC201 Digital Electric Pressure Cooker. This appliance is designed to provide efficient and versatile cooking with its advanced features and safety mechanisms. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury, or damage. This appliance cooks under pressure. Improper use may result in scalding injury.

- Read all instructions carefully.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when the pressure cooker is used near children.
- Do not place the pressure cooker in a heated oven.
- Exercise extreme caution when moving a pressure cooker containing hot liquids.
- Do not use the pressure cooker for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Ensure unit is properly closed before operating.
- Never force open the pressure cooker. Ensure internal pressure is completely released before opening.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release valve and float valve for clogging before use.
- Do not use this pressure cooker for pressure frying with oil.
- Ensure the lid is correctly positioned and locked before starting any pressure cooking program.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

Safety First Design: Equipped with multiple safety mechanisms including pressure and temperature control,

lid lock, and overheat protection.

3. PRODUCT OVERVIEW

The Wipro Elato CPC201 Digital Electric Pressure Cooker features a robust design with a user-friendly digital control panel.

Components Included:

- Wipro Elato CPC201 Digital Electric Pressure Cooker Unit
- Stainless Steel Inner Pot (6-Litre Capacity)
- Lid with Safety Lock Mechanism
- Measuring Cup
- Spatula
- Power Cord

Control Panel Overview:

The digital control panel provides access to various cooking functions and settings.



Image: Close-up of the control panel showing buttons for SAUTE, SOUP, CHICKEN, MEAT, PRESET, MANUAL, FISH, CAKE, STEAMER, DAL/LENTIL, SLOW COOKER, VEGETABLE, RICE, PONGAL/KHICHDI, WATERLESS BAKE, KEEP PRESSURE, FUNCTION, KEEP WARM/CANCEL, and +/- buttons.

- **Digital Display:** Shows cooking time, pressure level, and status.
- **Pre-set Function Buttons:** Dedicated buttons for common dishes like Rice, Soup, Meat, Chicken, Dal/Lentil, etc.
- **Manual Button:** Allows for custom time and pressure settings.
- **+/- Buttons:** Adjust cooking time or other parameters.
- **Keep Warm/Cancel Button:** Initiates or cancels the Keep Warm function, or stops a cooking program.
- **Function Button:** Used to select specific functions or adjust settings within a program.

4. SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials and accessories from the box.
2. Inspect the pressure cooker for any damage. Do not use if damaged.
3. Ensure all components listed in the "Product Overview" section are present.

Cleaning Before First Use:

1. Wash the stainless steel inner pot, lid, measuring cup, and spatula with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the cooker base with a damp cloth. Do not immerse the base in water.
3. Ensure the sealing gasket is properly seated inside the lid.

Initial Setup:

1. Place the cooker on a stable, level, heat-resistant surface away from heat sources and water.
2. Insert the inner pot into the cooker base.
3. Connect the power cord to the cooker and then to a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The Wipro Elato CPC201 offers 10 pre-set multi-cooking process functions and advanced microprocessor control for precise cooking.

General Cooking Steps:

1. **Prepare Ingredients:** Add food and liquid to the inner pot. Ensure liquid level is above the minimum fill line and below the maximum fill line (2/3 full for most foods, 1/2 full for expanding foods).
2. **Close Lid:** Place the lid on the cooker and turn it clockwise until it locks into place. Ensure the pressure release valve is in the "Sealing" position.
3. **Select Cooking Program:**
 - **Pre-set Programs:** Press the desired pre-set button (e.g., RICE, SOUP, MEAT). The cooker will automatically set the optimal cooking time and pressure.
 - **Manual Cooking:** Press the "MANUAL" button. Use the "+/-" buttons to adjust the cooking time.
 - **Dual Pressure Settings:** The cooker offers high and low pressure options for fast or delicate cooking. Use the "FUNCTION" button to cycle through pressure settings if available for the selected program.
4. **Start Cooking:** The cooker will automatically begin the preheating process. Once pressure is reached, the cooking timer will start counting down.
5. **Pressure Release:** After cooking is complete, the cooker will beep. You can choose between:
 - **Natural Release:** Allow the pressure to release naturally. This is recommended for foods that expand or have high liquid content.
 - **Quick Release:** Carefully turn the pressure release valve to the "Venting" position. Use a utensil to avoid direct contact with steam. Do not use quick release for foamy or thick liquids.
6. **Open Lid:** Once the float valve drops, indicating all pressure is released, turn the lid counter-clockwise and open it away from your face.

Specific Functions:

- **SAUTE:** Use this function to brown meats or sauté vegetables before pressure cooking.
- **KEEP WARM Function:** Automatically switches to 'Keep Warm' mode after cooking to maintain the ideal serving temperature for up to 24 hours. Press "KEEP WARM/CANCEL" to activate or deactivate manually.
- **Convenient Scheduling:** Start cooking up to 24 hours later for easy meal planning. Refer to the specific section in the full manual for detailed delay start instructions.



Image: The Wipro Elato CPC201 Digital Electric Pressure Cooker on a kitchen counter with a bowl of rice, highlighting its advanced cooking programs.



Master Your Kitchen

Explore a world of culinary possibilities with versatile cooking options like braising, pressure cooking, stewing, steaming, simmering, slow cooking, sautéing, fermenting, and making yogurt.

Precision Cooking Made Easy

Enjoy effortless cooking with advanced microprocessor control and over 10 pre-set cooking programs. Simply select a function and let the cooker do the rest.



Image: A close-up view of the pressure cooker's control panel, emphasizing the "FUNCTION" button used for selecting dual pressure

settings.

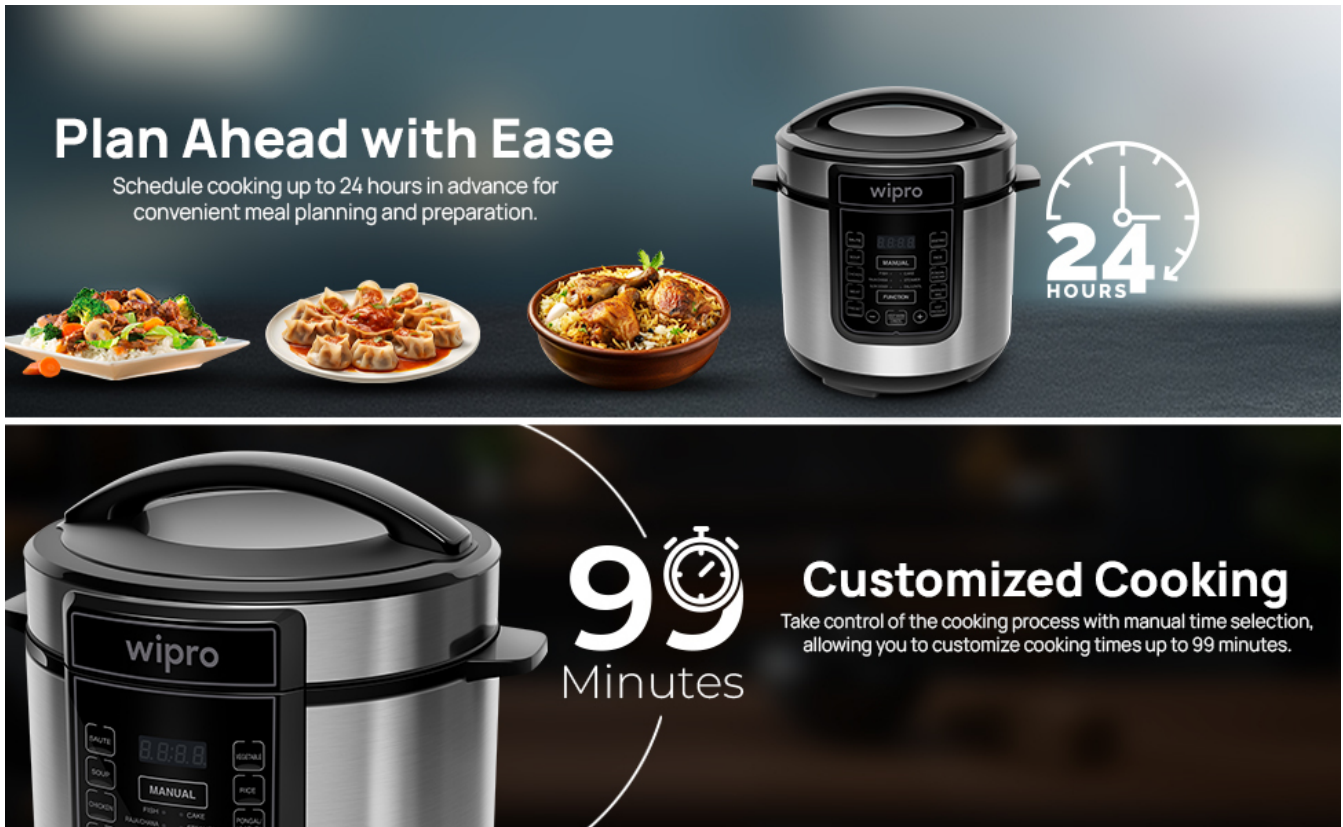


Image: The Wipro Elato CPC201 Digital Electric Pressure Cooker next to a clock icon displaying "24 HOURS", illustrating its convenient scheduling feature.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and safe operation of your Wipro Elato CPC201 Digital Electric Pressure Cooker.

Daily Cleaning:

1. **Unplug:** Always unplug the cooker and allow it to cool completely before cleaning.
2. **Inner Pot:** The stainless steel inner pot is non-stick and detachable for effortless cleaning. Wash with warm, soapy water and a soft sponge. Rinse thoroughly and dry.
3. **Lid:** Wash the lid with warm, soapy water. Pay attention to the sealing gasket, float valve, and pressure release valve. Ensure no food particles are lodged. Rinse and dry.
4. **Cooker Base:** Wipe the exterior of the cooker base with a damp cloth. Never immerse the base in water or any other liquid.

Periodic Maintenance:

- **Sealing Gasket:** Check the sealing gasket regularly for cracks, deformation, or damage. Replace if necessary to ensure proper pressure sealing.
- **Valves:** Ensure the pressure release valve and float valve are clear of any food debris and move freely.

Keep Food Warm

Enjoy warm meals anytime with the auto keep-warm function that maintains food temperature for up to 24 hours.



Easy to Clean

The dishwasher-safe stainless steel inner pot and lid make cleanup a breeze.



Image: A person cleaning the stainless steel inner pot of the Wipro Elato CPC201 Digital Electric Pressure Cooker, highlighting its easy maintenance and dishwasher-safe components.

7. TROUBLESHOOTING

If you encounter issues with your Wipro Elato CPC201 Digital Electric Pressure Cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker not building pressure.	Lid not properly closed or sealed. Pressure release valve in "Venting" position. Sealing gasket damaged or misplaced. Insufficient liquid.	Ensure lid is locked. Turn pressure release valve to "Sealing". Check and reposition/replace gasket. Add minimum required liquid.
Steam leaking from lid.	Sealing gasket not properly seated or damaged. Food debris on rim.	Check and clean/reposition gasket. Clean lid and inner pot rim.
Food undercooked.	Insufficient cooking time. Not enough liquid.	Increase cooking time. Ensure adequate liquid for pressure build-up.
Error code displayed.	Specific error condition (e.g., overheating, sensor issue).	Refer to the full manual for specific error code meanings. Unplug, wait 5 minutes, then plug back in. If persistent, contact customer support.

For issues not listed here, please contact Wipro customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	CPC201 (Item model number: EE201100)
Capacity	6 Litres
Wattage	1000 Watts
Voltage	230 Volts
Material	Stainless Steel (Inner Pot)
Color	Silver
Product Dimensions	31.2D x 29.8W x 36.8H Centimeters
Item Weight	5.5 kg (5500 Grams)
Operation Mode	Automatic
Special Features	Keep Warm Setting, Locking Lid, Programmable, Advanced Microprocessor Control, 10 Pre-set Functions
Dishwasher Safe	Inner pot and lid are dishwasher safe. The main unit is not.
Country of Origin	China

9. WARRANTY AND SUPPORT

The Wipro Elato CPC201 Digital Electric Pressure Cooker comes with a 2-year warranty provided by Wipro. For warranty registration, please scan the QR code below or visit the official Wipro warranty registration page:

[Register Your Product for Warranty Here](#)



Image: QR code for Wipro product warranty registration. Scan this code to register your product.

For technical support, service, or any inquiries, please contact Wipro customer service through their official channels.

10. PRODUCT VIDEO OVERVIEW

Watch this video for a quick overview of the Wipro Elato CPC201 Digital Electric Pressure Cooker's features and benefits.

Your browser does not support the video tag.

Video: An official product video showcasing the Wipro Elato CPC201 Digital Electric Pressure Cooker, highlighting its powerful performance, multi-functional cooking modes, smart digital control panel, and safety features.

