

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gaiatop](#) /
- › [Gaiatop Portable Handheld Mini Fan User Manual](#)

Gaiatop HF-18

Gaiatop Portable Handheld Mini Fan User Manual

Model: HF-18

1. PRODUCT OVERVIEW

The Gaiatop Portable Handheld Mini Fan is a compact and powerful personal cooling device designed for convenience and efficiency. Featuring a high-speed brushless motor and 6 adjustable gears, it delivers strong airflow to quickly cool you down. Its sleek design, LED display, and USB rechargeable battery make it an ideal companion for various activities, from daily commuting to outdoor adventures.



Figure 1: Gaiatop Portable Handheld Mini Fan. This image shows the compact pink fan held in a hand, highlighting its small size and ergonomic design.

Palm-Sized Elegance, Lightweight Yet Strong

Size: 1.39*1.7*3.5in / Weight: 107g/3.7ounces

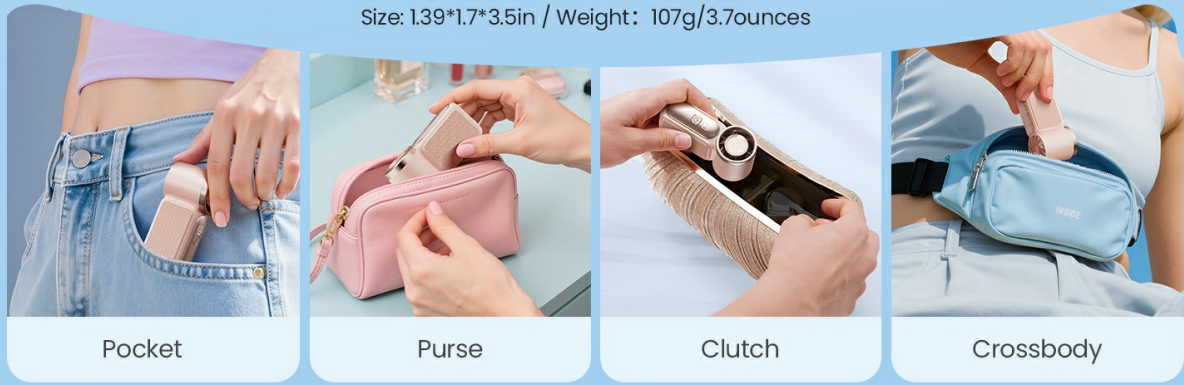


Figure 2: Palm-Sized Elegance. This image illustrates the fan's small dimensions (1.39"D x 1.7"W x 3.5"H) and light weight (107g/3.7 ounces), demonstrating how easily it fits into a pocket, purse, clutch, or crossbody bag.

2. WHAT'S INCLUDED

Your Gaiatop Portable Handheld Mini Fan package includes the following items:

- 1 x Gaiatop Handheld Fan
- 1 x USB Type-C Charging Cable
- 1 x User Manual
- 1 x Detachable Lanyard

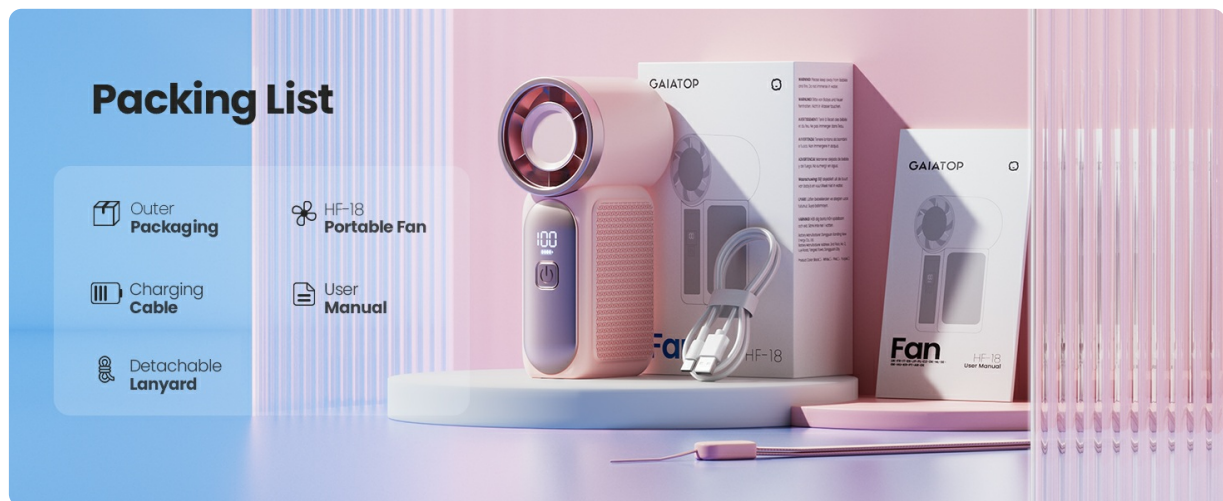


Figure 3: Packing List. This image displays the fan, charging cable, user manual, and detachable lanyard, as they would appear in the product packaging.

3. SETUP

3.1 Charging the Fan

Before first use, ensure the fan is fully charged. The fan comes with a built-in 3000mAh rechargeable battery. The LED display will show the real-time battery level.

1. Locate the USB Type-C charging port at the bottom of the fan.
2. Connect the provided USB Type-C charging cable to the fan.
3. Connect the other end of the cable to a standard USB power source (e.g., wall adapter, power bank, computer USB port).

4. The LED display will indicate charging status. A full charge typically takes approximately 4 hours.



Figure 4: Multiple Charging Methods. This image demonstrates various ways to charge the fan, including via a wall outlet, power bank, and car charger, highlighting its versatility.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To turn the fan **ON**, long-press the power button (located on the front of the fan) for 2 seconds.
- To turn the fan **OFF**, long-press the power button for 2 seconds again.

4.2 Adjusting Fan Speed

The fan features 6 adjustable speed gears. The LED display will show the current gear setting (1-100) and remaining battery level.

- Once the fan is ON, single-press the power button to cycle through the speed gears: 1-20-40-60-80-100.
- Each single press will increase the fan speed.
- The fan will operate for 2.8 to 10.7 hours depending on the selected gear.

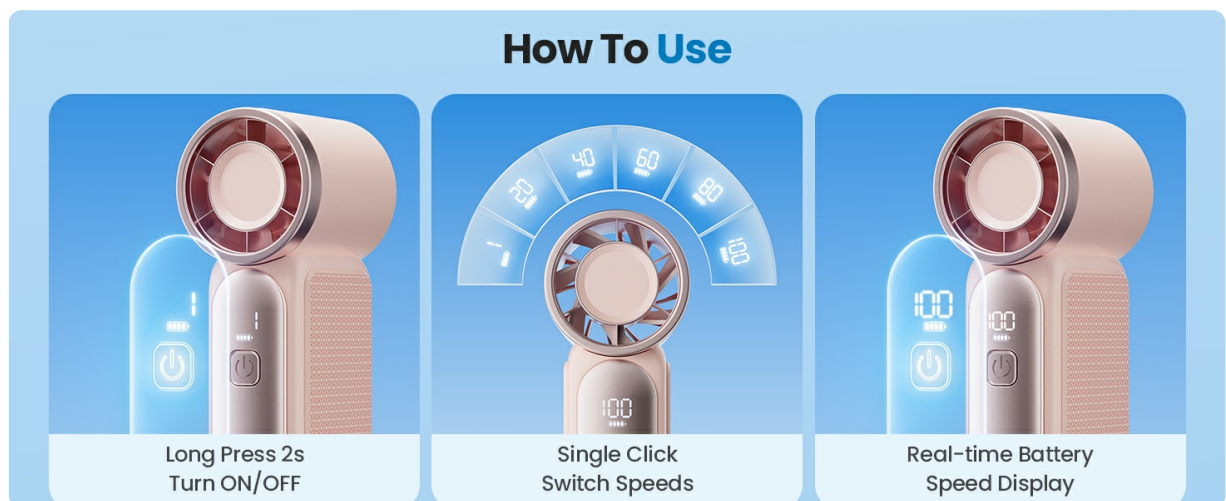 


Figure 5: How To Use. This image visually explains the fan's operation: long-press to turn ON/OFF, single-click to switch speeds, and the real-time battery and speed display.

Video 1: GAIATop Ultra Mini Handheld Turbo Fan. This video demonstrates the fan's compact size, portability, 6-gear wind adjustment, turbo airflow, and its ability to quickly cool the face and neck while keeping makeup fresh. It also shows the fan being used outdoors and while charging.

5. MAINTENANCE

5.1 Cleaning

- Ensure the fan is turned OFF and unplugged before cleaning.
- Use a soft, dry cloth to wipe the exterior of the fan.
- Do not use abrasive cleaners, solvents, or immerse the fan in water.
- Gently remove any dust or debris from the fan's air inlet and outlet using a soft brush or compressed air.

5.2 Storage

- Store the fan in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% to prolong its lifespan.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB-C cable. Check the LED display for battery level.
Weak airflow.	Fan is on a low speed setting.	Single-press the power button to cycle to a higher speed setting.
Unusual noise during operation.	Obstruction in the fan blades or normal operation at high speeds.	Turn off the fan and check for any foreign objects. High speeds may produce more audible airflow.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Gaiatop
Model Name	Mini Handheld Fan (HF-18)
Color	Pink
Product Dimensions	3.5"D x 1.7"W x 1.39"H
Item Weight	4.3 ounces (107g)
Power Source	Battery Powered
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	3000mAh
Charging Port	USB Type C
Number of Power Levels	6 (Gears 1-20-40-60-80-100)

Feature	Specification
Max Wind Speed	7.9 m/s (26 ft/s)
Max Rotation Speed	16900 RPM
Working Time	2.8 - 10.7 Hours (depending on gear)
Control Method	Push Button
Special Features	Portable, Tiny But Mighty, Lightweight, Higher Wind Speed, Rechargeable, LED Display

8. WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your Gaiatop Portable Handheld Mini Fan, please contact Gaiatop customer service. Refer to the product packaging or the official Gaiatop website for the most up-to-date contact information and warranty details.

You can also visit the official Gaiatop Store for more information and products: [Gaiatop Store](#)