

[Manuals.plus](#) /

› [Yoidesu](#) /

› Yoidesu Body Cam Yoidesusahuk9r8ie-11 User Manual

Yoidesu Yoidesusahuk9r8ie-11

Yoidesu Body Cam User Manual

Model: Yoidesusahuk9r8ie-11

INTRODUCTION

This manual provides detailed instructions for the Yoidesu Body Cam, Model Yoidesusahuk9r8ie-11. This compact and lightweight action camera is designed for daily recording, offering 2.7K video resolution, a 1.47-inch HD display, and a 180° adjustable lens. Its magnetic mounting system allows for versatile placement, making it suitable for various activities.

Thumb camera

• 180°TWISE LENS • 2.7KHIGH VIDEO • WEIGHT35g



Image: Front view of the Yoidesu Body Cam, highlighting its compact design and integrated display.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Yoidesu Body Cam
- Lanyard
- Mount (Magnetic Lanyard Pad)
- USB Cable (Type-C)
- User Manual



Image: All components included in the Yoidesu Body Cam package.

SETUP

1. Initial Use

Upon receiving your Yoidesu Body Cam, remove it from its packaging. The camera is ready for initial use after unboxing.

2. Charging the Battery

Before first use, fully charge the camera's built-in 350mAh Li-Polymer battery. Connect the provided Type-C USB cable to the camera and a power source (e.g., computer USB port or USB wall adapter). The camera can record while charging.

- **Charging Time:** Approximately 1-2 hours for a full charge.
- **Battery Life:** Up to 100 minutes in 1080P mode, 80 minutes in 2.7K mode.

3. Inserting a Memory Card

The camera requires a memory card (not included) for storing recordings. It supports a maximum of 128GB Memory Card U1.

1. Locate the memory card slot on the side of the camera.
2. Insert the memory card with the contacts facing the camera, pushing gently until it clicks into place.
3. To remove, push the card in again until it springs out.

4. Mounting the Camera

The Yoidesu Body Cam features a magnetic mounting system for versatile placement.

- **Direct Magnetic Attachment:** The camera can be directly attached to any iron surface.
- **Magnetic Lanyard Pad:** Use the included magnetic lanyard pad for chest mounting. Place the pad inside your clothing and the camera on the outside, allowing the magnets to secure it.
- **Other Positions:** The camera can also be clipped to a collar, tucked in a pocket, or fastened to your waist using its design.

Multi-scene perspectives Install anywhere

With a unique magnetic design and unlocking, it's beyond imagination's creative perspective, where you want to shoot, you can put it.



Image: Examples of the Yoidesu Body Cam mounted in different environments, showcasing its versatility.

Your browser does not support the video tag.

Video: Demonstration of the magnetic mounting system for the Yoidesu Body Cam, showing how it attaches to various surfaces and clothing.

OPERATING INSTRUCTIONS

1. Power On/Off

- **Power On:** Press and hold the Power button for a few seconds until the display screen illuminates.
- **Power Off:** Press and hold the Power button again until the display turns off.

2. Recording Video

The camera supports 2.7K (2720x1520, 15fps) and 1080P (1920x1080, 30fps) video resolutions.

- **Start Recording:** In video mode, press the Record button once to begin recording. A recording indicator (e.g., a red dot or flashing icon) will appear on the screen.
- **Stop Recording:** Press the Record button again to stop recording. The video file will be saved to the memory card.
- **Loop Recording:** The camera features loop recording options (1min, 3min, 5min). This setting can typically be adjusted in the camera's menu. When enabled, the camera will overwrite the oldest files when the memory card is full.



Image: The camera's display showing interval recording in progress, useful for capturing moments automatically.

Your browser does not support the video tag.

Video: Examples of daily records captured with the Yoidesu Body Cam, suitable for travel, cycling, and home office use.

3. Taking Photos

The camera supports image resolutions up to 12M (4032x3024).

- **Switch to Photo Mode:** Use the Mode button to switch to photo capture mode.
- **Take Photo:** Press the Shutter/Record button once to take a photo.
- **Continuous Shooting:** The camera supports continuous shooting modes (3 Shots, 5 Shots, 10 Shots), configurable in settings.

4. Using the 1.47-inch HD Display

The integrated 1.47-inch HD display allows you to frame your shots, review recordings, and navigate camera settings.

- **Live View:** Provides a real-time preview of what the camera is seeing.

- **Playback:** Access saved videos and photos for instant review.
- **Menu Navigation:** Use the physical buttons to navigate through the camera's menu options for settings adjustments.

5. Adjusting the 180° Lens Angle

The camera features a 180° manually adjustable lens. This allows you to change the viewing angle without repositioning the entire camera body.

- Gently rotate the lens barrel to achieve the desired angle.
- Use the display screen to confirm your framing.

6. Connecting to a Computer

Connect the camera to a computer using the provided Type-C USB cable to transfer files or charge the device.

- Connect one end of the USB cable to the camera's Type-C port.
- Connect the other end to a USB port on your computer.
- The camera will typically appear as a removable storage device, allowing you to access and transfer your video and photo files.

7. Using the WiFi APP

The camera supports WiFi connectivity for easy operation via a mobile application.

1. Download the official Yoidesu app from your smartphone's app store.
2. Turn on the camera's WiFi function (refer to the camera's menu settings).
3. Connect your smartphone to the camera's WiFi network.
4. Open the app to view live footage, control recording, and manage files directly from your phone.

WiFi APP easy operation

Click on the WIFI to connect to the APP to view and the mobile phone editor to create a great blockbuster in no time.



Image: Illustration of the camera's WiFi connectivity with a smartphone app for easy viewing and editing of recordings.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For long-term storage, charge the battery to about 50% every few months to maintain its health.
- **Water Resistance:** This camera is **not water resistant**. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted.	Charge the camera using the provided USB cable.
Cannot record video/take photos.	No memory card inserted or memory card is full/corrupted.	Insert a compatible memory card (max 128GB U1). Format the card if necessary (this will erase all data). Transfer files to a computer to free up space.
Poor video/image quality.	Lens is dirty; insufficient lighting; incorrect settings.	Clean the lens. Ensure adequate lighting. Check video resolution settings in the camera menu.
Camera freezes or becomes unresponsive.	Software glitch; memory card issue.	Press and hold the Power button to force a restart. If the issue persists, try removing and reinserting the memory card.
WiFi connection issues.	WiFi not enabled on camera; incorrect app settings; interference.	Ensure WiFi is enabled on the camera. Reinstall the app. Try connecting in an area with less wireless interference.

SPECIFICATIONS

Feature	Detail
Model Number	Yoidesusahuk9r8ie-11
Dimensions	Approx. 64 x 28 x 20mm / 2.52 x 1.10 x 0.79in
Battery	Built-in Li-Polymer, 350mAh
Display Screen	1.47 Inch HD Display
Video Resolution	2.7K (2720x1520, 15fps), 1080P (1920x1080, 30fps)
Image Resolution	12M (4032x3024), 10M (3648x2736), 8M (3264x2448), 5M (2592x1944), 3MP (2048x1536), 2M (1600x1200)
Camera Angle	170° Wide Angle Lens
Adjustable Lens Angle	180° (Manual)
Expandable Memory	Maximum 128GB Memory Card U1 (not included)
Loop Recording	1min, 3min, 5min
Video Format	MP4 (H.264 compression)
Image Format	JPG
Continuous Recording	3 Shots, 5 Shots, 10 Shots
Microphone	MIC-2X4MM, 42+-3dB

Feature	Detail
Speaker	8ohm, 0.5W
White Balance	Automatic
Exposure	Automatic
ISO	Automatic
Data Connection/Power Supply	Type-C USB
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Yoidesu website. Keep your proof of purchase for warranty claims.

© 2023 Yoidesu. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question