

[manuals.plus](#) /› [CNAPXAIA](#) /› [CNAPXAIA C10 Instant Print Digital Camera for Kids User Manual](#)**CNAPXAIA C10**

CNAPXAIA C10 Instant Print Digital Camera for Kids User Manual

1. INTRODUCTION

Thank you for choosing the CNAPXAIA C10 Instant Print Digital Camera for Kids. This camera is designed to provide a fun and creative experience for children, allowing them to capture photos, record videos, play games, and instantly print their memories. This manual will guide you through the setup, operation, and maintenance of your new camera.

2. PACKAGE CONTENTS

Please check the box for the following items:

- CNAPXAIA C10 Instant Print Digital Camera
- 32GB Micro SD Card
- USB Charging Cable
- Print Paper Rolls (quantity may vary)
- Coloring Pens
- Lanyard
- User Manual



Image: The CNAPXAIA C10 Instant Print Digital Camera shown with included accessories: a 32GB SD card, three rolls of print paper, a USB cable, a lanyard, and a set of coloring pens.

3. PRODUCT OVERVIEW

The CNAPXAIA C10 camera features a durable, lightweight design suitable for children. It includes a 2.4-inch LCD screen for viewing photos and videos, a front-facing lens with 16x digital zoom, and an integrated thermal printer for instant black and white prints.

Controls and Ports:

- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Takes photos or starts/stops video recording.
- **Navigation Buttons:** Up, Down, Left, Right for menu navigation and zoom control.
- **OK/Confirm Button:** Selects options in menus.
- **Menu/Back Button:** Accesses the main menu or returns to the previous screen.
- **USB-C Port:** For charging and data transfer.
- **Micro SD Card Slot:** For memory expansion.

1080P HD VIDEO RECORDING



Image: Rear view of the CNAPXAIA C10 camera, displaying its 2.4-inch screen and the array of control buttons located beneath it, including navigation and selection buttons.

4. SETUP

4.1 Charging the Battery

1. Connect the USB charging cable to the camera's USB-C port.
2. Plug the other end of the cable into a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.

Ensure the camera is fully charged before first use for optimal battery life.

4.2 Inserting the Micro SD Card

1. Locate the Micro SD card slot on the side of the camera.
2. Gently insert the provided 32GB Micro SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, push the card inward until it clicks, then release, and it will spring out.

A Micro SD card is required to save photos and videos.

4.3 Loading Print Paper

1. Open the paper compartment cover on the camera.
2. Insert a roll of thermal print paper, ensuring the paper feeds out from the top of the roll and is aligned with the printing mechanism.
3. Close the compartment cover, leaving a small portion of paper extending from the print slot.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the Power button for a few seconds to turn the camera on or off.

5.2 Taking Photos

1. Turn on the camera. It will typically start in photo mode.
2. Frame your shot using the 2.4-inch LCD screen.
3. Use the Up/Down navigation buttons to adjust the 16x digital zoom.
4. Press the Shutter button to take a photo.

5.3 Instant Printing

The camera supports ink-free thermal printing in two modes: Grayscale and Dot Matrix.

2 MODES INK FREE PRINTING CAPTURE THE MOMENT

PRINTING MODES

Grayscale Mode

Dot matrix Mode

Image: The CNAPXAIA C10 camera demonstrating its two ink-free printing modes: Grayscale Mode, which produces smooth tonal variations, and Dot Matrix Mode, which creates images using a pattern of dots.

After taking a photo, you can choose to print it directly. Navigate through the menu to select your preferred printing mode. The camera also offers various creative options for photos:

- **Filters:** Apply artistic filters to your photos.
- **Frames:** Add fun and decorative frames.
- **Stickers:** Incorporate cute digital stickers.
- **Mirror Effects:** Experiment with mirror image effects.

MULTI FUNNY FRAMES & FILTERS



Image: A visual representation of the CNAPXAIA C10 camera's creative features, including 12 photo frames, 7 filters, 6 stickers, and 8 mirror effects, designed to enhance children's photos.

Printed photos can be colored using the included pens for a personalized touch.



Image: A child happily coloring a black and white photo that was instantly printed from the CNAPXAIA C10 camera, demonstrating the DIY coloring feature.

5.4 Video Recording

The camera supports 1080p HD video recording and time-lapse functions.

1. Switch to video mode via the menu.
2. Press the Shutter button to start recording.
3. Press the Shutter button again to stop recording.

1080P HD VIDEO RECORDING



Image: The CNAPXAIA C10 camera highlighting its 1080p HD video recording capability, time-lapse options (2s, 5s, 10s), and 16x digital zoom functionality for both photos and videos.

5.5 MP3 Player

The camera includes an MP3 player function. Load MP3 files onto the Micro SD card to enjoy music.

1. Transfer MP3 files to the 'Music' folder on the Micro SD card.
2. Select the MP3 player mode from the camera's main menu.
3. Use the navigation buttons to select and play music.

5.6 Games

The camera comes with 5 built-in puzzle games for entertainment.

LEARNING & ENTERTAINMENT



Image: The CNAPXAIA C10 camera displaying its entertainment features, specifically showcasing five different puzzle games available for play on the device.

1. Select the 'Games' option from the main menu.
2. Choose a game and use the navigation buttons to play.

5.7 Transferring Files

To transfer photos and videos to a computer or other device:

1. Connect the camera to your computer using the USB cable.
2. The camera will appear as a removable disk.
3. Open the camera's folder and copy the desired files to your computer.

Alternatively, you can remove the Micro SD card and insert it into a card reader connected to your computer.

6. MAINTENANCE

6.1 Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth to avoid scratches.

- Do not use liquid cleaners or solvents.

6.2 Battery Care

- Avoid exposing the camera to extreme temperatures.
- Charge the battery regularly, even if the camera is not in use, to maintain battery health.
- If the camera will not be used for an extended period, store it with a partial charge (around 50%).

6.3 Storage

Store the camera in a cool, dry place away from direct sunlight and moisture.

7. TROUBLESHOOTING

- **Camera does not turn on:** Ensure the battery is charged. Connect the camera to a charger and try again.
- **Cannot take photos/record videos:** Check if the Micro SD card is inserted correctly and has sufficient free space.
- **Print quality is poor:** Ensure the print paper is loaded correctly and is not damaged. Replace the paper roll if necessary.
- **Camera freezes:** Press and hold the Power button for 10 seconds to force a restart.
- **Files not transferring to computer:** Ensure the USB cable is securely connected to both the camera and the computer. Try a different USB port or cable.

8. SPECIFICATIONS

Feature	Specification
Brand	CNAPXAIA
Model	C10
Color	Violet
Product Type	Compact Digital Camera with Instant Print
Screen	2.4 inches LCD
Digital Zoom	16x
Image Stabilization	Digital
Video Resolution	1080p
Photo Sensor Technology	CMOS
Maximum Webcam Image Resolution	3 Megapixels
Supported File Format	MP4 (Video)
Connectivity Technology	USB
Battery Type	Lithium Polymer (1 included)

Item Weight	200 Grams
Product Dimensions (L x W x H)	5 x 11 x 9 cm
Special Features	Durable, Portable, Lightweight, Easy to Use

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or the official CNAPXAIA website. Keep your purchase receipt as proof of purchase.

Related Documents - C10

  	<p><u>AGPTEK C10 User Manual: Features, Setup, and Troubleshooting Guide</u></p> <p>Comprehensive user manual for the AGPTEK C10 portable music player. Explore features, setup, file transfer, music, FM radio, Bluetooth, pictures, video, e-books, tools, settings, battery, charging, and troubleshooting.</p>
 AGPTEK	<p><u>AGPTEK C10 Digital Audio Player User Manual</u></p> <p>User manual for the AGPTEK C10 Digital Audio Player, detailing its features, operation, specifications, and support information.</p>
 CRANACH INSTALLATION MANUAL Multi-Function Thermostatic Valve and Trim <small>CR6731A_0000HQ0</small>	<p><u>CRANACH Shower System Installation Manuals & Guides</u></p> <p>Comprehensive installation manuals and guides for CRANACH bath and kitchen shower systems, including thermostatic valves, shower arms, rain shower heads, shower holders, hand showers, and hoses. Features safety notes, technical specifications, and warranty information.</p>
 CRANACH INSTALLATION MANUAL Multi-Function Thermostatic Valve and Trim <small>CR67112</small>	<p><u>CRANACH Bath & Kitchen Installation Manuals for Shower Systems</u></p> <p>Comprehensive installation guides from CRANACH for various bathroom fixtures including thermostatic valves, shower arms, shower heads, shower holders, hand showers, and shower hoses. Includes safety, warranty, and technical information.</p>

 <p>CRANACH INSTALLATION MANUAL Pressure Balance Valve and Sets CRANACH_00000004</p>	<p><u>CRANACH Installation Manuals for Shower Valves, Arms, and Heads</u></p> <p>This comprehensive CRANACH installation manual provides detailed instructions for pressure balance valves, shower arms, and rain shower heads. Includes safety guidelines, installation considerations, technical information, parts lists, and warranty details for CRANACH bathroom fixtures.</p>
 <p>CRANACH INSTALLATION MANUAL Rain Shower Head CRANACH_00000005</p>	<p><u>CRANACH Shower Installation Manuals: Rain Shower Heads, Hand Showers, Shower Sets, Arms & Hoses</u></p> <p>Comprehensive installation guides and warranty information for CRANACH bathroom fixtures, including rain shower heads, hand showers, pressure balance shower sets, shower arms, and shower hoses. Find model numbers, safety notes, and installation steps.</p>