

EagleStone ES88

EagleStone 2-in-1 Kids Play Tent Instruction Manual

Model: ES88

INTRODUCTION

Thank you for choosing the EagleStone 2-in-1 Kids Play Tent. This manual provides essential information for the safe assembly, operation, and maintenance of your play tent. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

- Adult supervision is recommended at all times when children are using the tent.
- Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- Ensure all poles are securely connected during assembly to prevent collapse.
- Do not allow children to hang on the tent frame or fabric.
- Regularly inspect the tent for any damage or wear. Discontinue use if any part is broken or compromised.
- This product is suitable for children aged 3 years and up.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Tent Fabric
- Padded Mat
- Fairy Lights (battery operated, batteries not included)
- Colorful Bunting Flags
- PVC Poles (various lengths)
- Connectors

Strong PVC Frame for Lasting Stability

Simple Structure, Fast & Easy to Set Up



High-strength PVC tubes



**Simple Structure
Rock-Solid Stability**



**Tool-free assembly
in minutes**

Image Description: Close-up views of the high-strength PVC tubes and simple structure connectors, emphasizing the tent's durable and easy-to-assemble frame.

SETUP AND ASSEMBLY

The EagleStone 2-in-1 Kids Play Tent features a tool-free assembly process. Follow these steps for quick and easy setup:

1. **Unpack Components:** Carefully remove all items from the packaging and lay them out on a clean, flat surface.
2. **Assemble the Base Frame:** Connect the longest PVC poles using the appropriate connectors to form the rectangular base of the tent. Ensure all connections are firm.
3. **Install Vertical Poles:** Insert the vertical PVC poles into the corner connectors of the base frame.
4. **Construct the Roof Frame:** Connect the remaining poles and connectors to form the roof structure. This typically involves creating a triangular shape for the peak.
5. **Attach Tent Fabric:** Drape the tent fabric over the assembled frame. Ensure the fabric is aligned correctly, with

doors and windows in their intended positions. Secure the fabric to the frame using any integrated ties or loops.

6. **Insert Padded Mat:** Place the padded mat inside the tent for comfort.

7. **Add Decorative Elements:** String the fairy lights around the tent frame or roof as desired. Attach the colorful bunting flags. (Note: Batteries for fairy lights are not included and must be installed separately.)



Image Description: This image illustrates the dual-door design of the tent, showing children entering and exiting from both sides, highlighting the freedom of movement and imaginative play possibilities.



Image Description: A fully assembled EagleStone kids play tent, illuminated with fairy lights, featuring a padded mat and decorative elements, ready for play.

OPERATING INSTRUCTIONS

The EagleStone Play Tent is designed for versatile use, offering a comfortable and engaging space for children.

Using the Tent

- **Play Area:** The spacious interior accommodates 3-4 children, providing ample room for imaginative play, reading, or quiet activities.
- **Dual Doors:** The tent features two doors, allowing for easy entry and exit from multiple sides, enhancing play scenarios.
- **Ventilation:** Four mesh windows ensure good airflow and allow parents to easily observe children inside. The lace curtains can be rolled up and secured for open play or lowered for privacy.
- **Storage Pockets:** Utilize the two large inner storage pockets to keep toys, books, and other small items organized.

and within reach.

- **Fairy Lights:** Turn on the battery-operated fairy lights to create a cozy and magical ambiance.



Image Description: An adult reads a book to two children comfortably seated inside the tent, demonstrating the spacious interior suitable for multiple occupants and quiet activities.

Cozy Tent Set, All Accessories Included



Image Description: The tent is shown accommodating a toddler bed, illustrating its versatility for both play and rest, creating a cozy sleeping space.

4 Breathable Windows

Air Flows from All Sides Easy to Peek In & Out



Image Description: A child is shown playing near one of the tent's mesh windows, with an inset showing a large inner storage pocket filled with toys, highlighting ventilation and organization features.

MAINTENANCE

Proper care will extend the life of your EagleStone Play Tent.

- **Cleaning the Fabric:** The tent fabric is machine washable. Use a gentle cycle with cold water and mild detergent. Air dry only; do not tumble dry.
- **Cleaning the Mat:** The padded mat can be spot cleaned with a damp cloth and mild soap. For deeper cleaning, follow the care instructions on the mat's label.
- **Frame Care:** Wipe PVC poles and connectors with a damp cloth as needed. Ensure they are completely dry before storage.
- **Fairy Lights:** Handle the fairy lights gently. If they become dirty, wipe them with a dry cloth. Replace batteries as needed.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place away from direct

sunlight.

TROUBLESHOOTING

- Tent Stability Issues:** Ensure all PVC poles are fully inserted into their connectors. Check that the frame is assembled on a flat, even surface.
- Fairy Lights Not Working:** Verify that batteries are correctly installed and are not depleted. Check for any loose connections in the battery compartment.
- Difficulty with Fabric Fit:** If the fabric seems too tight or loose, double-check that the frame is assembled according to the instructions and that the correct poles are used in each section.

SPECIFICATIONS

Product Dimensions (Assembled)	53" (L) x 40" (W) x 51" (H)
Item Weight	7.35 pounds
Model Number	ES88
Recommended Age	3 years and up
Material	Polyester fabric, Reinforced PVC poles

Spacious Space 51"(L)40"(W)53"(H)



Image Description: A visual representation of the tent's dimensions: 53 inches (height), 51 inches (length), and 40 inches (width), indicating its spacious interior.

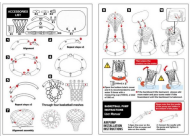 
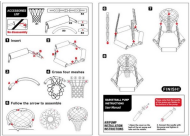 

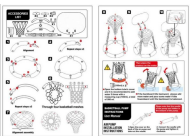 
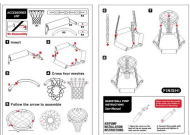 

WARRANTY INFORMATION

EagleStone products are manufactured to high-quality standards. For specific warranty details and terms, please refer to the product packaging or contact EagleStone customer support directly. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your EagleStone 2-in-1 Kids Play Tent, please contact our customer support team. Contact information can typically be found on the product packaging or the official EagleStone website.

Related Documents - ES88

	<p>EagleStone Pool Basketball Hoop: Assembly and User Manual</p> <p>Detailed instructions for assembling and using the EagleStone Pool Basketball Hoop, including accessory list, step-by-step assembly guide, and air pump installation. Suitable for kids and adults.</p>
	<p>EagleStone Pool Basketball Hoop Installation Guide</p> <p>Step-by-step instructions for assembling the EagleStone Pool Basketball Hoop and installing the air pump. Includes accessories list and assembly diagrams.</p>
	<p>EagleStone Dinosaur Shooting Toy Assembly Instructions</p> <p>Comprehensive assembly and operation guide for the EagleStone Dinosaur Shooting Toy, detailing package contents, battery installation, gun assembly, shooting mechanics, and product modes.</p>
	<p>EagleStone Pool Basketball Hoop: Assembly and User Manual</p> <p>Detailed instructions for assembling and using the EagleStone Pool Basketball Hoop, including accessory list, step-by-step assembly guide, and air pump installation. Suitable for kids and adults.</p>
	<p>EagleStone Pool Basketball Hoop Installation Guide</p> <p>Step-by-step instructions for assembling the EagleStone Pool Basketball Hoop and installing the air pump. Includes accessories list and assembly diagrams.</p>
	<p>EagleStone Dinosaur Shooting Toy Assembly Instructions</p> <p>Comprehensive assembly and operation guide for the EagleStone Dinosaur Shooting Toy, detailing package contents, battery installation, gun assembly, shooting mechanics, and product modes.</p>