

[Manuals.plus](#) /

› [Beelicious Pro](#) /

› Beelicious Pro 5.8QT Digital Air Fryer (Model BAF-808) Instruction Manual

Beelicious Pro BAF-808

Beelicious Pro 5.8QT Digital Air Fryer (Model BAF-808) Instruction Manual

Your guide to safe and efficient operation of your new air fryer.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the air fryer basket is properly inserted before operation.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

PRODUCT OVERVIEW

The Beelicious Pro 5.8QT Digital Air Fryer (Model BAF-808) is designed for efficient and healthy cooking. It features a 5.8-quart capacity, suitable for 3-5 people, and offers 12+ one-touch cooking functions. The integrated clear viewing window allows monitoring of food without opening the basket, preserving heat and cooking consistency. Advanced Flavor-Lock Technology ensures even cooking and tender results with up to 85% less oil.

Air Fryer Made Easy with One Touch

12+ in 1 Cooking Function

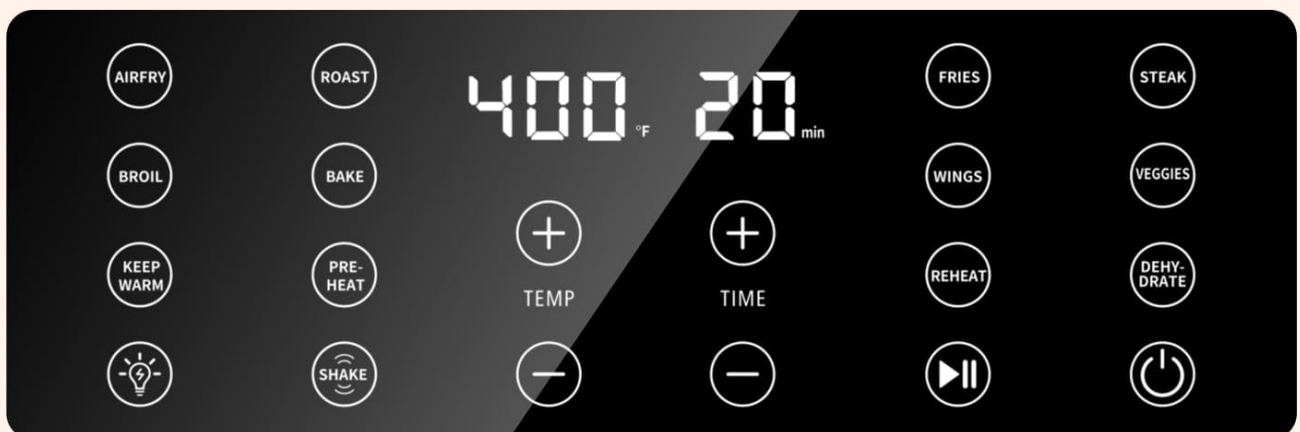 


Image: The Beelicious Pro 5.8QT Digital Air Fryer, showcasing its sleek white design and digital control panel.

Key Features:

- **5.8-Quart Capacity:** Ideal for family meals, capable of cooking a 3-lb chicken or 14 chicken wings.
- **12+ One-Touch Cooking Functions:** Includes Air Fry, Roast, Bake, Broil, Reheat, Dehydrate, and more for versatile meal preparation.
- **Clear Viewing Window:** Monitor cooking progress without opening the basket, maintaining consistent temperature.
- **Flavor-Lock Technology:** Ensures 360° rapid airflow and precise temperature control for optimal results, leading to maximum tenderness and crispiness.
- **Shake Reminder:** Prompts you to shake or flip food halfway through the cooking cycle for even cooking.
- **Compact and Quiet Operation:** Designed for minimal counter space and reduced noise during use.
- **Dishwasher-Safe Nonstick Components:** Easy cleanup for the basket and crisper plate.

5.8Qt Large Capacity for 3-5 People

Cook a Variety of Food for the Family in the Square-shaped Nonstick Basket



Chicken Wings
17 pieces



Steak
3 lbs



Salmon
14 ounce



Onion Rings
2 lbs




French Fries
2 lbs

Image: Illustration demonstrating the 5.8QT large capacity of the air fryer, showing it can accommodate a 3-lb chicken or 14 chicken wings.

MAX Crispy & Tender Results

Patented Technology : Beelicious® IQTemp & MaxCrisp-Tech

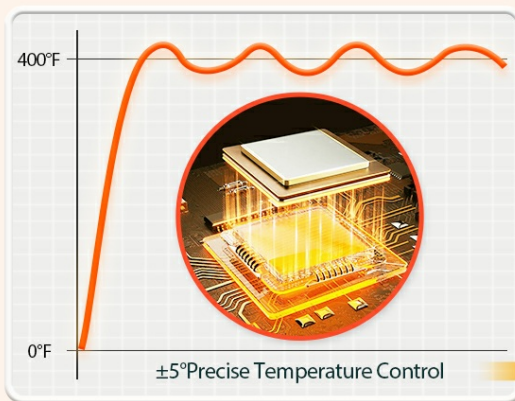

Max Tender & Juicy Results



Patented 360° Airflow Design

Image: Diagram illustrating the Flavor-Lock Technology with 360-degree airflow and precise temperature control, leading to maximum tender and juicy results.

SETUP AND FIRST USE

- Unpacking:** Carefully remove all packaging materials, including any stickers or labels. Ensure all components are present: main unit, air fryer basket, and crisper plate.
- Initial Cleaning:** Before first use, wash the air fryer basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
- Eliminating Initial Odor:** Some new appliances may emit a slight odor during the first few uses. To minimize this, place a few lemon slices in the air fryer basket and run the appliance at 350°F (175°C) for 15 minutes. Allow to cool and then clean the basket again.
- Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 4 inches (10 cm) of clear space on all sides and above the appliance.
- Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is now ready for use.

 
OPERATING INSTRUCTIONS

Control Panel Overview:

MAX Tender by Flavor-Lock Tech

Patented 360° Airflow Design

±5° Precise Temp-Ctrl

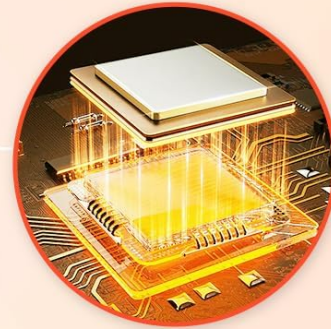

Patented 360° Airflow Design

Max Tender & Juicy Results

Image: Close-up of the digital touch control panel, showing various preset functions, temperature, and time controls.

The Beelicious Pro Air Fryer features an intuitive digital touch screen with preset functions for common dishes. The display shows temperature and time settings.

Basic Operation:

1. **Power On/Off:** Press the **Power** button () to turn the appliance on or off.
2. **Selecting a Preset:** Choose from the 12+ preset cooking functions by tapping the corresponding icon on the control panel (e.g., **Air Fry**, **Roast**, **Bake**, **Steak**, **Fries**, **Wings**, **Veggies**). Each preset has a default temperature and time, which can be adjusted.
3. **Adjusting Temperature:** Use the **TEMP +** and **-** buttons to increase or decrease the cooking temperature (range: 100°F to 450°F).
4. **Adjusting Time:** Use the **TIME +** and **-** buttons to increase or decrease the cooking time.

5. **Start/Pause:** Press the **Start/Pause** button () to begin or pause the cooking cycle.

6. **Oven Light:** Press the **Oven Light** button () to illuminate the interior and view food through the clear window.

Using the Shake Reminder:

For certain foods, the air fryer will emit a "Shake" reminder () halfway through the cooking cycle. This prompts you to remove the basket and shake or flip the food for more even cooking and crispiness. Reinsert the basket to resume cooking.



Image: Illustration showing the "Shake" reminder on the control panel and how shaking the basket helps cook food evenly for optimal crispiness.

Cooking Tips:

- Do not overfill the basket. For best results, cook food in smaller batches to allow for proper air circulation.
- Lightly spray or brush food with oil for extra crispiness, especially for fresh ingredients.
- Refer to the included recipe book for recommended cooking times and temperatures for various foods.
- For foods that require shaking, ensure the basket is fully reinserted for the cooking cycle to resume.

40+ Chef-Made Recipes for Your Endless Inspiration

Free Cookbook Included+
More Recipes Updated Online



Image: A chef holding the Beelicious Pro Air Fryer recipe book, highlighting the availability of 40+ recipes for cooking inspiration.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Basket and Crisper Plate:** The air fryer basket and crisper plate are dishwasher safe. Alternatively, they can be washed by hand with hot water, dish soap, and a non-abrasive sponge. Ensure all food residue is removed.
3. **Interior of the Appliance:** Wipe the interior with a damp cloth and mild detergent if necessary. Avoid abrasive cleaners or metal scouring pads.
4. **Exterior of the Appliance:** Clean the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Heating Element:** Gently clean the heating element with a cleaning brush to remove any food debris.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

Dishwasher-Safe & Easy to Clean with Nonstick Basket



Image: Visual demonstration of the air fryer basket and crisper plate being cleaned in a dishwasher and by hand, highlighting their dishwasher-safe and nonstick properties for easy maintenance.

TROUBLESHOOTING GUIDE

If you encounter issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped; incorrect temperature/time.	Cook in smaller batches. Utilize the "Shake Reminder" and shake/flip food halfway through. Verify temperature and time settings against recipe recommendations.
White smoke comes from the appliance.	Grease residue from previous use; fatty food cooking.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, drain excess fat during cooking.
Appliance emits a plastic smell.	New appliance odor.	Perform the initial odor elimination step (lemon slices at 350°F for 15 minutes). The smell should dissipate after a few uses.
Basket or crisper plate shows signs of rust.	Improper cleaning or drying; prolonged exposure to moisture.	Ensure components are thoroughly dried after washing. Avoid using abrasive scrubbers that can damage the nonstick coating. Contact customer support if rust appears on new components.

SPECIFICATIONS

Feature	Detail
Brand	Beelicious Pro
Model Number	BAF-808
Capacity	5.8 Quarts

Feature	Detail
Color	White
Material	Aluminum, Plastic, Stainless Steel (Inner Material: Metal)
Control Method	Touch
Temperature Range	100°F - 450°F
Air Frying Technology	Advanced Air Frying Technology (Flavor-Lock Tech, 360° Airflow)
Nonstick Coating	Yes
Dishwasher Safe Components	Basket and Crisper Plate

WARRANTY AND SUPPORT

Beelicious Pro is committed to providing high-quality products. For warranty information, technical support, or any questions regarding your air fryer, please contact Beelicious Pro customer service. Details can typically be found on the product packaging or the official Beelicious Pro website.

Please have your model number (BAF-808) and purchase information ready when contacting support.

© 2024 Beelicious Pro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

