

Bmax I9Plus

Bmax I9Plus Tablet User Manual

Model: I9Plus

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Bmax I9Plus Tablet. Please read this manual thoroughly before operating the device and retain it for future reference.

IMPORTANT SAFETY INFORMATION

To prevent damage to your device or injury to yourself or others, observe the following precautions:

- Do not expose the tablet to extreme temperatures or direct sunlight.
- Avoid dropping or subjecting the tablet to severe impact.
- Keep the tablet away from water and other liquids.
- Use only approved chargers and accessories.
- Do not attempt to disassemble or repair the tablet yourself.

PRODUCT OVERVIEW

The Bmax I9Plus Tablet is a versatile Android device designed for entertainment, productivity, and communication. It features a 10.09-inch display and runs on the Android operating system.



Figure 1: Front view of the Bmax I9Plus Tablet, showing the display with time and date, and the front camera.

Package Contents

Verify that all items are present in the package:

- Bmax I9Plus Tablet
- USB Charging Cable
- Power Adapter
- Quick Start Guide
- Camera

SETUP GUIDE

Charging the Tablet

Before first use, fully charge the tablet. Connect the USB charging cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the Bmax logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power off" and confirm.
- **To Restart:** From the power options menu, select "Restart" and confirm.

Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. This includes:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Connect to a Wi-Fi network to access the internet.
3. **Google Account Setup:** Sign in with your Google account or create a new one to access Google Play Store and other services.
4. **Date and Time:** Set the correct date and time, or allow network synchronization.
5. **Security Settings:** Set up a screen lock (PIN, pattern, password, or fingerprint if available).

OPERATING INSTRUCTIONS

Basic Navigation

- **Touch:** Tap an icon or option to select it.
- **Touch and Hold:** Press and hold an item to access more options.
- **Swipe:** Drag your finger across the screen to scroll or navigate between screens.
- **Pinch:** Use two fingers to zoom in or out on images or web pages.

Connecting to Wi-Fi

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

Bluetooth Pairing

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure the device you want to pair is in pairing mode.
4. Select the device from the list of available devices and follow the on-screen prompts to complete pairing.

Installing and Managing Apps

Apps can be downloaded from the Google Play Store. To manage installed apps, go to **Settings > Apps & notifications**.

MAINTENANCE

Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use abrasive cleaners or solvents. For stubborn smudges, slightly dampen the cloth with water.

Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the tablet charging for extended periods after it is fully charged.
- Store the tablet in a cool, dry place when not in use for long periods.

Software Updates

Periodically check for software updates to ensure optimal performance and security. Go to **Settings > System > System update**.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet does not turn on.	Low battery; System crash.	Charge the tablet for at least 30 minutes. Press and hold the Power button for 10-15 seconds to force restart.
Wi-Fi connection issues.	Incorrect password; Router issue; Tablet Wi-Fi disabled.	Verify Wi-Fi password. Restart router. Ensure Wi-Fi is enabled in settings. Forget and reconnect to the network.
Apps are crashing or freezing.	Insufficient memory; App bug; Outdated app.	Close background apps. Clear app cache/data (Settings > Apps). Update the app from Play Store. Restart tablet.
Screen is unresponsive.	Temporary software glitch.	Force restart the tablet by holding the Power button.

SPECIFICATIONS

Feature	Detail
Brand	Bmax
Model Name	I9
Operating System	Android
Screen Size	10.09 Inches
Max Screen Resolution	1280*800 Pixels
Processor Brand	Intel
Memory Storage Capacity	64 GB
Flash Memory Size	11.99 GB
Item Weight	1.1 pounds
Product Dimensions	10 x 3 x 1 inches
Date First Available	April 11, 2025

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Bmax website. You may also contact the seller directly for assistance.

Seller: BMAX Tech

Bmax Store: [Visit the Bmax Store on Amazon](#)

Additional protection plans may be available for purchase:

- 2-Year Protection Plan: \$42.99
- Complete Protect (monthly): \$16.99/month

© 2025 Bmax. All rights reserved.