



[Manuals.plus](#) /

› [OUKITEL](#) /

› OUKITEL C61 Smartphone User Manual

## OUKITEL OUKITEL C61

# OUKITEL C61 Smartphone User Manual

Model: OUKITEL C61

## 1. INTRODUCTION

The OUKITEL C61 is an advanced unlocked smartphone designed for a seamless user experience. It features the latest Android 15.0 operating system, an Octa-core Processor, and a large 6.88-inch INCELL display. This manual provides detailed instructions for setting up, operating, and maintaining your device.



Image: Front and back view of the OUKITEL C61 Smartphone, highlighting its sleek design and camera module.

## 2. PACKAGE CONTENTS

Please verify that all items are present in your product package:

- 1x OUKITEL C61 Smartphone

- 1x Charger
- 1x Phone Case
- 1x Type-C data cable
- 1x Card Needle




Image: Illustration of the OUKITEL C61 smartphone and its included accessories: charger, Type-C data cable, phone case, and card needle.

### 3. DEVICE LAYOUT

Familiarize yourself with the physical components of your OUKITEL C61 smartphone.

- **Front:** 6.88-inch INCELL Display, 5MP Front Camera, Earpiece.
- **Back:** 13MP Main Camera, LED Flash.
- **Right Side:** Power Button (integrated with Fingerprint Sensor), Volume Up/Down Buttons.
- **Bottom:** USB Type-C Port, Microphone, Speaker.
- **Left Side:** SIM/MicroSD Card Tray.

 **16GB RAM+128GB ROM**

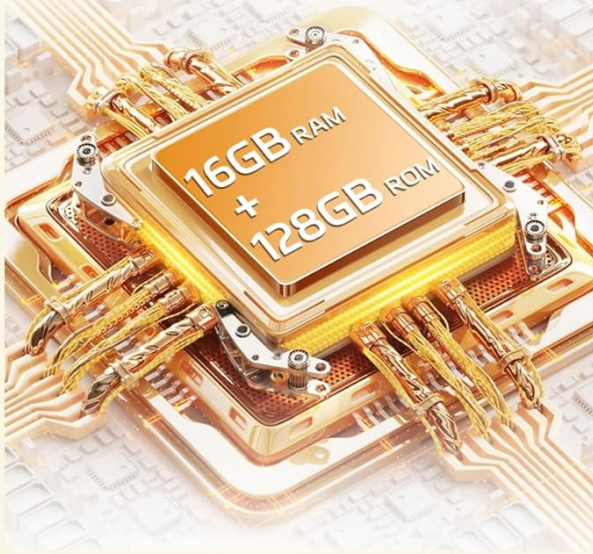

**5150mAh**



**6.88" 90Hz**



**Android 15.0**



**Reverse Charging**



**GPS+  
GLONASS+  
Beidou+  
Galileo**



**13MP Main Camera**



**Fingerprint**



**Face ID**



**Nano+Nano/  
Nano+TF**

 


Image: A comprehensive diagram illustrating the key features and components of the OUKITEL C61, including its memory, battery, operating system, and security features.

## 4. SETUP

### 4.1 SIM Card and Memory Card Installation

The OUKITEL C61 supports dual Nano-SIM cards and a TF (MicroSD) card for expandable storage up to 1TB.

1. Locate the SIM/MicroSD card tray on the left side of the phone.
2. Insert the provided card needle into the small hole next to the tray to eject it.
3. Carefully pull out the tray.
4. Place your Nano-SIM card(s) and/or TF card into the designated slots on the tray, ensuring correct orientation.
5. Gently push the tray back into the phone until it is flush with the device body.



Image: A visual guide demonstrating the proper insertion of Nano-SIM cards and a TF (MicroSD) card into the phone's tray.

## 4.2 Initial Power On and Setup

Press and hold the Power button on the right side of the device until the OUKITEL logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account login, and security settings.

## 4.3 Charging the Device

Connect the provided Type-C data cable to the USB Type-C port at the bottom of the phone and the other end to the charger. Plug the charger into a power outlet. The battery indicator on the screen will show charging status. For optimal battery life, fully charge the device before first use.

# Power More. Charge Less

5150mAh Long-lasting Battery

# 5150mAh

 **530hrs**  
Standby

 **33hrs**  
Talk

 **20hrs**  
Music

 **6.7hrs**  
Video

 **6.3hrs**  
Game

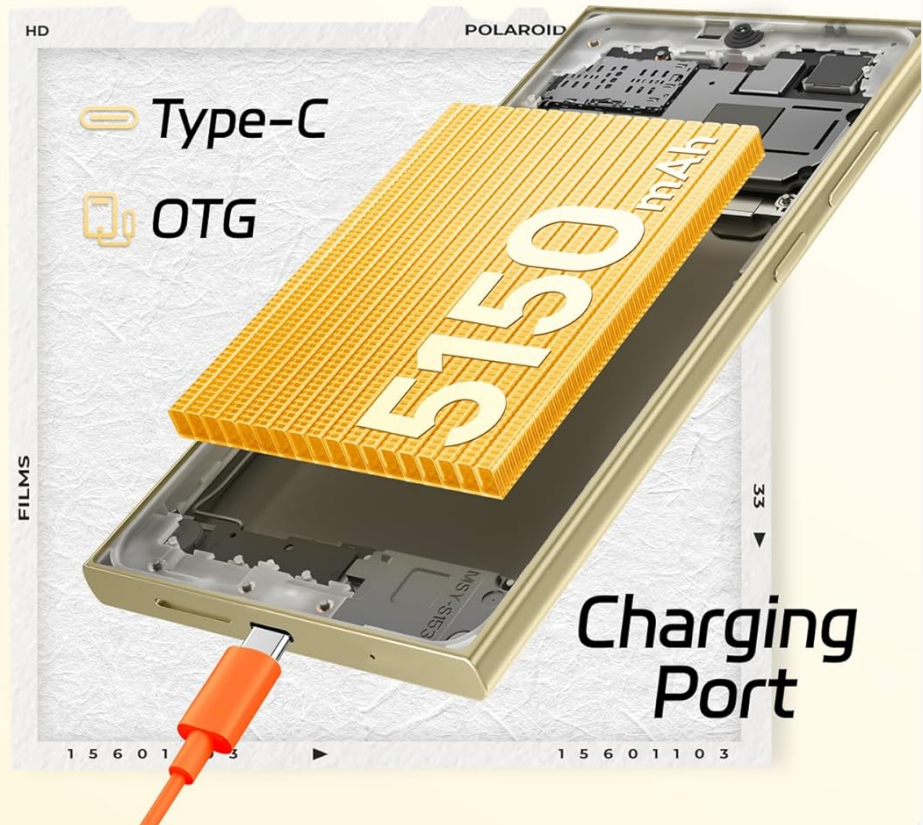 


Image: The OUKITEL C61 connected to a Type-C charger, illustrating its 5150mAh battery capacity and various usage times for standby, talk, music, video, and gaming.

## 5. OPERATING THE DEVICE

### 5.1 Android 15 Operating System

The OUKITEL C61 runs on the latest Android 15.0, offering enhanced safety, privacy, and fluidity. Explore new features and personalize your device experience.



# Android 15

## Enhanced Safety and Smart

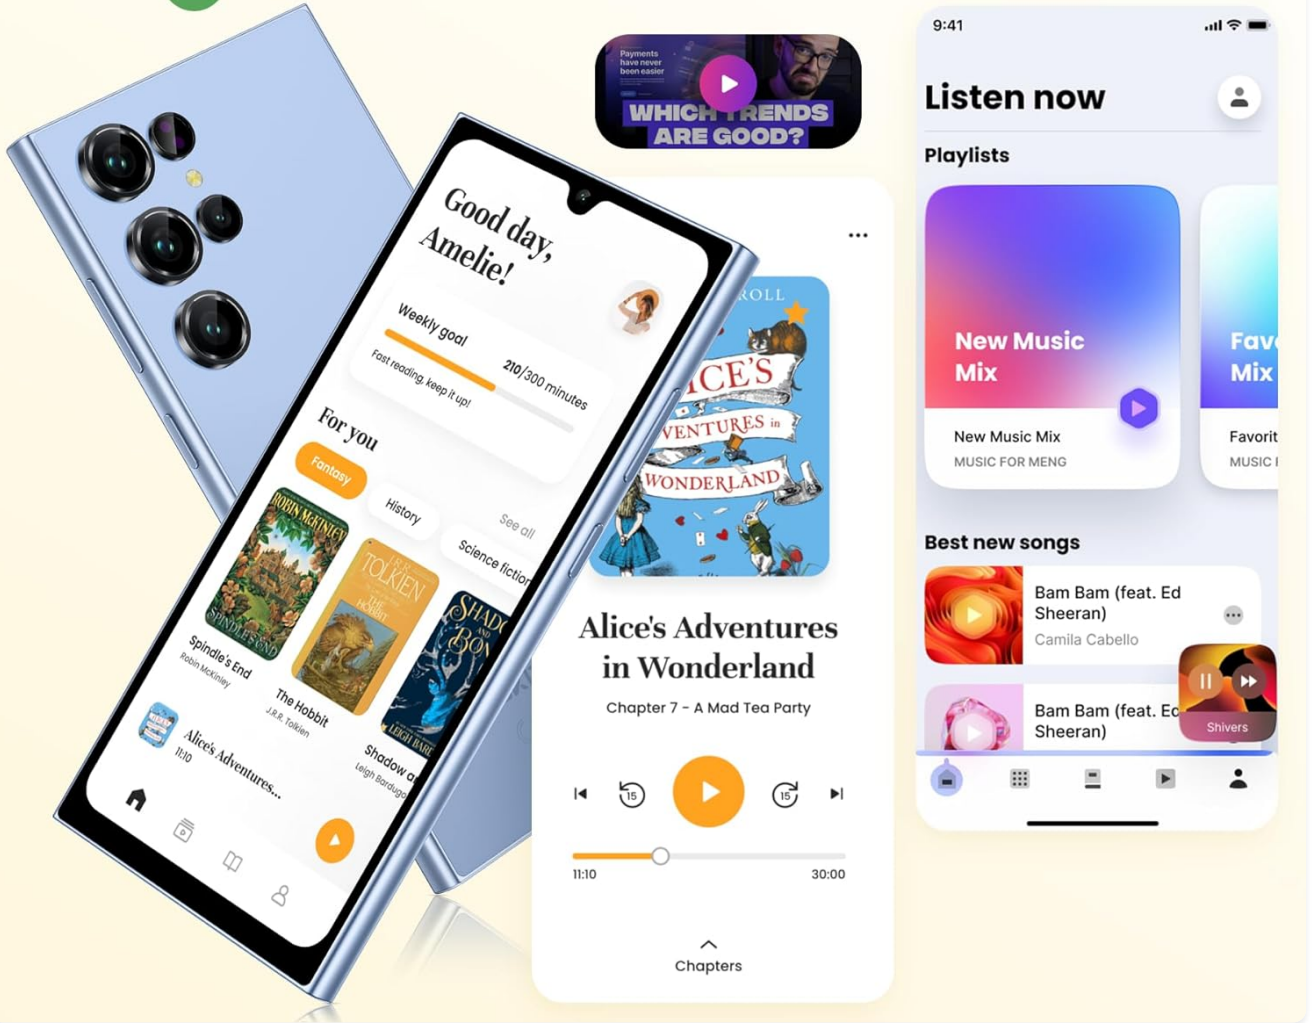 


Image: The OUKITEL C61 displaying the Android 15 interface, showcasing its home screen, music playback, and various application icons.

## 5.2 Display

Experience vivid visuals on the 6.88-inch INCELL display with a resolution of 1640x720 pixels and a 90Hz refresh rate. The display offers 450 nits brightness and an 85% screen-to-body ratio for an immersive viewing experience.

# 6.88" Large Display

Experience Every Detail in Clarity



# 90Hz

 **1640\*720**  
Resolution

 **450nit**  
Brightness

 **90Hz**  
Refresh Rate

 **85%**  
STB Ratio

Image: The OUKITEL C61's 6.88-inch display, highlighting its 90Hz refresh rate, 1640x720 resolution, 450 nits brightness, and 85% screen-to-body ratio.

## 5.3 Performance and Storage

Powered by an Octa-core Processor, the OUKITEL C61 ensures smooth multitasking. It comes with 16GB RAM (4GB physical + 12GB virtual) and 128GB internal storage, expandable up to 1TB via a TF card.



# Every Shot is a Masterpiece



Image: The OUKITEL C61's camera system, highlighting its 13MP main camera and 5MP front camera, accompanied by example photographs taken with the device.

## 5.5 Security Features

Unlock your phone conveniently and securely using either the side-mounted fingerprint recognition sensor or Face Unlock technology.

## 5.6 Connectivity

The OUKITEL C61 supports 4G dual SIM functionality, Wi-Fi 2.4/5G, Bluetooth 5.0, and GPS/GLONASS/Beidou/Galileo for reliable navigation. It is compatible with T-Mobile network (not compatible with Mint-Mobile/AT&T/Verizon).

## 5.7 OTG Reverse Charging

Utilize the OTG (On-The-Go) reverse charging feature to power other electronic devices such as headphones, smartwatches, or other smartphones directly from your OUKITEL C61.



Image: The OUKITEL C61 demonstrating its OTG (On-The-Go) reverse charging capability, allowing it to charge other devices like smartphones, smartwatches, or headphones.

## 6. MAINTENANCE

### 6.1 Battery Care

- Avoid exposing the phone to extreme temperatures.
- Do not fully discharge the battery regularly; charge it before it drops too low.
- Use only the original charger and cable provided.

### 6.2 Storage Management

Regularly clear unnecessary files, cache data, and uninstall unused applications to maintain optimal performance and free up storage space. Utilize the 1TB expandable storage for large media files.

### 6.3 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid using harsh chemicals or abrasive materials. Keep ports free of dust and debris.

## 7. TROUBLESHOOTING

Problem	Possible Solution
Phone does not turn on	Ensure the battery is charged. Connect to charger for at least 30 minutes. If still unresponsive, perform a forced restart by holding the Power button for 10-15 seconds.
Apps are slow or crashing	Close background applications. Clear app cache. Restart the phone. Ensure sufficient storage space is available.

Problem	Possible Solution
Cannot connect to Wi-Fi	Toggle Wi-Fi off and on. Restart your router. Forget the network and reconnect. Ensure correct password is entered.
SIM card not detected	Ensure the SIM card is correctly inserted into the tray. Restart the phone. Check if the SIM card is active with your carrier.
Battery drains quickly	Reduce screen brightness. Disable unused features like Wi-Fi, Bluetooth, GPS. Close background apps. Check battery usage in settings to identify power-hungry apps.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	OUKITEL C61
Operating System	Android 15 Phone
Display Size	6.88 Inches
Resolution	1640x720
Refresh Rate	90 Hz
RAM Memory	16 GB (4GB physical + 12GB virtual)
Internal Storage	128 GB
Expandable Storage	Up to 1 TB (TF Card)
Battery Capacity	5150 Milliamp Hours
Main Camera	13 MP
Front Camera	5 MP
Connectivity	4G Dual SIM, Wi-Fi 2.4/5G, Bluetooth 5.0, GPS
Security Features	Fingerprint Unlock, Face Unlock
Dimensions	7.49 x 4.02 x 2.16 inches
Item Weight	12.8 ounces

## 9. WARRANTY AND SUPPORT

OUKITEL products are manufactured to high quality standards. For warranty information and technical support, please refer to the warranty card included in your package or visit the official OUKITEL website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may contact OUKITEL customer service through their official channels.