

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Greenvelly](#) /

› [Greenvelly 14-16 Gun Safe with Keyboard Lock Instruction Manual](#)

Greenvelly 14 Gun E Keypad Lock

Greenvelly 14-16 Gun Safe with Keyboard Lock - Instruction Manual

Model: 14 Gun E Keypad Lock

1. INTRODUCTION

Thank you for choosing the Greenvelly 14-16 Gun Safe. This manual provides essential information for the safe and effective use of your new gun safe. Please read these instructions carefully before installation and operation to ensure proper functionality and security. Keep this manual for future reference.

2. SAFETY INFORMATION

- Always store firearms unloaded and locked within the safe.
- Keep the safe's keys and digital combination confidential and out of reach of children and unauthorized individuals.
- Ensure the safe is securely mounted to a wall or floor to prevent tipping and unauthorized removal.
- Do not store flammable materials or hazardous chemicals inside the safe.
- Regularly check the digital lock battery status and replace or recharge as needed to avoid lockout.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Greenvelly 14-16 Gun Safe Unit
- 2 x Emergency Mechanical Keys
- 1 x Key Box
- 2 x Adjustable Shelves
- 1 x Gray Carpet (protective pad for the bottom)
- Expansion Screws (for wall mounting)
- Instruction Manual



Figure 3.1: Product Dimensions and Included Components

4. SETUP AND INSTALLATION

4.1 Assembly

The Greenvelly gun safe is designed for straightforward assembly. Follow the detailed instructions provided in the separate assembly guide. Ensure all screws are tightened securely for structural integrity.

4.2 Wall Mounting

For enhanced security and stability, it is recommended to fix the safe to a wall or floor. The safe includes pre-drilled holes on the back and expansion screws for this purpose. Choose a suitable location, mark the drilling points, and secure the safe firmly to prevent accidental tipping or unauthorized removal.

ANTI-THEFT ALARM SYSTEM



Figure 4.1: Anti-Prying Locking Bolts

5. OPERATING INSTRUCTIONS

5.1 Digital Combination Lock

The safe is equipped with a digital combination lock for secure access. You can set a password consisting of 3 to 8 digits.

- Setting Your Password:** Refer to the specific instructions provided with the lock mechanism for programming your personal code. The initial password is typically '123456#'.
- Opening the Safe:** Enter your programmed digital password followed by the '#' key, then turn the knob to open the door.
- Indicator Lights:** The lock features indicator lights to show whether the door is open or closed, and to alert you when the battery is low.
- Low Battery:** The digital combination lock can be recharged when the battery is low. Ensure it is charged to maintain functionality.

5.2 Emergency Key Access

In case of a forgotten password or a dead battery, the safe can be opened using the two provided mechanical keys. Insert the key into the emergency lock, turn it, and then turn the main knob to open the

door.



Figure 5.1: Multiple Unlocking Methods

5.3 Anti-theft Alarm System

The safe is equipped with an alarm system that activates if the safe is opened illegally or if an incorrect password is entered multiple times. This feature enhances security by alerting you to potential tampering.



Figure 5.2: Anti-theft Alarm System Activation

5.4 Internal Storage and LED Lighting

The safe offers a large storage capacity for 12-14 rifles. The bottom features a protective pad to prevent damage to stored items. The gun rack is adjustable to accommodate various rifle heights. The back of the door includes four pistol bags, a bullet bag, and an additional storage bag for accessories. LED lights are integrated into the safe doors to provide illumination, especially in low-light conditions.



Figure 5.3: Internal Storage Layout



Figure 5.4: Adjustable Interior and Door Storage

6. MAINTENANCE

- **Cleaning:** The exterior surface of the gun cabinet is designed for easy cleaning. Use a soft, damp cloth to wipe down the safe. Avoid abrasive cleaners that could damage the finish.

- **Battery Check:** Periodically check the battery level of the digital lock. Recharge or replace batteries as indicated by the low battery warning light to ensure continuous operation.
- **Lock Mechanism:** Do not lubricate the lock mechanism unless specifically instructed by Greenvelly support.

7. TROUBLESHOOTING

- **Safe Will Not Open with Digital Code:**
 - Ensure the correct password is entered.
 - Check for low battery indication; recharge or use emergency keys.
 - If multiple incorrect attempts trigger the alarm, wait for the alarm to clear before trying again.
- **Alarm Sounds Unexpectedly:**
 - Verify the safe door is fully closed and locked.
 - Ensure no unauthorized attempts to open the safe have occurred.
- **Door Feels Loose or Misaligned:**
 - Check all assembly screws and wall mounting bolts for tightness.

If you encounter issues not covered here, please contact Greenvelly customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Greenvelly
Model	14 Gun E Keypad Lock
Product Dimensions (D x W x H)	15.2" x 21" x 55.2"
Lock Type	Electronic Combination Lock, Key
Color	Black
Capacity	0.3 Cubic Meters (12-14 Rifles)
Material	High-density Cold Rolled Steel Plate
Special Features	Alarm System, Digital Password Lock, Anti-Theft, LED Lighting
Mounting Type	Wall Mount
UPC	784227189785

9. WARRANTY AND SUPPORT

Greenvelly is committed to providing quality products and customer satisfaction. For any questions, concerns, or technical assistance, please contact our customer service team. We offer 24-hour professional service to help resolve any issues you may encounter.

For more information or to contact support, please visit the official Greenvelly store: [Greenvelly Store on Amazon](#)

