

[Manuals.plus](#) /

› [BRIGHTDECK](#) /

› BRIGHTDECK Outdoor Lighted Pop-Up Holiday Ball Decoration (Model A01) User Manual

BRIGHTDECK A01

BRIGHTDECK Outdoor Lighted Pop-Up Holiday Ball Decoration (Model A01) User Manual

Model: A01

INTRODUCTION

Thank you for choosing the BRIGHTDECK Outdoor Lighted Pop-Up Holiday Ball Decoration. This manual provides essential information for the safe and proper setup, operation, and maintenance of your new holiday decoration. Please read these instructions thoroughly before use and retain them for future reference.

SAFETY WARNINGS

To ensure safe operation and prevent injury or damage, please observe the following warnings:

- This product is designed for outdoor use only.
- Always unplug the decoration during inclement weather conditions, such as heavy rain, snow, or strong winds.
- Do not allow children to play on or near the display. This is not a toy.
- Keep the decoration away from flammable materials to prevent fire hazards.
- Secure the display properly to prevent tripping hazards or the decoration from being blown over.
- Be aware that the lights may attract insects.
- Ensure all electrical connections are dry and protected from moisture.

PACKAGE CONTENTS

Please check the package contents to ensure all parts are present:

- 1 x BRIGHTDECK Pop-Up Holiday Ball Decoration (Red)
- 1 x Center Pole
- 1 x Base Ring
- Fixing Stakes (3 included, as per image)
- 1 x Power Adapter
- User Manual (this document)

SETUP AND ASSEMBLY

The BRIGHTDECK Holiday Ball Decoration features an easy pop-up design for quick assembly.

1. **Unfold the Ornament:** Carefully remove the collapsed holiday ball decoration from its packaging and allow it to pop up into its spherical shape.
2. **Insert Center Pole:** Thread the provided center pole into the top opening of the unfolded pop-up ornament. Ensure it is securely seated.
3. **Attach to Base:** Attach the bottom of the center pole to the base ring. Secure the base ring to the ground using the included fixing stakes. For hanging applications, ensure the top loop is securely fastened to a sturdy support.
4. **Connect Power:** Connect the power adapter to the decoration and then plug it into a suitable outdoor-rated power outlet. Ensure the outlet is protected from weather.

EASY ASSEMBLY

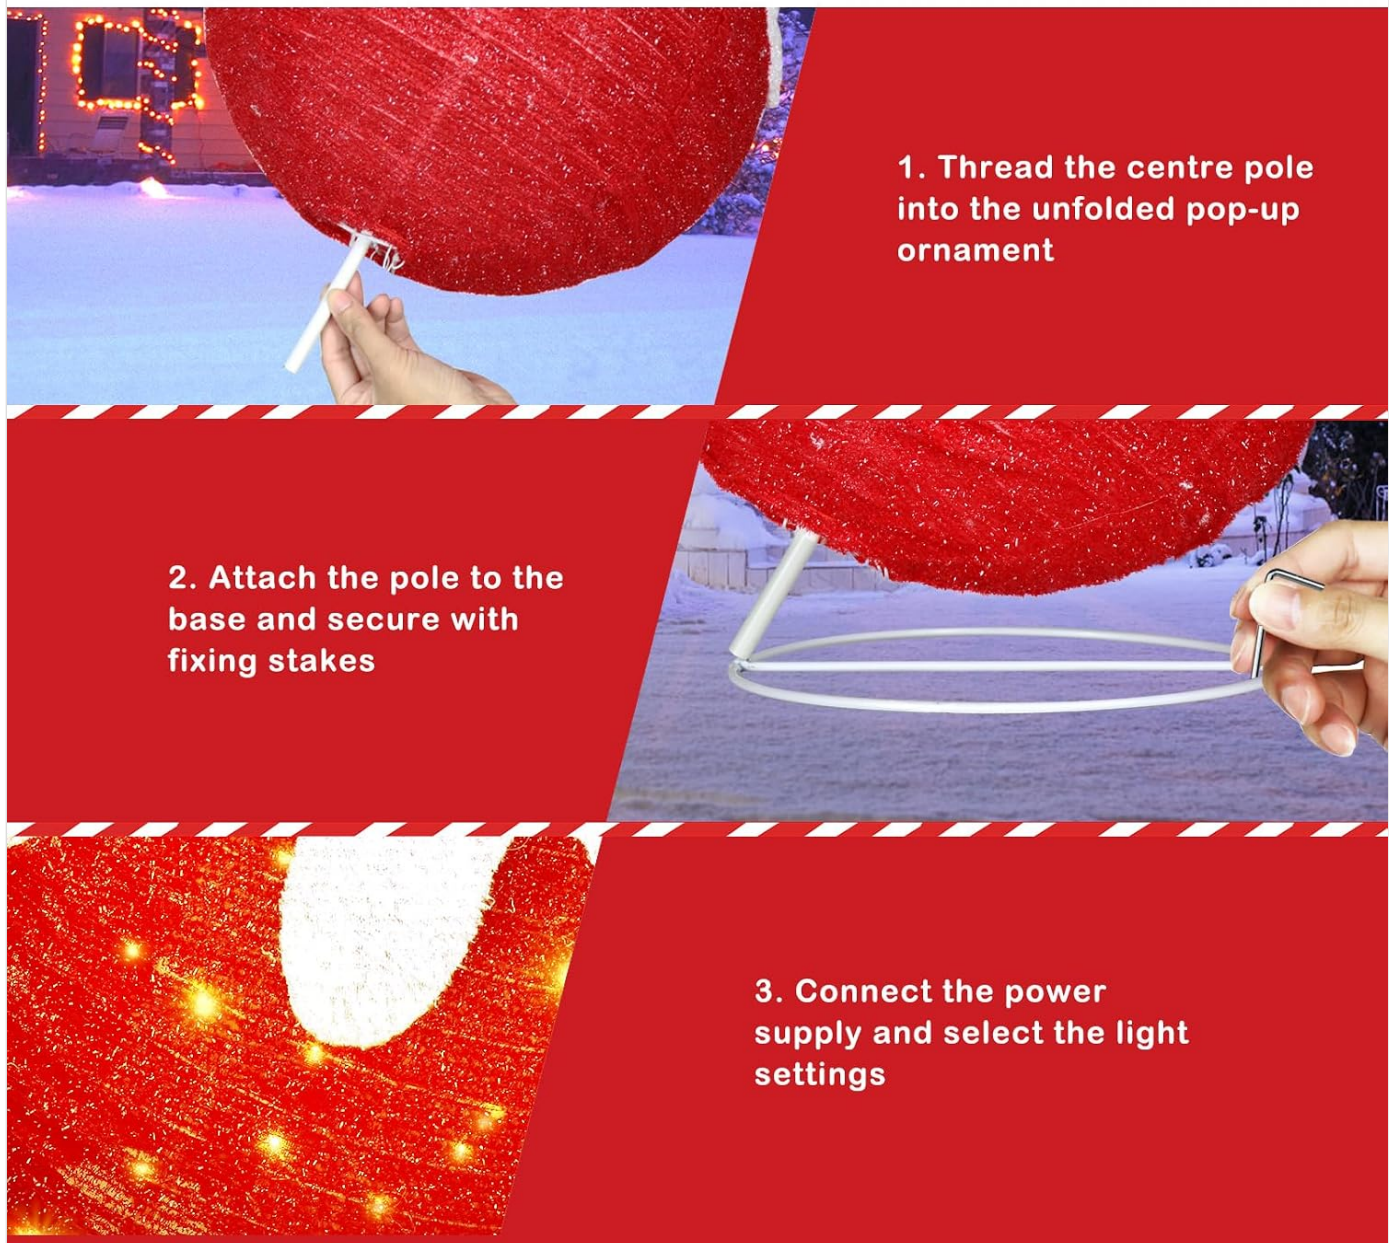


Image: Easy Assembly Steps. Step 1 shows threading the center pole. Step 2 shows attaching the pole to the base and securing with stakes. Step 3 shows connecting the power supply.



Image: Components and Features. This image illustrates the included ground stakes, the quick pop-up design for easy installation, and the durable powder-coated steel frame.

OPERATING INSTRUCTIONS

Your BRIGHTDECK Holiday Ball Decoration features 8 distinct light modes and a built-in timer function.

Light Modes:

Once powered on, use the control button (typically located on the power adapter or a separate control box) to cycle through the following 8 light modes:

- Combination
- In Wave
- Sequential
- Slow Glow
- Chasing/Flash
- Slow Fade
- Twinkle/Flash
- Steady On

Timer Function:

The decoration includes a built-in timer that operates on a 6 hours On / 18 hours Off cycle. To activate the timer, select your desired light mode. The timer will automatically engage, turning the lights on for 6 hours and then off for 18 hours, repeating daily.



Image: 8 Light Functions & Timer. This image displays the various light modes available and details the 6 hours On / 18 hours Off timer functionality.

MAINTENANCE AND CARE

- **Cleaning:** Disconnect power before cleaning. Wipe the decoration with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** The collapsible design allows for easy storage. After the holiday season, unplug the decoration, disassemble the pole and base, and gently collapse the ornament. Store in a cool, dry place away from direct sunlight.
- **Weather Resistance:** The decoration is made with weather-resistant materials and a powder-coated steel frame. However, for prolonged durability, it is recommended to bring it indoors during extreme weather conditions.
- **LED Lights:** The 80 LED lights are energy-saving and cool to the touch. Do not attempt to replace individual LEDs.



Image: Key Features. This image highlights the 80 LED lights, waterproof construction, cool-to-the-touch operation, and energy-saving benefits of the decoration.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	No power supply. Loose connection. Timer is active (off cycle).	Ensure the power adapter is securely plugged into a working outlet. Check all connections. Wait for the timer to cycle on, or unplug and replug to reset.
Lights flicker or malfunction.	Loose connection. Damaged wiring.	Check all connections. If flickering persists or wiring is damaged, discontinue use and contact customer support.

Problem	Possible Cause	Solution
Decoration does not stand upright.	Improper assembly. Insufficiently secured stakes. Uneven ground.	Review assembly steps. Ensure stakes are fully inserted into the ground. Place on a level surface.

SPECIFICATIONS

- **Model:** A01
- **Brand:** BRIGHTDECK
- **Product Dimensions (Assembled):** Approximately 18.1 inches (Width) x 17.7 inches (Height) x 9.1 inches (Base Diameter)
- **Collapsed Dimensions:** 10 x 5 x 2 inches (approximate package size)
- **Item Weight:** 2.5 Pounds
- **Light Source:** 80 LED Lights
- **Light Modes:** 8 (Combination, In Wave, Sequential, Slow Glow, Chasing/Flash, Slow Fade, Twinkle/Flash, Steady On)
- **Timer:** 6 hours On / 18 hours Off
- **Power Source:** AC Adapter
- **Frame Material:** Plastic / Powder-Coated Steel
- **Recommended Use:** Outdoor Holiday Decoration
- **Color:** Red (as per product title)



Image: Product Size. This diagram provides the key dimensions of the assembled BRIGHTDECK holiday ball decoration.

WARRANTY INFORMATION

BRIGHTDECK products are manufactured with quality and durability in mind. This product comes with a standard limited warranty against defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact BRIGHTDECK customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your BRIGHTDECK Outdoor Lighted Pop-Up Holiday Ball Decoration, please do not hesitate to contact our customer support team. We are here to help.

Contact Information:

Website: [Visit the BRIGHTDECK Store on Amazon](#)

Email: [Please refer to product packaging or BRIGHTDECK website for email support]

Phone: [Please refer to product packaging or BRIGHTDECK website for phone support]

© 2025 BRIGHTDECK. All rights reserved. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F4KHG71P>

More documents and user manuals: <https://manuals.plus/>