

[Manuals.plus](#) /

> [Kooper](#) /

> Kooper Tower Fan Instruction Manual - Model 5923126

Kooper 5923126

Kooper Tower Fan Instruction Manual

Model: 5923126

1. INTRODUCTION

Thank you for choosing the Kooper Tower Fan. This appliance is designed to provide efficient air circulation and cooling for indoor environments. Its slim, space-saving design and advanced features ensure a comfortable user experience. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new tower fan.

Key features include a digital display, remote control, horizontal oscillation, three fan speeds, three operating modes (Normal, Natural, Sleep), a programmable timer from 1 to 15 hours, and room temperature detection. A practical rear handle is included for easy transport, along with a dedicated compartment for remote control storage.





Image 1.1: Kooper Tower Fan (Model 5923126)

2. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply voltage matches the rating label on the fan.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel.
- Keep the fan away from water or other liquids. Do not immerse the fan in water.
- Unplug the fan from the power outlet before cleaning, moving, or performing any maintenance.
- This fan is for indoor use only. Do not use outdoors or in wet conditions.
- Do not insert fingers or any objects into the fan grille when it is operating.
- Keep children and pets away from the fan during operation.
- Place the fan on a stable, flat surface to prevent it from tipping over.

- Do not cover the fan or obstruct the air inlets/outlets during operation.

3. SETUP

The Kooper Tower Fan is designed for floor mounting and typically requires minimal assembly, usually involving attaching the base. Follow these steps for initial setup:

1. **Unpack:** Carefully remove the fan and all components from the packaging. Retain packaging for future storage or transport.
2. **Base Assembly (if required):** If the base is separate, align the base sections and secure them according to the diagrams in the quick start guide (not provided in this manual, refer to product packaging). Ensure the power cord passes through the designated channel in the base.
3. **Placement:** Place the fan on a firm, level surface in the desired indoor location. Ensure there is adequate space around the fan for proper air circulation and oscillation.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

4. OPERATING INSTRUCTIONS

Your Kooper Tower Fan can be operated using the control panel on top of the unit or the included remote control.

4.1 Control Panel





Image 4.1: Top Control Panel

- **Power Button** (⏻): Press to turn the fan ON or OFF.
- **Speed Button** (*): Press to cycle through the three fan speeds (Low, Medium, High).
- **Mode Button** (⌘): Press to select operating modes (Normal, Natural, Sleep).
- **Timer Button** (⌚): Press to set the operating timer.
- **Oscillation Button** (↔): Press to activate or deactivate horizontal oscillation.

4.2 Remote Control

The remote control provides convenient access to all fan functions. Ensure the battery (CR2025, included) is correctly installed.

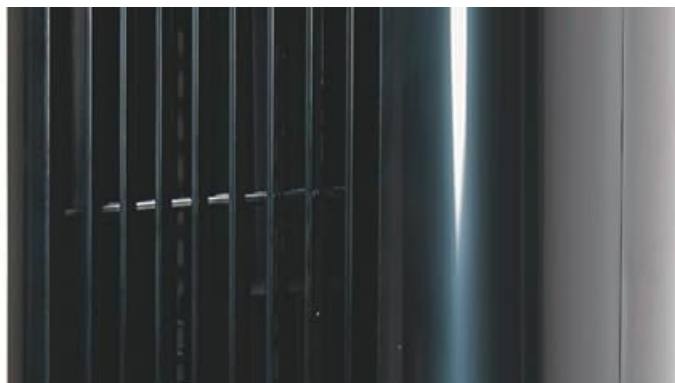




Image 4.2: Remote Control

- **ON/SPEED:** Turns the fan ON and cycles through the three fan speeds.
- **OFF:** Turns the fan OFF.
- **MODE:** Cycles through Normal, Natural, and Sleep modes.
- **TIMER:** Sets the operating timer from 1 to 15 hours. Each press increases the timer by one hour.
- **SWING:** Activates or deactivates the horizontal oscillation function.

4.3 Operating Modes

- **Normal Mode:** Provides a constant, steady airflow at the selected speed.
- **Natural Mode:** Simulates a natural breeze by varying the fan speed intermittently.
- **Sleep Mode:** Operates at a gentle, low speed with reduced noise, ideal for use during rest.

4.4 Digital Display

The digital display shows the current fan settings and the ambient room temperature.

5. MAINTENANCE

Regular cleaning and proper storage will ensure the longevity and optimal performance of your Kooper Tower Fan.

5.1 Cleaning

1. **Disconnect Power:** Always unplug the fan from the power outlet before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the plastic.
3. **Grille Cleaning:** Use a vacuum cleaner with a brush attachment to gently remove dust from the air inlet and outlet grilles. Do not attempt to open the fan housing for internal cleaning.
4. **Drying:** Ensure the fan is completely dry before plugging it back in and operating.

5.2 Storage

When not in use for extended periods, store the fan in a cool, dry place. The remote control can be stored in the dedicated compartment at the rear of the fan.





Image 5.1: Remote Control Storage Compartment

6. TROUBLESHOOTING

If you encounter issues with your Kooper Tower Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power cord not securely plugged in.	Check if the power outlet is working. Ensure the power cord is firmly plugged into the outlet and the fan.
No or weak airflow.	Air inlets/outlets are blocked. Fan speed is set too low.	Clear any obstructions from the grilles. Increase the fan speed setting.
Remote control not working.	Remote control battery is dead or incorrectly inserted. Obstruction between remote and fan.	Replace the CR2025 battery or ensure it is inserted with correct polarity. Ensure a clear line of sight between the remote and the fan's receiver.
Fan makes unusual noise.	Fan is not on a level surface. Debris inside the fan.	Place the fan on a stable, flat surface. Unplug the fan and gently check for any visible debris in the grilles (do not open the housing).

If the problem persists after attempting these solutions, please contact Kooper customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Kooper
Model Number	5923126
Color	Black
Material	Plastic (PP) and ABS
Dimensions (D x W x H)	34 cm x 34 cm x 120 cm
Power Consumption	50 Watts
Noise Level	45 Decibels
Number of Speeds	3
Operating Modes	Normal, Natural, Sleep
Timer	1 to 15 hours
Special Features	Remote controlled, Digital display, Horizontal oscillation, Programmable timer, Room temperature detection
Control Method	Buttons on unit, Remote
Power Source	Corded Electric (Remote: 1x CR2025 battery)
Usage Environment	Indoor

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact

Kooper customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official Kooper website or contact their customer support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0F4KKXDR2>
More documents and user manuals: <https://manuals.plus/>