

GLOBO LIGHTING 134777

GLOBO LED Ceiling Fan with Remote Control and CCT Light

Model: 134777 | **Brand:** GLOBO LIGHTING

1. INTRODUCTION

This manual provides essential information for the safe installation, operation, and maintenance of your GLOBO LED Ceiling Fan, Model 134777. Please read these instructions carefully before installation and use, and retain them for future reference.



Figure 1: GLOBO LED Ceiling Fan (Model 134777) installed in a living space.

2. SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic precautions:

- Read all instructions before installing and using the fan.
- Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.
- Before installation or maintenance, disconnect power at the main circuit breaker to prevent electric shock.
- Ensure the mounting structure can support the weight of the fan (approximately 3 kg).
- Do not operate the fan with a damaged power cord or plug.
- Avoid placing fingers or objects into the fan blades while in operation.
- This product is designed for indoor use only (IP20 protection class). Do not expose to water or high humidity.
- Do not attempt to repair or modify the fan or light yourself. Contact qualified service personnel.

3. PACKAGE CONTENTS

Carefully unpack your ceiling fan and ensure all items are present. If any parts are missing or damaged, contact your retailer.

- GLOBO LED Ceiling Fan Unit (Model 134777)
- Remote Control
- Mounting Hardware (screws, anchors, etc.)
- User Manual (this document)

4. SPECIFICATIONS

Feature	Specification
Model Number	134777
Brand	GLOBO LIGHTING
Color	White
Product Dimensions (D x H)	40.6 cm x 12.6 cm
Weight	3 kg
Light Type	Integrated LED
Light Wattage	10 W
Luminous Flux	750 lumens
Color Temperature (CCT)	3000 K (Warm White) - 6500 K (Cool White)
Color Rendering Index (Ra)	80
Motor Power (Max)	15 W
Fan Speeds	4
Optimal Room Size	10-15 m²
Protection Class	IP20 (Indoor Use Only)
Electrical Protection Class	2
Power Supply	230 V, 50 Hz

5. SETUP AND INSTALLATION

Important: Installation should only be carried out by a qualified electrician. Ensure the main power supply is switched off before commencing any work.

1. **Preparation:** Turn off power at the circuit breaker. Clear the installation area.
2. **Mounting Bracket Installation:** Secure the mounting bracket to a ceiling joist or a suitable electrical junction box capable of supporting the fan's weight. Use the provided mounting hardware.
3. **Wiring:** Connect the fan's electrical wires to your household wiring according to local electrical codes. Ensure all connections are secure and properly insulated.
4. **Fan Unit Attachment:** Carefully lift the fan unit and attach it to the mounting bracket. Ensure it is securely fastened.
5. **Final Check:** Double-check all connections and ensure no wires are pinched. Restore power at the circuit breaker.



Figure 2: Detailed view of the GLOBO LED Ceiling Fan unit.

6. OPERATING INSTRUCTIONS

The GLOBO LED Ceiling Fan is controlled using the included remote control. Insert 2x AAA batteries (not included) into the remote control before use.



Figure 3: GLOBO LED Ceiling Fan with its remote control.

Remote Control Functions:

- **ON/OFF Button:** Powers the fan and light on or off.
- **Fan Speed Buttons:** Adjusts the fan speed (4 levels).
- **Light ON/OFF Button:** Turns the LED light on or off independently of the fan.
- **CCT Button:** Cycles through color temperatures (Warm White 3000K, Neutral White, Cool White 6500K). The selected color temperature will be saved by the memory function.
- **Timer Button:** Activates the timer function, typically for 1, 2, 4, or 8 hours, after which the fan and/or light will automatically turn off.
- **Rotation Direction Button:** Changes the direction of fan blade rotation (e.g., for summer cooling or winter air circulation).

Memory Function:

The fan's light setting (color temperature) will be remembered when the unit is turned off and back on, ensuring your preferred light setting is retained.



Figure 4: Light output at Warm White (left) and Cool White (right) color temperatures.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your ceiling fan.

- **Cleaning:** Before cleaning, ensure the power is turned off at the circuit breaker. Use a soft, damp cloth to wipe down the fan blades and housing. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Periodically check the fan blades for any signs of damage or imbalance.
- **Tightness of Screws:** Over time, some screws may loosen. Check and tighten all screws on the mounting bracket and fan housing annually.
- **Light Source:** The LED light source is integrated and not user-replaceable. If the LED fails, contact customer support.

8. TROUBLESHOOTING

If you encounter issues with your GLOBO LED Ceiling Fan, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Fan does not operate.	No power supply. Remote control batteries are dead. Incorrect wiring.	Check circuit breaker. Replace remote control batteries. Consult a qualified electrician to check wiring.
Light does not turn on.	No power supply. Remote control batteries are dead. Integrated LED failure.	Check circuit breaker. Replace remote control batteries. Contact customer support for assistance.
Fan makes excessive noise.	Loose mounting screws. Blades are unbalanced.	Ensure all mounting screws are tight. Check blades for damage or proper attachment.
Remote control not working.	Dead batteries. Obstruction between remote and fan. Remote not paired (if applicable).	Replace batteries. Ensure clear line of sight. Refer to remote control pairing instructions (if provided separately).

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact GLOBO LIGHTING directly. Keep your proof of purchase for any warranty claims.

Manufacturer: GLOBO LIGHTING

Model Number: 134777