

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [XGBFH](#) /

› [XGBFH Universal Big Button Remote for Seniors - Instruction Manual Model 722967816622](#)

XGBFH 722967816622

XGBFH Universal Big Button Remote for Seniors

INSTRUCTION MANUAL - MODEL 722967816622

1. Introduction

The XGBFH Universal Big Button Remote is designed for ease of use, particularly for seniors and individuals with impaired vision. It offers control over two distinct devices through its learning functions, making it a versatile replacement for multiple original remotes. This manual will guide you through the setup, operation, and troubleshooting of your new remote control.

Key features include large, color-coded buttons for improved visibility and tactile feedback, compatibility with a wide range of devices, and dedicated shortcut buttons for popular streaming services.

2. Package Contents

- 1 x XGBFH Universal Big Button Remote Control
- 1 x User Manual

Note: 2 x AAA batteries are not included and must be purchased separately.

3. Product Overview and Button Layout

Familiarize yourself with the buttons on your XGBFH Universal Remote. The remote features a clear layout with large, distinct buttons for common functions, and a sliding cover to reveal additional controls.



Image: Front and back view of the XGBFH Universal Big Button Remote. The front shows large, color-coded buttons for power, input, menu, navigation, volume, and channel control. The back shows the battery compartment.

Key Buttons:

- **TV Power (Red):** Turns the TV on or off.
- **BOX+ Power (Green):** Turns the secondary device (e.g., streaming box, soundbar) on or off.
- **Input:** Switches video input sources on your TV.
- **Menu:** Accesses the TV or device menu.

- **Navigation (Up, Down, Left, Right, OK):** For navigating menus and confirming selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits current menu or application.
- **Volume (+/-):** Adjusts the volume.
- **Mute:** Mutes the audio.
- **Channel (CH +/-):** Changes TV channels.
- **Smart / Home:** Accesses smart TV features or home screen.
- **Netflix, YouTube, Prime Video, Hulu:** Dedicated shortcut buttons for streaming services (located under the sliding cover).

The remote features a sliding cover at the bottom, which conceals additional buttons such as the numeric keypad and streaming service shortcuts. Slide the cover down to access these functions.

4. Battery Installation

Your remote requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



With sliding cover

Concealed design

More comprehensive functions



Image: The XGBFH remote with its sliding cover extended, revealing the numeric keypad and streaming buttons. The image also highlights the battery compartment and the remote's dimensions (2.21 inches width, 1.26 inches thickness, 2.95 inches height for the main body).

5. Setup and Programming

The XGBFH Universal Remote can control up to two devices. It comes with pre-programmed compatibility for certain TV brands and also features a learning function for other devices.

5.1. Pre-programmed Compatibility (TV Mode)

Under default settings, the remote is directly compatible with many popular TV brands, including LG, Samsung, Sony, Philips, Toshiba, and Panasonic. To use the remote with these TVs:

1. Ensure batteries are installed.
2. Point the remote at your TV.
3. Press the **TV Power (Red)** button. If your TV turns on/off, basic functions like volume and channel control should work.
4. If it does not work, proceed to the learning function section.



Image: The XGBFH Universal Remote shown alongside a graphic indicating its universal compatibility with various TV brands (Sony, Samsung, LG, Hisense, Toshiba, Sharp, Philips, TCL, Panasonic, Dynex, Insignia, Vizio) and device types (TV, DVD/VCR/DVB, Streaming Box, SoundBar).

5.2. Selecting Device Mode (TV or BOX+)

The remote can operate in two modes: TV mode and BOX+ mode. You need to select the correct mode before programming or using the remote for a specific device.

- **To set TV mode:** Press and hold the **TV Power (Red)** button and the **Up** navigation button simultaneously for one second. The TV LED light on the remote will blink three times, indicating it is now in TV mode.
- **To set BOX+ mode:** Press and hold the **BOX+ Power (Green)** button and the **Up** navigation button simultaneously for one second. The BOX+ LED light on the remote will blink three times, indicating it is now in BOX+ mode.

5.3. Learning Function (for any device)

The learning function allows the XGBFH remote to copy signals from your original remote controls. This is essential for devices not covered by the pre-programmed compatibility or for specific functions not working correctly.

Before you begin:

- Ensure both the XGBFH remote and your original remote have fresh batteries.
- Place both remotes on a flat surface, facing each other, with their infrared (IR) emitters aligned and approximately 1-3 cm apart.

Steps for Learning:

1. **Enter Learning Mode:** Select the desired device mode (TV or BOX+) as described in section 5.2. Then, press and hold the **MENU** button for approximately 3 seconds until the LED indicator for the selected mode (TV or BOX+) lights up solid. This indicates the remote is in learning mode.
2. **Select Target Button:** On the XGBFH remote, press the button you wish to program (e.g., Volume Up). The LED indicator will start blinking slowly, waiting for a signal.
3. **Transmit Signal:** On your original remote, press and hold the corresponding button (e.g., Volume Up) until the LED indicator on the XGBFH remote blinks rapidly three times and then lights up solid again. This confirms successful learning.
4. **Repeat for Other Buttons:** Repeat steps 2 and 3 for all other buttons you wish to program for the current device mode.
5. **Exit Learning Mode:** Once all desired buttons are programmed, press the **MENU** button again to exit learning mode. The LED indicator will turn off.

Important Notes:

- If the LED indicator blinks rapidly for a long time and then turns off without lighting up solid, the learning process failed. Try again, ensuring proper alignment and battery strength.
- Some original remotes use different IR frequencies or protocols that may not be compatible with the learning function.

6. Operating the Remote

Once programmed, operating the XGBFH remote is straightforward.

6.1. Switching Between Devices

To switch control between your TV and your secondary device (e.g., streaming box), simply select the appropriate mode:

- For TV functions, ensure the remote is in **TV mode** (TV LED blinks three times after pressing TV Power + Up).
- For secondary device functions, ensure the remote is in **BOX+ mode** (BOX+ LED blinks three times after pressing BOX+ Power + Up).



Image: A hand holding the XGBFH remote, pointing towards a television displaying various content. Text overlay indicates '2 Device Management', illustrating the remote's ability to adapt and control one or both devices effortlessly.

6.2. Using Shortcut Buttons

The remote includes dedicated shortcut buttons for popular streaming services: Netflix, YouTube, Prime Video, and Hulu. These buttons are located under the sliding cover.

1. Slide down the bottom cover of the remote to reveal the numeric keypad and shortcut buttons.
2. Press the desired streaming service button (e.g., **Netflix**) to launch the application directly on your smart TV or streaming box, provided the function has been learned or is pre-programmed.

4 Shortcuts

Accesses to Netflix, Youtube, Prime Video, Hulu.



NETFLIX

You Tube

prime video

hulu



Image: The XGBFH Universal Remote with its sliding cover extended, highlighting the four shortcut buttons for Netflix, YouTube, Prime Video, and Hulu. A television screen displays content from a streaming service in the background.

7. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the LED indicator does not light up. Always replace both AAA batteries at the same time with new ones.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

8. Troubleshooting

If you encounter issues with your XGBFH Universal Remote, refer to the following troubleshooting tips:

- **Remote Not Responding:**
 - Check if the batteries are correctly installed and have sufficient power. Replace them if necessary.
 - Ensure there is a clear line of sight between the remote's IR emitter and the device's IR receiver. Obstructions can block the signal.
 - Verify that the remote is in the correct device mode (TV or BOX+) for the device you are trying to control.
- **Learning Function Not Working:**
 - Ensure both remotes have fresh batteries.
 - Confirm the IR emitters of both remotes are perfectly aligned and very close (1-3 cm).
 - Make sure you are pressing and holding the buttons for the correct duration during the learning process.
 - Some original remotes may use proprietary IR signals that cannot be learned.
- **Specific Buttons Not Working After Learning:**
 - Re-perform the learning process for the specific button that is not working.
 - Ensure the original remote's button is functioning correctly.
- **Volume Control Issues:**
 - If volume control is inconsistent, try re-learning the volume buttons from your original remote.
 - Ensure the remote is in the correct device mode for the device controlling the volume (e.g., TV mode for TV volume, BOX+ mode for soundbar volume).

9. Specifications

Brand	XGBFH
Model Number	722967816622
Product Dimensions	6 x 1.5 x 1 inches (approximate)
Item Weight	1.59 ounces
Batteries Required	2 x AAA batteries
Connectivity Technology	Infrared (IR)
Max Number of Devices Controlled	2 (via learning function)
Compatible Devices	Television, Streaming Box, Soundbar Audio Receiver, DVD/VCR/DVB/SAT Device, Blue-Ray DVD

10. Warranty and Support

Specific warranty information for the XGBFH Universal Big Button Remote is not provided in this manual. For details regarding warranty coverage, please refer to the product packaging or contact the retailer where the product was purchased.

For technical support or further assistance, please contact the manufacturer, XGBFH, or the seller through their official customer service channels. Contact information is typically available on the product packaging or the seller's online storefront.

