

[Manuals.plus](#) /

› [MECHEN](#) /

› MECHEN 96GB Spotify MP3 Player User Manual

MECHEN H10-B

MECHEN 96GB Spotify MP3 Player User Manual

Model: H10-B

INTRODUCTION

Thank you for choosing the MECHEN 96GB Spotify MP3 Player. This device is designed to provide a versatile and high-quality audio and video experience, powered by Android 13. With its 4-inch touch screen, extensive storage, and comprehensive connectivity options, it serves as a portable entertainment hub. This manual will guide you through the setup, operation, and maintenance of your new device.



Image: Front and back view of the MECHEN 96GB Spotify MP3 Player, showcasing its sleek design and touch screen interface.

SETUP

1. Unboxing and Initial Charge

Upon unboxing, ensure all components are present: the MP3 player, USB cable, protective film, earphones, and protective case. Before first use, fully charge the device using the provided USB cable connected to a power adapter (not included) or a computer USB port. The charging indicator will show progress.

2. Powering On/Off

- **Power On:** Press and hold the power button (usually on the side) until the screen lights up.
- **Power Off:** Press and hold the power button, then select "Power off" from the options that appear on the screen.

3. Memory Expansion

The device comes with 32GB internal memory and a 64GB SD card pre-installed, totaling 96GB. For additional storage, you can insert a Micro SD card (up to 1TB) into the designated slot. Ensure the device is powered off before inserting or removing the SD card.

96 Go de Stockage Méga

32 Go intégrés + Carte 64 Go OFFERTE – Stockez des semaines de musique sans rien supprimer.

-  **3Go**
RAM
-  **32Go**
ROM
-  **64Go**
Carte SD dans l'emballage
-  **1To**
Fente SD jusqu'à



Image: Visual representation of the device's storage capabilities, including 3GB RAM, 32GB ROM, 64GB included SD card, and support for up to 1TB external SD card.

OPERATING INSTRUCTIONS

1. Navigating the Interface

The 4-inch HD touchscreen (480x800 pixels) allows for intuitive navigation. Swipe left/right to switch between home screens, tap icons to open applications, and use gestures for various functions. The Android 13 operating system provides a familiar and user-friendly experience.

Dernier Android 13 : Plus Fluide et Sécurisé

Mises à jour de sécurité régulières + Gestion des applications en arrière-plan pour un streaming musical sans interruption.

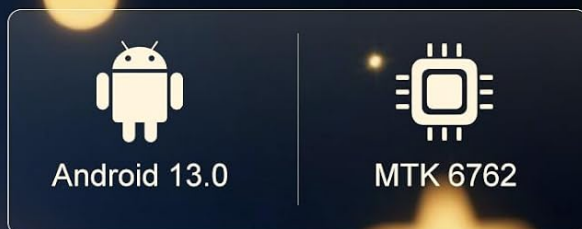
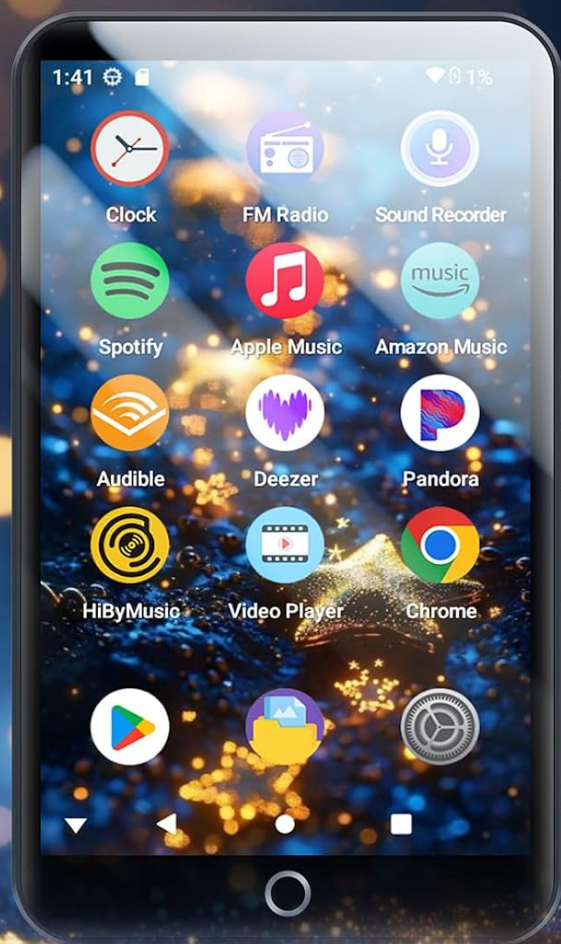


Image: The device's screen displaying the Android 13 interface with various app icons like Spotify, Apple Music, Amazon Music, Audible, Deezer, and Pandora.

2. Connecting to Wi-Fi

To access online streaming services, the Play Store, or transfer files wirelessly, connect your device to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list and enter the password if prompted.

3. Bluetooth Connectivity

Connect Bluetooth headphones, speakers, or other devices for wireless audio playback:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth accessory is in pairing mode.

4. Select the accessory from the list of available devices to pair.

Double Connectivité sans fil: Wi-Fi et Bluetooth

Transferts Wi-Fi rapides, connexions Bluetooth stables avec écouteurs, enceintes, smartphones ou systèmes audio de voiture.



Image: The device screen displaying a music player interface with Wi-Fi and Bluetooth symbols, indicating wireless connectivity options.

4. Installing and Using Applications

The device comes with pre-installed music applications like Spotify, Amazon Music, Apple Music, Pandora, and Deezer. You can download additional applications from the Google Play Store:

1. Ensure you are connected to Wi-Fi.
2. Open the **Play Store** app.
3. Search for your desired application and follow the on-screen instructions to install.

Téléchargez les Applications de votre Choix

Applications musicales préinstallées (Spotify, Amazon Music, Apple Music, Pandora, Deezer...) – Téléchargez d'autres apps depuis le Play Store selon vos envies.



Image: A collection of app icons floating above the device, symbolizing the ability to download and use various applications from the Play Store.

5. Media Playback

The player supports over 30 audio and video formats, including FLAC, APE, WAV, MP3, AAC, OGG, WMA, M4A for audio, and MP4, MKV, AVI, MOV, FLV, RMVB, DAT, MPG, TS for video. Use the pre-installed music and video player apps to manage and play your media files.

Lecture Universelle : 50+ Formats Pris en Charge

Du MP3 classique aux vidéos MKV HD – Vos fichiers lisibles instantanément.



4,0 pouces
Écran tactile
intégral



480*800px
Résolution



Angle de
vision élargi



MP4, AVI, MKV, MOV, WMV, MPEG, FLV, WebM



MP3, AAC, OGG, WMA, FLAC, ALAC, APE, WAV, DSD (DSF/DFF), MQA, AIFF



Image: The device screen showing a video playing, with icons indicating 4.0-inch touch screen, 480x800px resolution, IPS wide viewing angle, and a list of supported audio and video formats.

6. Battery Management

The 2000mAh battery provides up to 50 hours of music playback or 8 hours of video playback. To conserve battery life, utilize the built-in sleep timer which automatically stops playback after a set duration.

Batterie Rechargeable 2000 mAh

Technologie basse consommation pour profiter sans pause de musique et de films :

 **15** heures

 **8** heures



Image: An illustration depicting the 2000mAh battery capacity and its estimated usage times: 15 hours for music and 8 hours for video.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and body. Avoid abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Protection:** Use the provided protective case and screen film to prevent scratches and minor damage.
- **Battery Care:** Avoid fully discharging the battery frequently. For long-term storage, charge the battery to about 50% to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device won't turn on	Low battery; System crash	Charge the device for at least 30 minutes. If still unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Cannot connect to Wi-Fi/Bluetooth	Incorrect password; Device out of range; Bluetooth accessory not in pairing mode	Verify password. Move closer to the router/device. Ensure accessory is in pairing mode. Restart Wi-Fi/Bluetooth on the player.
Apps crashing or freezing	Insufficient memory; App bug; Outdated app	Close background apps. Clear app cache/data (Settings > Apps). Update the app from Play Store. Restart the device.
Cannot play certain media files	Unsupported format; Corrupt file	Ensure the file format is listed as supported. Try playing another file. Re-download or re-encode the file if necessary.
Short battery life	High screen brightness; Many background apps; Heavy usage	Reduce screen brightness. Close unused apps. Use sleep timer. Limit continuous video playback.

SPECIFICATIONS

Feature	Detail
Brand	MECHEN
Model Name	H10-B
Operating System	Android 13
Processor	8-core
Memory Storage Capacity	96 GB (32GB internal + 64GB SD card)
Expandable Storage	Up to 1 TB via Micro SD
Screen Size	4 Inches
Screen Resolution	480 x 800 pixels (HD Touchscreen)
Connectivity Technology	Bluetooth 4.1, USB, Wi-Fi
Special Features	High-resolution audio, Built-in speaker, Touch screen, Equalizer
Battery Capacity	2000 mAh
Battery Life (approx.)	50 hours (music), 8 hours (video)
Supported Audio Formats	FLAC, APE, WAV, MP3, AAC, OGG, WMA, M4A
Supported Video Formats	MP4, MKV, AVI, MOV, FLV, RMVB, DAT, MPG, TS

Feature	Detail
Color	Black
Included Components	1 USB cable, 1 protective film, 1 MP3 player, 1 pair of earphones, 1 protective case

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official MECHEN website. Keep your proof of purchase for warranty claims.

If you encounter issues not covered in this manual, please contact MECHEN customer service for assistance.

© 2024 MECHEN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is my MECHEN H10-B 96GB Android MP3/MP4 Player showing an error that no SD card is inserted even though I have one with files in it?

If your MECHEN H10-B (Android 13) player is reporting that no SD card is inserted despite one being present, please try the following troubleshooting steps: Power Cycle: According to the manual, you should ensure...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0F4MVPV32>

More documents and user manuals: **<https://manuals.plus/>**