

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mycket](#) /

› [Mycket Portable DAB/DAB+ FM Digital Radio User Manual](#)

Mycket d37a228e-2320-430d-a966-ac6ac695cbe3

Mycket Portable DAB/DAB+ FM Digital Radio User Manual

Model: d37a228e-2320-430d-a966-ac6ac695cbe3

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Mycket Portable DAB/DAB+ FM Digital Radio. This device offers versatile audio entertainment with DAB/DAB+ digital radio, FM radio, and Bluetooth 5.0 connectivity. It features a 2.4-inch color display, dual alarm functions, and a built-in rechargeable battery for portable use.

PACKAGE CONTENTS

Please check the package for the following items:

- Mycket Portable DAB/DAB+ FM Digital Radio
- USB-C Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the radio's components and controls.

DAB/DAB+/FM & Bluetooth Radio

Upgraded 4-in-1 radio with the advanced technology,
you will have a premier digital radio experience

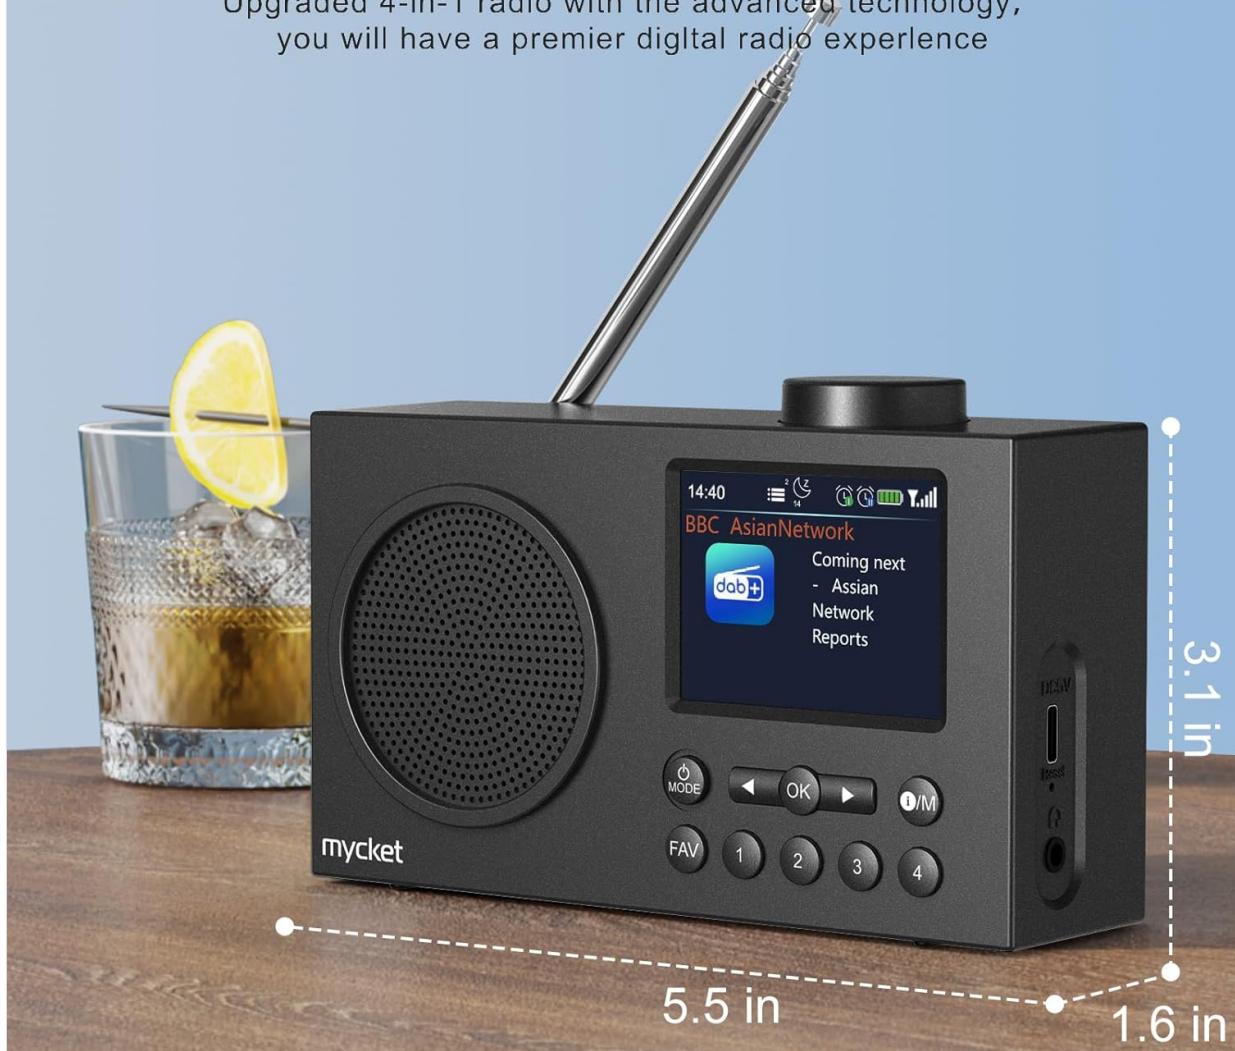


Image: Front and side view of the Mycket Portable DAB/DAB+ FM Digital Radio, showing its compact size (approximately 5.5 inches wide, 3.1 inches high, 1.6 inches deep), extendable antenna, speaker, 2.4-inch color display, control buttons (Mode, OK, O/M, FAV, 1-4), and USB-C port.

Key Features:

- **DAB/DAB+ Digital Radio:** High-quality digital radio reception.
- **FM Radio:** Standard analog radio reception.
- **Bluetooth 5.0:** Wireless audio streaming from compatible devices.
- **2.4-inch Color Display:** Clear display for station information, time, and settings.
- **Dual Alarm:** Set two independent alarms.
- **40 Presets:** Store up to 20 DAB/DAB+ and 20 FM stations for quick access.
- **Rechargeable Battery:** Built-in 2200mAh battery for portable use (up to 12+ hours playtime).
- **Hi-Fi Sound:** Integrated speaker designed for clear audio output.

SETUP

1. Charging the Battery

Before first use, fully charge the radio. Connect the supplied USB-C cable to the radio's USB-C port and the

other end to a compatible USB power adapter (not included) or a computer USB port. The charging indicator on the display will show charging status. A full charge provides over 12 hours of playback.



Image: The Mycket Portable DAB/DAB+ FM Digital Radio displaying battery icon, indicating sufficient charge for extended use.

2. Antenna Setup

Extend the telescopic antenna fully for optimal DAB/DAB+ and FM radio reception. Adjust its position for the best signal quality.

3. Initial Power On and Language Selection

1. Press and hold the **O/M** button (On/Mode) to power on the radio.
2. Upon first power-on, you may be prompted to select a language. Use the navigation buttons (left/right arrows or rotary knob if available) to select your preferred language and press **OK** to confirm.

4. Automatic Station Scan (DAB/DAB+)

After language selection, the radio will typically initiate an automatic scan for DAB/DAB+ stations. This process may take a few minutes. Once complete, the radio will tune to the first available station.

AUTO SCAN & 40 PRESET

Auto scan radio stations and easy to save more than 40 presets with FAV button (20DAB & 20FM)



Image: The Mycket Portable DAB/DAB+ FM Digital Radio screen showing a radio station and indicating the auto scan and 40 preset features (20 DAB & 20 FM).

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press and hold the **O/M** button.
- **To Power Off:** Press and hold the **O/M** button until the display turns off. A short press of the **O/M** button will cycle through modes (DAB, FM, Bluetooth).

Mode Selection

Press the **MODE** button repeatedly to switch between DAB, FM, and Bluetooth modes.

DAB/DAB+ Radio Operation

1. Switch to DAB mode using the **MODE** button.
2. If no stations are found or you wish to rescan, navigate to the "Full Scan" option in the menu (usually accessed by pressing **OK** or a menu button) and confirm.
3. Use the left/right navigation buttons or the rotary knob to browse available stations. Press **OK** to select

a station.

4. **Saving Presets:** While listening to a station, press and hold the **FAV** button or one of the numbered preset buttons (1-4) to save the current station. Follow on-screen prompts to assign a preset number (up to 20 DAB presets).
5. **Recalling Presets:** Short press the **FAV** button to access the preset list, then use navigation buttons to select. Alternatively, short press a numbered preset button (1-4) for direct access.

FM Radio Operation

1. Switch to FM mode using the **MODE** button.
2. **Auto Scan:** Press and hold the **OK** button to perform an auto scan for FM stations. The radio will scan and save available stations.
3. **Manual Tuning:** Use the left/right navigation buttons to fine-tune the frequency.
4. **Saving Presets:** Similar to DAB mode, press and hold the **FAV** button or a numbered preset button (1-4) to save the current FM station (up to 20 FM presets).
5. **Recalling Presets:** Short press the **FAV** button or a numbered preset button (1-4).

Bluetooth Mode Operation

Connect your smartphone, tablet, or other Bluetooth-enabled device to stream audio wirelessly.

1. Switch to Bluetooth mode using the **MODE** button. The radio will display "Bluetooth Pairing" or similar.
2. On your external device, enable Bluetooth and search for available devices. Select "Mycket D009" (or similar name) from the list.
3. Once connected, the radio will indicate "Bluetooth Connected," and you can play audio from your device through the radio.

BLUETOOTH 5.0

Enjoy your favorite music by connecting Bluetooth "Mycket D009"



Image: The Mycket Portable DAB/DAB+ FM Digital Radio displaying "Bluetooth Connected" while a smartphone shows "Mycket D009" as a connected device, illustrating Bluetooth 5.0 connectivity.

Alarm Function

The radio supports two independent alarms.

1. Access the alarm settings through the radio's menu. (Specific button for menu access may vary, typically **OK** or a dedicated menu button).
2. Select "Alarm 1" or "Alarm 2" to configure.
3. Set the alarm time, source (DAB, FM, or Buzzer), frequency (daily, weekdays, weekends, once), and volume.
4. Ensure the alarm is enabled ("On") and save your settings.

Sleep Timer

The sleep timer allows the radio to automatically turn off after a set period.

1. Access the sleep timer settings through the radio's menu.
2. Select the desired duration (e.g., 15, 30, 60, 90 minutes). The radio will power off automatically after the selected time.

Volume Control

Adjust the volume using the rotary knob located on the top of the radio. Rotate clockwise to increase volume, counter-clockwise to decrease.

Display Settings

The 2.4-inch color display provides clear information. You can adjust display brightness through the system settings menu to suit your environment. The display may dim automatically after a period of inactivity to conserve battery life.



Image: Close-up of the Mycket Portable DAB/DAB+ FM Digital Radio's 2.4-inch TFT color display, showing station information and time, highlighting its readability.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the radio's surface. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the radio regularly, especially if it will not be used for an extended period. Store in a cool, dry place.
- **Environment:** Keep the radio away from extreme temperatures, direct sunlight, dust, and moisture.

TROUBLESHOOTING

Problem	Possible Cause / Solution
No power / Radio does not turn on.	Ensure the battery is charged. Connect the USB-C cable to a power source. Press and hold the O/M button for several seconds to power on.
Poor DAB/FM reception.	Fully extend and adjust the telescopic antenna. Move the radio to a location with better signal (e.g., near a window). Perform a full scan for stations in DAB mode or auto scan in FM mode.
No sound.	Increase the volume using the rotary knob. Ensure the radio is not muted. Check if the station is broadcasting.
Bluetooth device cannot connect.	Ensure the radio is in Bluetooth pairing mode. Make sure Bluetooth is enabled on your external device. Move the external device closer to the radio. Forget "Mycket D009" on your device and try pairing again.
Radio freezes or behaves unexpectedly.	Perform a factory reset (refer to the system settings menu for this option). This will erase all presets and settings. Power off the radio by holding the O/M button, then power it back on.

SPECIFICATIONS

Brand	Mycket
Model Number	d37a228e-2320-430d-a966-ac6ac695cbe3
Connectivity Technology	Bluetooth 5.0, USB
Tuning Technology	DAB+
Supported Radio Bands	DAB, DAB+, FM
Special Features	Bluetooth 5.0, Dual Alarm
Compatible Devices	Smartphone, Tablet, MP3 Player
Power Source	Battery Powered (Rechargeable)
Battery Capacity	2200mAh (approx. 12+ hours playtime)
Display	2.4-inch Color Display
Product Dimensions	6L x 12W x 16H centimeters (approx. 2.36L x 4.72W x 6.3H inches)
Included Components	USB-C Cable

WARRANTY AND SUPPORT

Your Mycket Portable DAB/DAB+ FM Digital Radio comes with a **12-month guarantee** from the date of

purchase. For any product-related inquiries or technical assistance, please contact our customer service. We aim to provide support within **24 hours**.

Please retain your proof of purchase for warranty claims.

© 2025 Mycket. All rights reserved.