



100068372

# User Manual: Original TV Voice Remote Control for ONN Roku TV

Model: 100068372

## INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your new Original TV Voice Remote Control, designed specifically for ONN Roku TV models, including the 42-inch Model 100068372. This remote offers convenient control and voice search capabilities for your television.

## SETUP

Follow these steps to prepare your remote control for use with your ONN Roku TV.

### 1. Verify TV Model Compatibility

Before proceeding, ensure your television is an ONN Roku TV and specifically model 100068372. You can verify your TV's model number by checking the sticker on the back of your television or by navigating to the "Settings" menu on your TV and selecting "About TV."

### 2. Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries (not included). To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

**Important:** Always use new alkaline batteries and replace both batteries at the same time.

### 3. Initial Pairing with Your TV

This remote control is designed for easy pairing. No complex programming or setup is typically required beyond the initial pairing process.

1. Ensure your ONN Roku TV is powered on.
2. Restart your TV. This can often be done by unplugging the TV from the power outlet for 10-15 seconds, then

plugging it back in.

3. Once the TV has restarted, hold the new remote control near the TV. The remote should automatically attempt to pair. If it does not pair immediately, press and hold the pairing button (if available, often in the battery compartment or a small button on the remote itself, though this model typically pairs automatically upon TV restart).
4. A confirmation message should appear on your TV screen once the remote is successfully paired and ready for use.

If you encounter difficulties, refer to the Troubleshooting section or contact support.



onn. • Roku TV

Figure 1: Original TV Voice Remote Control for ONN Roku TV. This image displays the full layout of the remote, highlighting the power button, navigation controls, media playback buttons, and dedicated streaming service buttons.

## OPERATING INSTRUCTIONS

---

Familiarize yourself with the functions of your remote control buttons.

- **Power Button** ( ): Turns the TV on or off.
- **Back Button** (←): Returns to the previous screen or menu.
- **Home Button** (△): Navigates to the Roku Home screen.
- **Directional Pad (Up, Down, Left, Right)**: Used to navigate through menus and select items.
- **OK Button**: Confirms a selection or action.
- **Voice Search Button** ( ): Activates the voice search feature. Press and hold while speaking your command or search query.
- **Instant Replay Button** (↶): Jumps back a few seconds in video playback.
- **Sleep Timer Button** (⏸): Accesses sleep timer settings.
- **Asterisk Button** (\*): Opens options menu for selected content or app.
- **Rewind Button** (⏮): Rewinds video playback.
- **Play/Pause Button** (⏮): Plays or pauses video playback.
- **Fast Forward Button** (⏭): Fast forwards video playback.
- **Dedicated App Buttons (Netflix, Apple TV+, Paramount+, HBO Max)** Provide quick access to these streaming applications.

For voice search, ensure you speak clearly and hold the voice button until you have finished your command.

## MAINTENANCE

---

Proper care will extend the life of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can cause internal damage.

## TROUBLESHOOTING

---

If you experience issues with your remote control, try the following solutions:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with new 1.5V AAA alkaline batteries.
  - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
  - Try re-pairing the remote by restarting your TV (unplugging and plugging back in) and holding the remote near

the TV.

- **Voice Search Not Working:**

- Ensure you are pressing and holding the voice button while speaking.
- Speak clearly and directly into the remote's microphone.
- Check your TV's network connection, as voice search requires an internet connection.

- **Intermittent Functionality:**

- This could indicate low battery power. Replace the batteries.
- Ensure the remote is within effective range of the TV.

If the problem persists after trying these steps, please contact customer support for further assistance.

## SPECIFICATIONS

Attribute	Detail
Product Name	Original TV Voice Remote Control
Brand	Generic
Model Number	100068372
Compatible Devices	ONN Roku TV (specifically Model 100068372)
Special Feature	Voice Search
Color	Black
Power Source	2 x 1.5V AAA Alkaline Batteries (not included)
Max Number of Supported Devices	1
Manufacturer	generic
Country of Origin	USA

## SUPPORT

If your TV model is not listed as compatible, or if you encounter any difficulties connecting or operating the remote control that are not resolved by the troubleshooting steps, please contact the manufacturer or seller for assistance. They will be happy to help you.

Refer to your product packaging or purchase documentation for specific contact information.