



[Manuals.plus](#) /

› [Nillkin](#) /

› Nillkin Foldable Wireless Keyboard with Touchpad and Numeric Pad User Manual

Nillkin DZD3JCWZG01CA

Nillkin Foldable Wireless Keyboard with Touchpad and Numeric Pad User Manual

Model: DZD3JCWZG01CA

PRODUCT OVERVIEW

The Nillkin Foldable Wireless Keyboard is a portable, full-size keyboard designed for productivity on the go. It features an integrated touchpad and a convertible numeric pad, offering a comprehensive input solution for various devices. Its compact, foldable design ensures easy transport, while robust construction provides durability.



Image: The Nillkin Foldable Wireless Keyboard, showcasing its compact design.

SETUP GUIDE

1. Charging the Keyboard

Before initial use, fully charge the keyboard using the provided USB-C cable. Connect the cable to the keyboard's charging port and a compatible USB power source. The charging indicator light will show the charging status. A full charge provides up to 30 hours of typing or 140 days of standby time.

140 Days Standby on One Charge

Perfect for Business Trips



Typing



Standby



USB-C
charging port

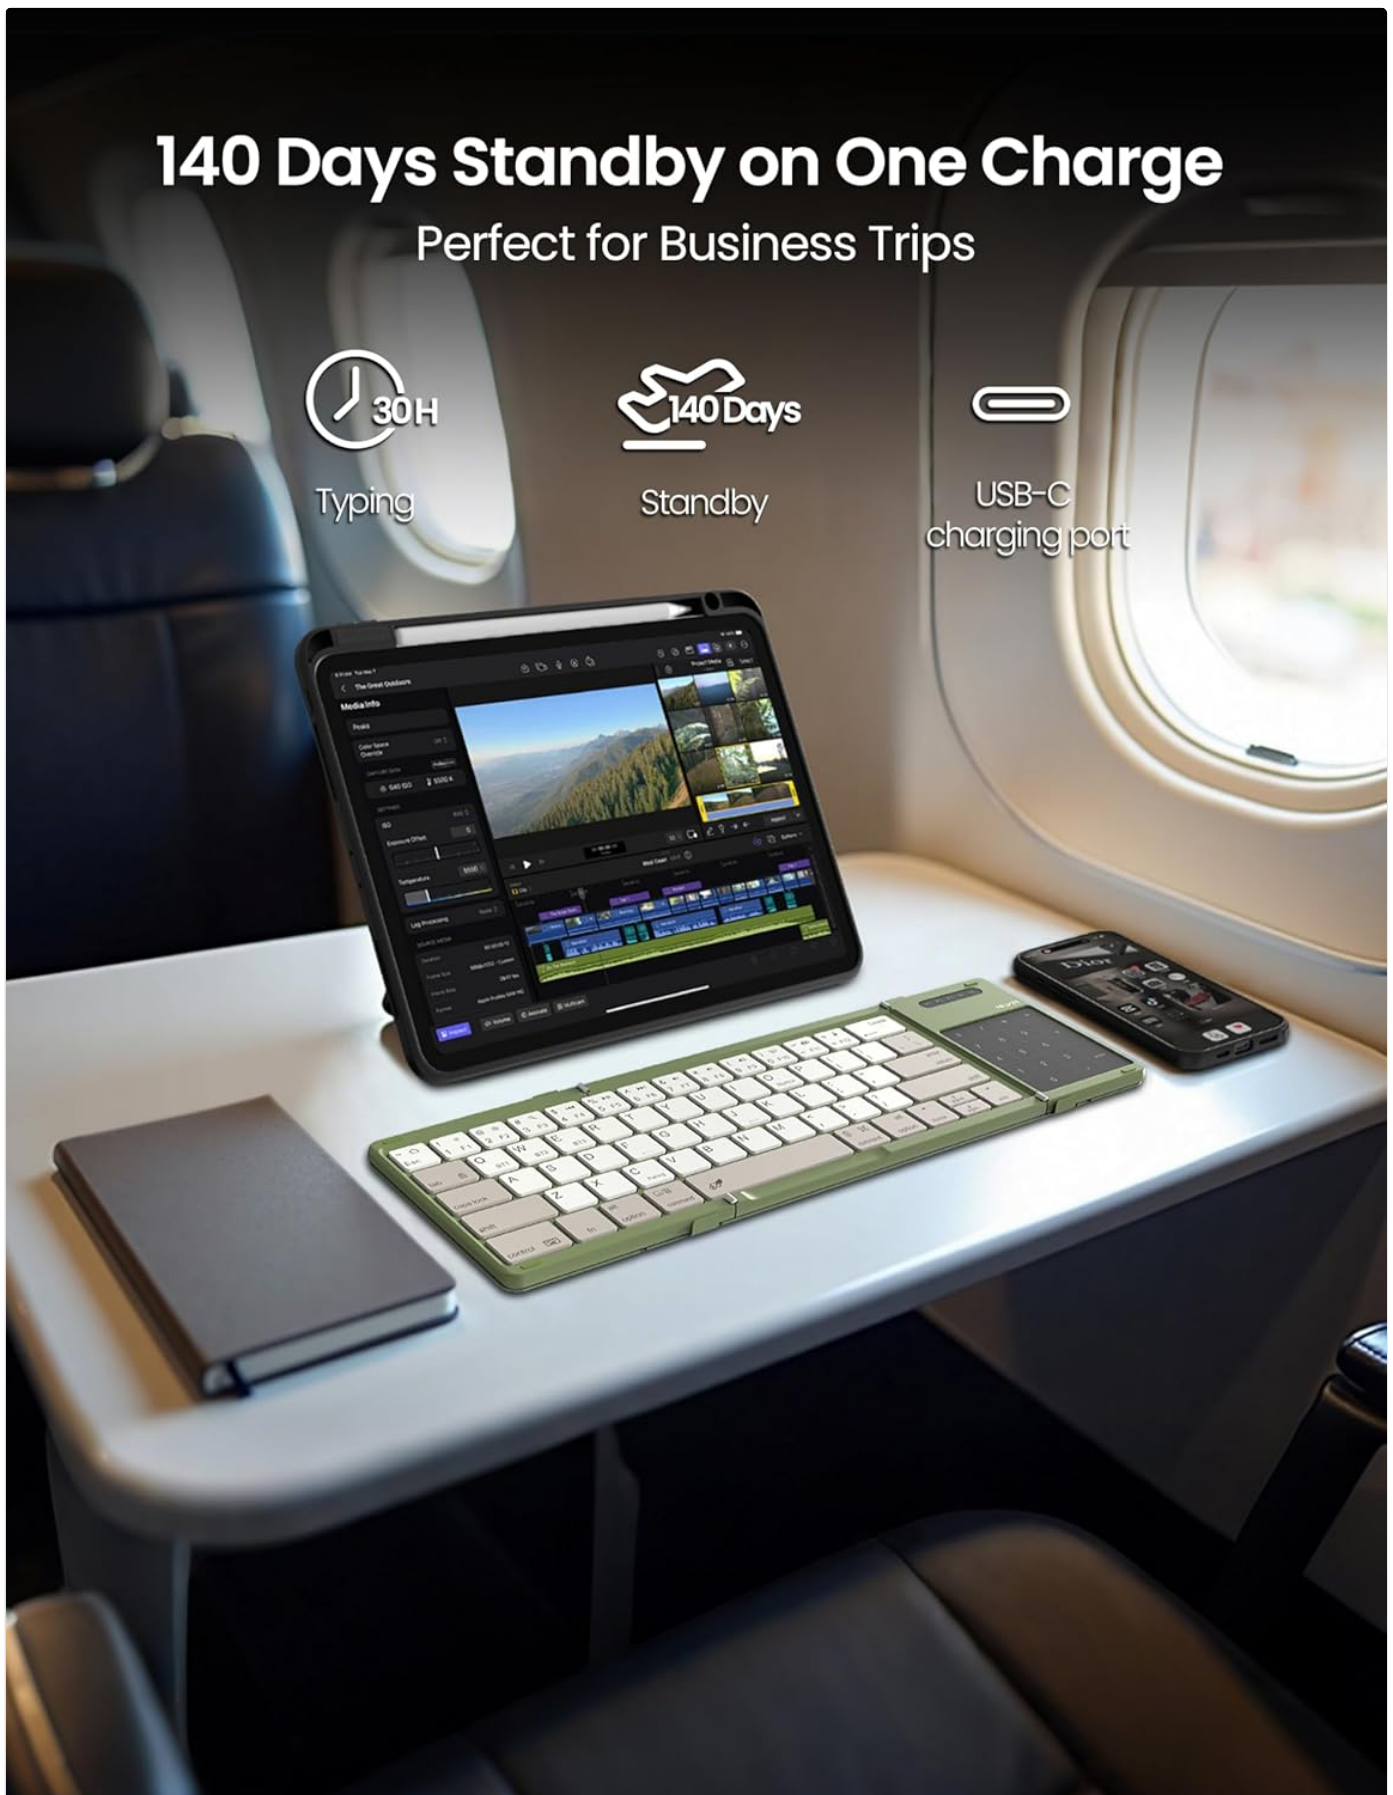


Image: The keyboard connected to a power source, illustrating its long battery life and USB-C charging port.

2. Powering On/Off

To power on the keyboard, unfold it completely. The keyboard will automatically power on. To power off, fold the keyboard. It will automatically enter sleep mode when folded.

3. Bluetooth Pairing

The Nillkin keyboard can connect to up to three devices simultaneously via Bluetooth 5.0.

1. **Unfold the keyboard** to power it on.
2. **Activate Bluetooth** on your device (PC, laptop, tablet, smartphone).
3. **Press and hold** one of the Bluetooth channel keys (BT1, BT2, or BT3) for 3-5 seconds until the indicator light flashes, indicating pairing mode.
4. On your device, search for Bluetooth devices and select "**Nillkin Keyboard**" (or similar name) from the list.
5. Follow any on-screen prompts to complete the pairing process. The indicator light on the keyboard will stop flashing once successfully paired.
6. To switch between paired devices, simply press the corresponding Bluetooth channel key (BT1, BT2, or BT3) once. The keyboard will automatically reconnect to the selected device.

Stably Connect 3 Devices

Perfect for Multi - screen Collaborative Work



Advanced Bluetooth 5.0 chip, more stable with lower latency



Support and automatically recognize multiple systems

*For other systems or devices, please contact customer service to confirm compatibility.

Connect up to 3 devices, quickly switch channels with one click



33 feet

Maximum connection distance

*Some shortcuts and multi-touch gestures are not supported in macOS.

Image: The keyboard connected to multiple devices, highlighting its Bluetooth 5.0 multi-device pairing capability.

OPERATING INSTRUCTIONS

1. Typing Experience

The keyboard features a standard QWERTY layout with well-spaced, scissor-structured keys for a comfortable and efficient typing

experience. A full row of function keys provides quick access to common commands.

Standard Full-Size Keyboard

Comfortable & Efficient



Scissor-structured Keys

Well-Space Large Keys

A Full Row of Function Keys

*When using the Windows system, "command" key = "Windows" key

The image features a green NILLKIN keyboard with a full row of function keys. The keyboard is shown next to a laptop keyboard. The function keys include icons for home, brightness up/down, search, media playback, volume, and other system functions. The keyboard has a scissor-structured key mechanism and well-spaced, large keys.

Image: Detailed view of the keyboard layout, emphasizing key structure and function keys.

2. Touchpad Functionality


The integrated sensitive multi-touch touchpad allows for precise navigation and clicking. It supports various multi-touch gestures for enhanced efficiency, including scrolling, swiping, zooming, and application switching. The touchpad also features automatic

palm rejection to prevent accidental input during typing.

- **Single-finger tap:** Left click
- **Two-finger tap:** Right click
- **Two-finger scroll:** Scroll up/down or left/right
- **Pinch-to-zoom:** Zoom in/out
- *Note: Specific multi-touch gestures may vary or not be fully supported on iOS and macOS.*

Larger Sensitive Multi-touch Trackpad

Smooth Navigation with Fingertips

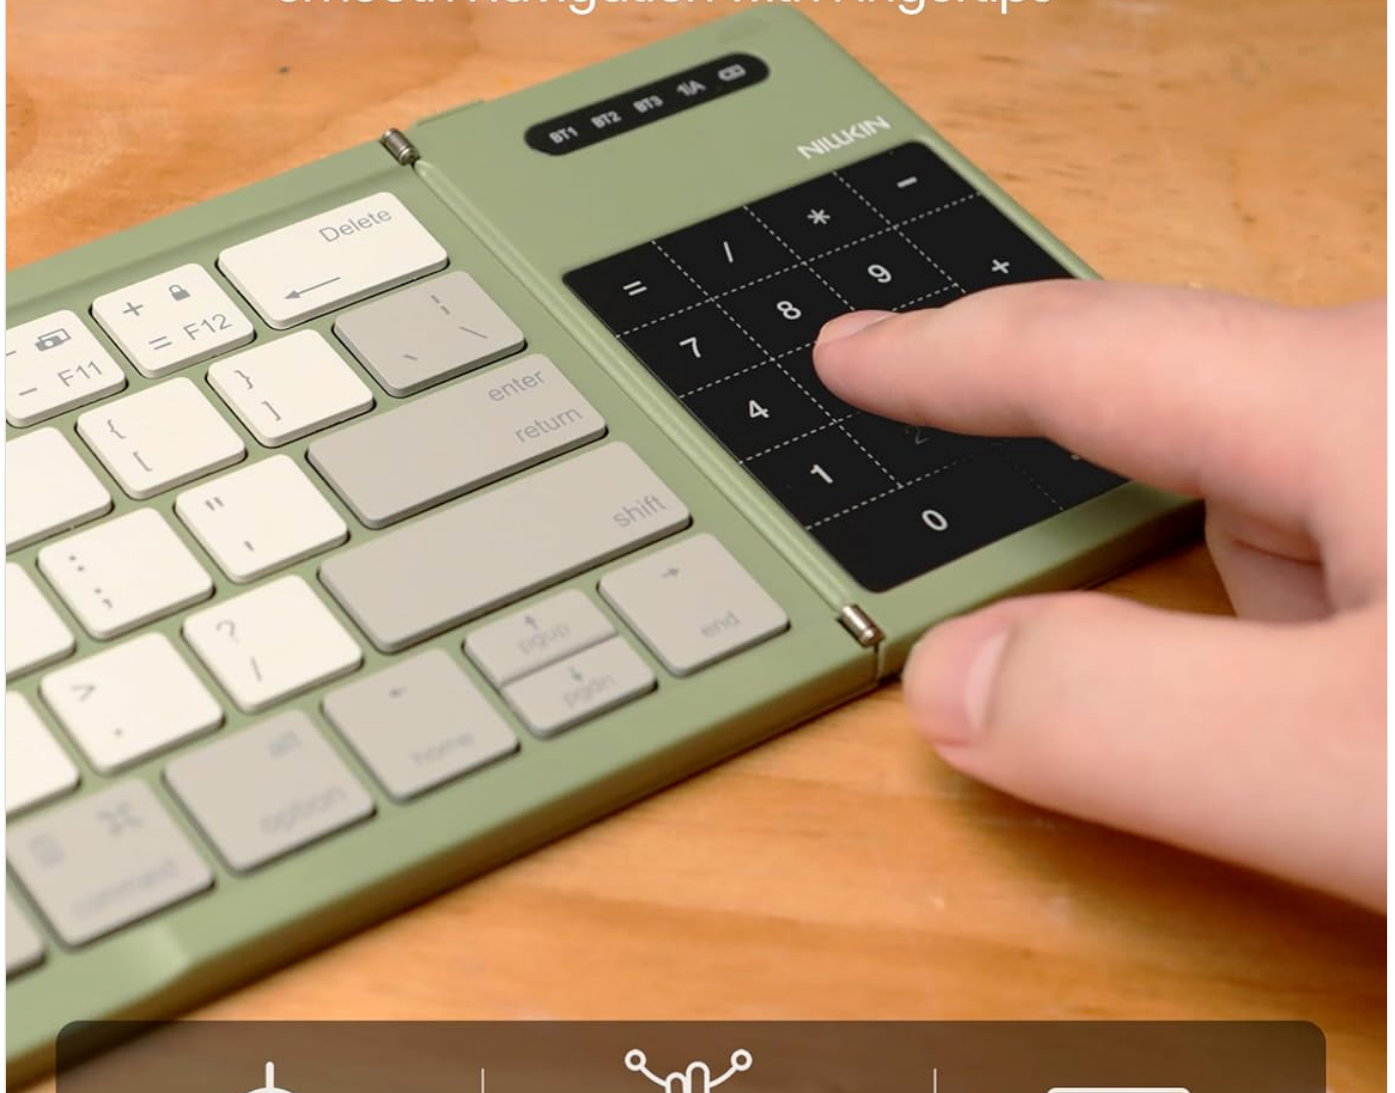

Sensitive & Precise

Perfect for precision tasks
Editing a spreadsheet
and selecting text easily



Support Multi-Touch Gestures*

Simply navigating
with intuitive and familiar
Multi-Touch gestures



Palm Rejection

Anti-mistouch while typing
Concentrate on work

*macOS only supports move the cursor, click, right - click, drag, scroll and zoom.

Image: A user interacting with the touchpad, illustrating its multi-touch capabilities.

3. Numeric Keypad Mode

The touchpad can be quickly switched to a numeric keypad for efficient data entry. To activate the numeric keypad, press the dedicated numeric keypad toggle key (usually indicated by a calculator icon or "Num Lock" function). Press it again to revert to touchpad mode.

Numeric Keypad On the Touchpad

Quickly Switch to Enter Numbers*



Image: The touchpad transformed into a numeric keypad, ready for number input.

4. System Compatibility

The keyboard is compatible with a wide range of operating systems, including Android, Windows, iPadOS, macOS, iOS, and Chrome OS. It automatically recognizes the operating system of the connected device for optimal functionality.

5. Portable Workstation Setup

The Nillkin Foldable Wireless Keyboard is designed to create a portable workstation anywhere. Its compact size when folded allows it to be easily carried, and when unfolded, it provides a full-size typing and navigation experience, making it suitable for various environments such as travel, business trips, or cafes.

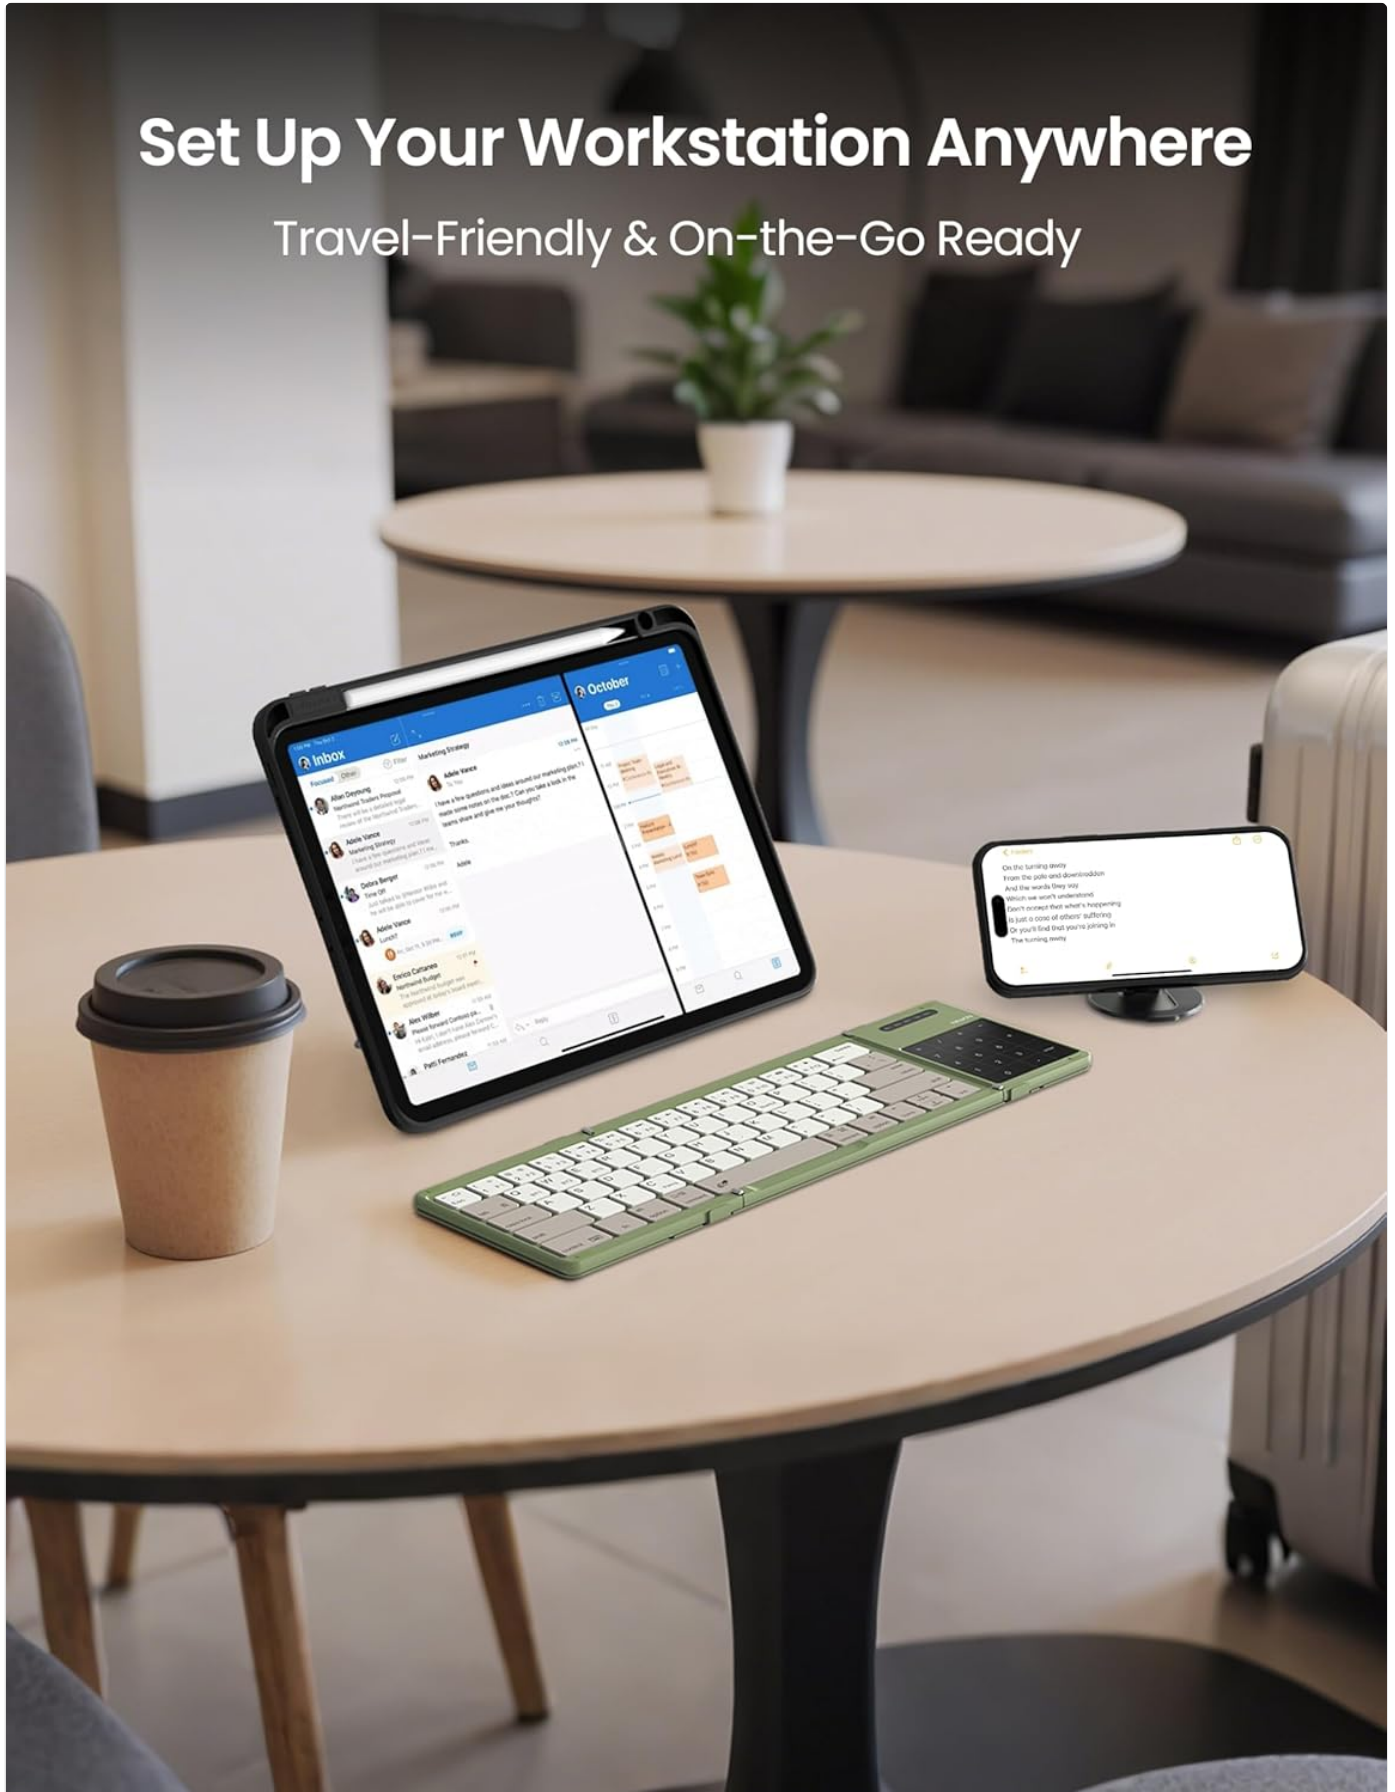


Image: The keyboard in use with multiple devices, illustrating its role in a portable workstation setup.

1. Cleaning

To clean the keyboard, use a soft, damp cloth. For the silicone leather back, a mild cleaning solution can be used if necessary. Avoid harsh chemicals or abrasive materials that could damage the surface. Ensure the keyboard is powered off and disconnected from any power source before cleaning.

2. Storage

When not in use, fold the keyboard to protect the keys and touchpad. The strong magnetic attraction ensures the keyboard remains securely folded. Store it in the provided storage bag to prevent scratches and dust accumulation.

Fold It Up and Go

Can Be Easily Put into a Bag, Even a Pocket



Image: The keyboard folded and ready for storage or transport, demonstrating its portability.

3. Durability

The keyboard is constructed with a premium silicone leather back, offering superior resistance to wear, scratches, and stains compared to synthetic leather. The robust metal hinge is designed to withstand over 50,000 opening and closing cycles, ensuring long-term reliability.

Built to Last

Upgraded Silicone Leather & Hinge



Premium Silicone Leather

Far more wear-resistant, scratch-resistant, stain-resistant than PU leather

Sturdy Metal Hinge

Smooth rotation feel, endure over 50,000 opening/closing cycles



Image: Detailed view of the keyboard's durable silicone leather material and sturdy metal hinge.

TROUBLESHOOTING

Keyboard Not Connecting via Bluetooth

- **Ensure Keyboard is Charged:** A low battery can prevent successful pairing. Charge the keyboard fully.

- **Check Pairing Mode:** Make sure the keyboard is in pairing mode (indicator light flashing) by pressing and holding a BT channel key.
- **Device Bluetooth On:** Verify that Bluetooth is enabled on your host device.
- **Forget Device:** If previously paired, try "forgetting" or "removing" the keyboard from your device's Bluetooth settings and then re-pair.
- **Distance:** Ensure the keyboard is within the 10-meter (33 feet) Bluetooth range of your device.
- **Interference:** Move away from other wireless devices that might cause interference.

Touchpad Not Responding or Gestures Not Working

- **Check Numeric Pad Mode:** Ensure the touchpad is not in numeric keypad mode. Toggle it back to touchpad mode if necessary.
- **Clean Touchpad:** Ensure the touchpad surface is clean and free of debris.
- **OS Limitations:** Remember that some multi-touch gestures may not be fully supported on iOS and macOS.
- **Restart:** Try powering off and on both the keyboard and your host device.

Keys Not Responding

- **Check Connection:** Ensure the keyboard is properly connected via Bluetooth.
- **Recharge:** A very low battery might cause intermittent key response.
- **Restart:** Power cycle the keyboard and the connected device.

SPECIFICATIONS

Brand	Nilkin
Model Number	DZD3JCWZG01CA
Connectivity Technology	Bluetooth 5.0
Compatible Devices	Laptop, PC, Smartphone, Tablet, Smart TV (Android, Windows, iPadOS, macOS, iOS, Chrome OS)
Keyboard Layout	QWERTY
Number of Keys	64
Special Features	Numeric Pad, Touchpad, Foldable, Rechargeable, Silent Keys
Folded Dimensions (L x W x H)	18 x 10.7 x 1.5 cm (7.1 x 4.2 x 0.6 inches)
Unfolded Dimensions (L x W x H)	34 x 10.7 x 0.8 cm
Weight	0.2 kg
Battery Life	Up to 30 hours typing, 140 days standby
Material	Silicone Leather, ABS
Hinge Durability	Over 50,000 cycles
Maximum Connection Range	10 meters (33 feet)
Power Source	Battery Powered
What's in the Box	Foldable Wireless Keyboard, USB Cable, Storage Bag, User Manual

WARRANTY INFORMATION

Specific warranty details for the Nillkin Foldable Wireless Keyboard are typically provided with the product packaging or on the official Nillkin website. Please refer to these sources for the most accurate and up-to-date warranty terms and conditions.

CUSTOMER SUPPORT

For any questions, technical assistance, or issues not covered in this manual, please contact Nillkin customer service. Contact information can usually be found on the product packaging, the official Nillkin website, or through your retailer.

Nillkin is committed to providing satisfactory customer service and support for their products.