

Cubiker B0F4QJ558D

Cubiker Electric Standing Desk (40x24 Inch, Ivory White) Instruction Manual

Model: B0F4QJ558D

INTRODUCTION

Thank you for choosing the Cubiker Electric Standing Desk. This height-adjustable workstation is designed to provide a versatile and ergonomic environment for your daily tasks. This manual contains important information regarding the assembly, operation, maintenance, and troubleshooting of your new desk. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

For your safety and to prevent damage to the product, please adhere to the following guidelines:

- Always keep children and pets away from the desk when in use.
- Use the security lock feature to prevent unintended operation, especially by children.
- Do not place heavy objects on the desk that exceed its weight capacity or could cause it to tip over.
- Always follow the assembly instructions carefully to ensure proper setup and stability.
- Ensure all cables are properly managed to avoid tripping hazards or damage during height adjustments.
- Do not attempt to disassemble or repair the motor or control system yourself. Contact customer support if issues arise.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact Cubiker customer support.

- Desktop (Splice Board)
- Desk Legs (2)
- Crossbeam
- Feet (2)
- Control Panel with 4 Memory Buttons

- Motor and Lifting Mechanism
- Power Adapter and Cable
- Hardware Kit (screws, Allen wrench, etc.)
- Cable Management Clips/Ties
- Instruction Manual

SETUP AND ASSEMBLY

The Cubiker Electric Standing Desk is designed for quick and easy assembly, typically completed within 30 minutes. All components are clearly labeled to simplify the process.

1. **Attach the Crossbeam:** Securely attach the crossbeam to the desk legs using the provided hardware. Ensure all screws are tightened.
2. **Install the Feet:** Install the feet onto the bottom of the desk legs. These provide strong support and stability.
3. **Attach Side Wings (if applicable):** If your model includes side wings, attach them to the frame for enhanced stability.
4. **Secure the Desktop:** Place the desktop onto the assembled frame. Align the pre-drilled holes and secure the desktop with the appropriate screws. Ensure the desktop is centered and flush.
5. **Connect Control Panel and Power:** Mount the control panel to the underside of the desktop. Connect the motor cable and power adapter to the control box, then plug the power adapter into a wall outlet.

30 Minutes Quick Setup

All Accessories are Pre-Labeled Clearly



* Designed for Healthy Living and Productive Work

Image: A person kneeling to assemble the desk frame, with the desktop and control panel laid out. This illustrates the quick setup process.



Ultra-high-load-bearing tabletop

Image: A visual guide detailing the four main steps for quick installation: attaching the crossbeam, installing feet, attaching side wings, and securing the tabletop.

OPERATING INSTRUCTIONS

Your Cubiker Electric Standing Desk features an intuitive control panel for easy height adjustment and memory settings.



Image: A detailed view of the desk's control panel, highlighting buttons for height adjustment, memory presets, child lock, and anti-collision features.

Height Adjustment

- **Up/Down Buttons:** Press and hold the **Up** (▲) or **Down** (▼) button to adjust the desk to your desired height. Release the button to stop. The desk adjusts smoothly between 28.3 inches and 46.5 inches.

Memory Presets

The desk supports up to 4 programmable height settings for quick transitions between preferred sit and stand positions.

1. **Set a Memory Position:** Adjust the desk to your desired height using the Up/Down buttons.
2. Press the **M** button, then immediately press one of the numbered memory buttons (**1, 2, 3, or 4**). The display will show 'S-' followed by the number, indicating the height is saved.
3. **Recall a Memory Position:** Press the corresponding numbered memory button (**1, 2, 3, or 4**). The desk will automatically move to the saved height.

Child Lock Feature

To prevent accidental operation, especially by children, activate the child lock.

- **Activate Lock:** Press and hold the **Lock** button (usually indicated by a padlock icon) for 3 seconds until the display shows 'LOC'. All buttons will be disabled.
- **Deactivate Lock:** Press and hold the **Lock** button again for 3 seconds until 'LOC' disappears from the display. Buttons will now be active.

Anti-Collision System

The desk is equipped with an automatic anti-collision technology. If the desk encounters an obstacle during height adjustment, it will stop and reverse slightly to prevent damage.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Cubiker Electric Standing Desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cable Management:** Periodically check and organize cables to prevent tangling or damage during desk movement.
- **Fastener Check:** Every few months, check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Motor Inspection:** Listen for any unusual noises during operation. If you hear grinding or straining, discontinue use and contact support.

TROUBLESHOOTING

If you encounter issues with your desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk does not move or respond to buttons.	Power disconnected, child lock active, motor overload.	Check power connection. Deactivate child lock. Unplug for 10 minutes, then plug back in to reset.
Desk moves unevenly or makes unusual noises.	Loose connections, obstruction, damaged component.	Check all assembly connections. Ensure no obstructions. Reduce weight on desk. Contact support if issue persists.
Display shows an error code.	Specific system error.	Refer to the full manual for specific error codes or contact customer support with the code.
Memory presets are not saving or recalling correctly.	Incorrect saving procedure.	Ensure you press 'M' then the number button immediately. Try resetting the desk by unplugging it for 10 minutes.

If troubleshooting steps do not resolve the issue, please contact Cubiker customer support for assistance.

SPECIFICATIONS

Key specifications for the Cubiker Electric Standing Desk (Model B0F4QJ558D):

- **Brand:** Cubiker
- **Model:** B0F4QJ558D
- **Desk Design:** Computer Desk
- **Product Dimensions (D x W x H):** 60D x 100W x 75H centimetres (approx. 23.6D x 39.4W x 29.5H inches)
- **Size:** 40x24 Inch (Desktop)
- **Color:** Ivory White
- **Style:** Modern
- **Minimum Height:** 28.3 inches
- **Maximum Height:** 46.5 inches
- **Base Material:** Metal (Alloy Steel Frame)
- **Top Material Type:** FSC-Certified Wood
- **Finish Type:** Laminated
- **Special Features:** Adjustable Height, Electric, Ergonomic, 4 Memory Buttons, Security Lock
- **Included Components:** Splice Board, Security Lock, 4 Memory Buttons
- **Manufacturer:** CUBIKER

Product Dimensions

Designed For Your Needs



Image: A visual representation of the desk's dimensions, including desktop size (39.4" x 23.6") and height adjustment range (28.3" to 46.5").

WARRANTY AND SUPPORT

Cubiker provides a limited warranty for this product against defects in materials and workmanship under normal use. For specific warranty terms, duration, and conditions, please refer to the warranty card included with your purchase or contact Cubiker customer support directly.

For technical assistance, missing parts, or warranty claims, please contact the seller or Cubiker customer support through the platform where the product was purchased. Please have your model number (B0F4QJ558D) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What is the length between the two legs on the Cubiker 40x24 Electric Standing Desk (Model B0F4QJ558D)?

The provided manual context does not specify the exact distance or length between the two legs of the 40x24 inch Cubiker Electric Standing Desk (Model B0F4QJ558D). It only notes the overall desktop dimensions, which...

[Read full answer](#)