

## SimpMyloobe HG1589

# SimpMyloobe HG1589 Portable Countertop Dishwasher User Manual

Model: HG1589

[Introduction](#)   [Safety Instructions](#)   [Package Contents](#)   [Product](#)  
[Overview](#)   [Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the SimpMyloobe HG1589 Portable Countertop Dishwasher. This compact and efficient appliance is designed to provide convenient dishwashing for small living spaces such as apartments, dorms, RVs, and boats. Featuring multiple wash programs, 360-degree spraying, and 75°C hot air drying, it ensures your dishes are clean and sanitized. Please read this manual thoroughly before use to ensure safe and optimal operation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- **WARNING:** Do not open the dishwasher door while the machine is running. Steam and hot water may splash out, causing burns.
- To prevent scratching the interior, place sharp utensils (e.g., knives) in the provided chopstick basket with the sharp ends facing down or horizontally.
- The maximum allowable water inlet pressure is 1 MPa; the minimum is 0.04 MPa.
- Do not use water above 50°C (122°F) for the inlet water source.
- For best dishwashing results, use dishwasher-specific detergents.
- It is normal for residual water to be present under the filter after a wash cycle.
- Ensure the dishwasher is placed on a stable and level countertop or table.
- Keep children away from the dishwasher during operation.

### 3. PACKAGE CONTENTS

Verify that all items are included in the package:

- 1 x SimpMyloobe HG1589 Portable Countertop Dishwasher
- 1 x Water Pipe
- 1 x User Manual
- 1 x Dish Rack
- 1 x Cutlery Basket



Figure 3.1: Package contents including the dishwasher, water pipe, and user manual.

### 4. PRODUCT OVERVIEW

The SimpMyloobe HG1589 is a compact countertop dishwasher designed for efficiency and convenience. It features a user-friendly control panel and a spacious interior for various dish types.

## large capacity Intelligent high temperature disinfection



Figure 4.1: Front view of the dishwasher.

### Key Features:

- **Compact Design:** Ideal for small kitchens, apartments, RVs, and boats.
- **Large Capacity:** Accommodates bowls, plates, cups, and cutlery.
- **6 Wash Programs:** Standard, Fast, Strong, ECO Washing, Fruits Washing, Quick Washing.
- **360-Degree Spraying:** Ensures thorough cleaning of all dish surfaces.
- **75°C Hot Air Drying:** High-temperature drying for sanitized and streak-free dishes, preventing bacterial growth and odors.
- **Microcomputer Control:** Easy-to-use digital interface.
- **Portable:** Can be used anywhere with water and electricity.



Figure 4.2: Dishwasher dimensions.

## 5. SETUP

### 5.1 Placement

Place the dishwasher on a stable, level, and heat-resistant surface. Ensure there is adequate space around the unit for ventilation and door opening.

### 5.2 Water Connection

The dishwasher can be connected directly to a kitchen faucet using the provided water pipe. Note that a faucet adapter (1/2" outer diameter) is not included and may be required for your specific faucet type. Alternatively, water can be manually added to the water tank. Ensure the filter tank is properly fastened before screwing on the water tank cover.

Your browser does not support the video tag.

Video 5.1: Demonstrates adding water to a similar portable countertop dishwasher. (Note: This video is from AYLİYOTÖY, but the process is applicable to this model.)

### 5.3 Power Connection

Connect the power cord to a standard 110V electrical outlet.

## 6. OPERATING INSTRUCTIONS

## 6.1 Loading Dishes

Open the dishwasher door and pull out the dish rack. Arrange dishes, bowls, and cups in the rack, ensuring they do not block the spray arms. Place cutlery in the designated basket. Avoid overcrowding to allow water to reach all surfaces.



Figure 6.1: Proper loading of dishes.

Your browser does not support the video tag.

Video 6.1: Demonstrates how to load dishes into the portable mini dishwasher.

## 6.2 Adding Detergent

Add a small amount of dishwasher-specific detergent to the detergent dispenser. Refer to the detergent packaging for recommended amounts. Do not use liquid dish soap, as it can cause excessive suds.

## 6.3 Selecting a Wash Program

The dishwasher offers 6 wash programs:

- **Standard:** For normal soiled dishes.
- **Fast:** For lightly soiled dishes requiring a quicker wash.

- **Strong:** For heavily soiled dishes and stubborn stains.
- **ECO Washing:** Energy-saving wash cycle.
- **Fruits Washing:** Dedicated cycle for washing fruits.
- **Quick Washing:** A very short cycle for quick rinses.

Use the control panel buttons to select your desired program. The display will show the remaining time.



Figure 6.2: Intelligent washing and oil stain sensing.

## 6.4 Starting a Cycle

After selecting the program, press the Start button to begin the wash cycle. The dishwasher will automatically spray water at 360 degrees to ensure thorough cleaning.

# Waste Heat Drying Is More Energy-efficient

Use the high-temperature steam of the inner tank to promote physical condensation and drying, and reduce the growth of mold and odor in the machine



Figure 6.3: 75°C Hot Air Drying process.

## 6.5 Hot Air Drying

After the wash cycle, the dishwasher automatically initiates a 75°C hot air drying process. This high-temperature drying quickly removes residual moisture, leaving tableware dry and clean, and helps prevent the growth of odors and bacteria through physical condensation and drying.

## 7. MAINTENANCE

### 7.1 Cleaning the Filter

Regularly clean the filter located at the bottom of the dishwasher to ensure optimal performance. Remove any food particles or debris. It is normal to find residual water under the filter after a wash cycle.

### 7.2 General Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. For the interior, use a mild detergent and a soft brush if necessary. Do not use abrasive cleaners or solvents.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dishwasher not starting	Power cord not plugged in; door not closed properly; program not selected.	Ensure power cord is securely plugged in. Close the door firmly. Select a wash program.
Dishes not clean	Overcrowding of dishes; incorrect detergent amount; clogged spray arms; dirty filter.	Rearrange dishes to allow water circulation. Use appropriate amount of dishwasher-specific detergent. Clean spray arms and filter.
Residual water under filter	Normal operation.	This is normal and does not indicate a malfunction.
Door opens during operation	Door latch not fully engaged.	Ensure the door is securely latched before starting a cycle. Avoid opening during operation due to hot steam/water.

## 9. SPECIFICATIONS

Feature	Detail
Model Name	HG1589
Brand	SimpMyloobe
Dimensions (D x W x H)	15.75" x 17.72" x 17.32" (40 x 45 x 44 cm)
Net Weight	22.6 lbs (9.5 kg)
Rated Voltage	110V
Rated Frequency	50Hz
Rated Power	1200W
Water Consumption	8L
Control Type	Microcomputer
Material	Stainless Steel (Rack)
Special Feature	Portable, 75°C Hot Air Drying, 360° Spraying
UPC	763492606104

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact SimpMyloobe customer service directly. Keep your purchase receipt as proof of purchase.

