



[Manuals.plus](#) /

› [Houselife](#) /

› Houselife HL-XC-01 Cordless Snow Shovel User Manual

Houselife HL-XC-01

Houselife HL-XC-01 Cordless Snow Shovel User Manual

Model: HL-XC-01 | Brand: Houselife

1. INTRODUCTION

Thank you for choosing the Houselife HL-XC-01 Cordless Snow Shovel. This lightweight electric snow blower is designed for efficient snow removal from driveways, sidewalks, patios, steps, and decks. It offers cord-free convenience and is compatible with DeWalt 20V MAX batteries (battery not included). Please read this manual thoroughly before assembly, operation, or maintenance to ensure safe and effective use of your new snow shovel.



Figure 1: Houselife HL-XC-01 Cordless Snow Shovel.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Keep this manual for future reference.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the appliance.
- **Personal Protective Equipment:** Always wear appropriate eye protection (safety glasses) and sturdy footwear. Avoid loose clothing that could get caught in moving parts.
- **Keep Area Clear:** Ensure the area to be cleared is free of objects that could be thrown by the auger. Keep bystanders, children, and pets away from the operating area.
- **Dual Safety Switch:** The snow shovel features a dual safety switch mechanism. Both the safety button and the trigger must be engaged simultaneously to operate the unit, preventing accidental activation.
- **Battery Compatibility:** Use only compatible DeWalt 20V MAX batteries. For optimal performance, a battery with a capacity of 4000mAh or higher is recommended.
- **Avoid Overloading:** Do not attempt to clear snow beyond the recommended depth or width in a single pass.
- **Proper Grip:** Maintain a firm grip on both the main handle and the adjustable auxiliary handle during operation.

3. PACKAGE CONTENTS

Your Houselife HL-XC-01 Cordless Snow Shovel package includes the following components:

- Cordless Snow Shovel Unit (Tool Only)
- Adjustable Handle Assembly
- User Manual

Note: DeWalt 20V MAX battery and charger are **not included** and must be purchased separately.

Houselife

**BATTERY
NOT INCLUDED**

COMPATIBLE WITH **DEWALT 20V MAX** BATTERY



Figure 2: Snow shovel shown with compatible DeWalt 20V MAX battery (battery not included).

4. SETUP

The Houselife HL-XC-01 Cordless Snow Shovel features tool-free assembly, allowing you to get started quickly.

4.1 Assembly Instructions

1. **Connect Shaft Sections:** Align the two main shaft sections and push them together until they click securely into place.
2. **Attach Adjustable Handle:** Slide the adjustable auxiliary handle onto the shaft. Secure it in your desired position by tightening the yellow knob. This handle can be adjusted up to 180 degrees for ergonomic comfort.
3. **Insert Battery:** Ensure the battery is fully charged. Slide a compatible DeWalt 20V MAX battery into the battery port on the main handle until it locks into place.



Figure 3: Visual guide for the 3-step quick assembly.

4.2 Adjustable Handle

The adjustable handle allows for a customized fit, reducing strain on your back and arms during operation. Loosen the yellow knob, position the handle to your comfort, and then tighten the knob to secure it.



Figure 4: Close-up of the adjustable handle for ergonomic use.

5. OPERATING INSTRUCTIONS

5.1 Starting the Snow Shovel

To start the snow shovel, engage the dual safety switch:

1. Press and hold the safety button located on the side of the main handle.
2. While holding the safety button, squeeze the trigger to activate the motor.

Release the trigger to stop the unit.

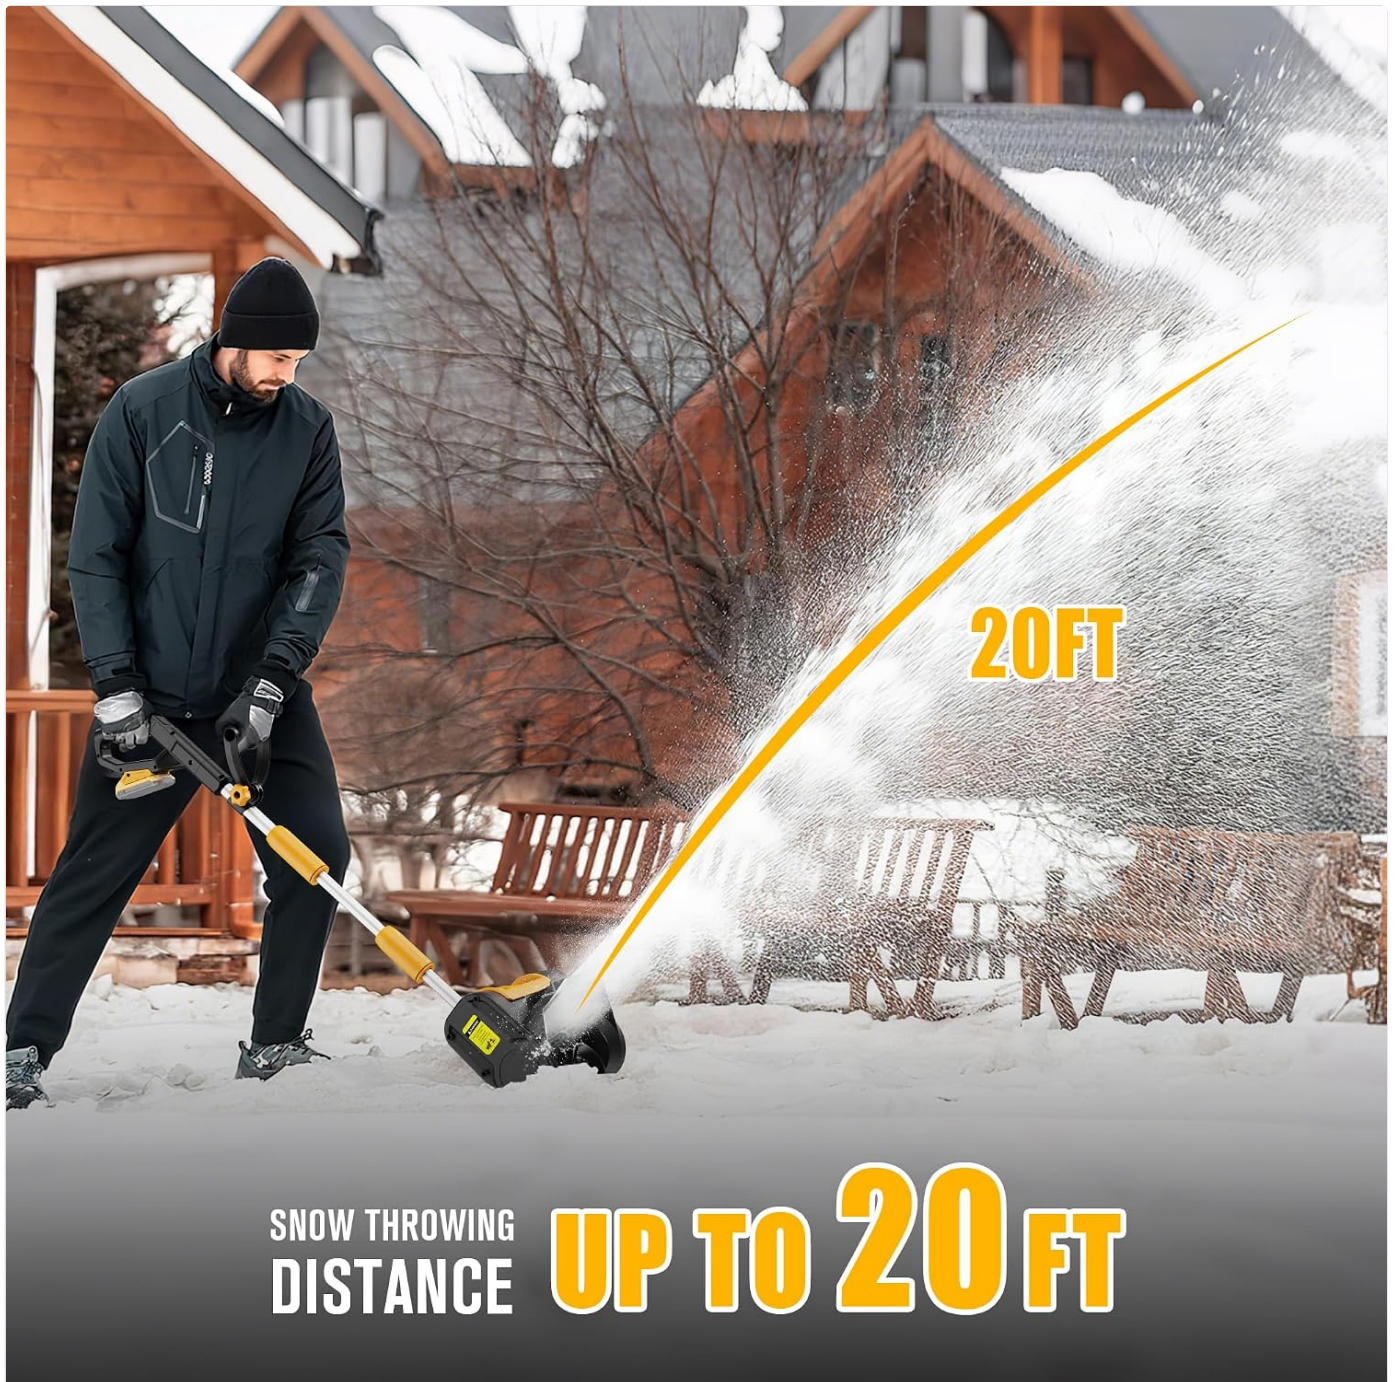


Figure 5: Illustration of the dual safety switch operation.

5.2 Clearing Snow

Push the snow shovel forward into the snow. The rotating auger will clear an 11-inch path and throw snow up to 20 feet away. For best results, clear snow in even passes.

- **Light to Moderate Snow:** This electric snow shovel is ideal for quick clean-ups after light to moderate snowfall.
- **Clearing Depth:** The unit can effectively clear snow up to 6 inches deep. For deeper snow, clear in multiple, shallower passes.
- **Directional Throw:** Position yourself to throw snow away from areas you do not wish to clear, such as windows or adjacent pathways.



SNOW THROWING
DISTANCE **UP TO 20 FT**

Figure 6: Snow being thrown up to 20 feet by the shovel.

HouseLife



Figure 7: Clearing capabilities: 6-inch depth and 11-inch width.

5.3 Official Product Video

Your browser does not support the video tag.

Video 1: Official HouseLife video demonstrating the features and operation of the Cordless Snow Shovel, including its compatibility with DeWalt 20V MAX batteries.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your snow shovel.

- **Cleaning:** After each use, remove the battery and clean any snow, ice, or debris from the auger and housing using a soft brush or cloth. Do not use water to clean the electrical components.
- **Storage:** Store the snow shovel in a dry, protected area away from direct sunlight and extreme temperatures. The compact design allows for easy storage in small spaces.
- **Battery Care:** Always remove the battery from the tool when not in use. Store batteries in a cool, dry place and follow the manufacturer's instructions for charging and storage.

7. TROUBLESHOOTING

If you encounter issues with your Houselife HL-XC-01 Cordless Snow Shovel, refer to the following common problems and solutions:

- **Unit Does Not Start:**

- Ensure the DeWalt 20V MAX battery is fully charged and properly inserted.
- Verify that both the safety button and the trigger are pressed simultaneously.

- **Poor Snow Clearing Performance:**

- Check for any obstructions in the auger or discharge chute.
- Ensure you are not attempting to clear snow deeper than 6 inches in a single pass. For deeper snow, take multiple, shallower passes.
- Wet, heavy snow may reduce throwing distance and require slower operation.

- **Reduced Battery Life:**

- Ensure the battery is fully charged before use.
- Operating in very cold temperatures can temporarily reduce battery performance.
- Consider using a higher capacity battery (4000mAh or higher recommended) for extended run time.

8. SPECIFICATIONS

Feature	Specification
Brand	Houselife
Model Number	HL-XC-01
Power Source	DeWalt 20V MAX Battery (Tool Only)
Clearing Width	11 inches
Max Clearing Depth	6 inches
Max Throw Distance	20 feet
Item Weight	8 Pounds
Product Dimensions (L x W x H)	55.5 x 11.8 x 7.87 inches
Material	Plastic, Metal
Handle Material	Plastic
Blade Material	Metal
Grip Type	Ergonomic

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please contact Houselife customer service. Refer to the product packaging or the official Houselife website for the most up-to-date contact details.

