

FanttikOutdoor Zeta C4 Pro

FanttikOutdoor Zeta C4 Pro Instant Cabin Tent User Manual

Model: Zeta C4 Pro

			Introduction	Safety Information	Package	
Contents	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. INTRODUCTION

The FanttikOutdoor Zeta C4 Pro Instant Cabin Tent is designed for quick and easy setup, making it ideal for family camping and hiking. This 4-person tent features a spacious interior, enhanced ventilation, and robust weather protection to ensure a comfortable outdoor experience. Its pre-installed poles allow for setup in approximately 60 seconds, providing more time to enjoy nature.

INSTANT CABIN TENT



Industry Standard
Sleeps 4



Most Comfortable
Sleeps 2 + Gear



Image: The FanttikOutdoor Zeta C4 Pro Instant Cabin Tent, highlighting its 4-person capacity and spacious design.

2. SAFETY INFORMATION

- **Fire Safety:** Keep all flame and heat sources away from the tent fabric. The tent is made of flammable material and will burn if exposed to an open flame.

- **Ventilation:** Ensure adequate ventilation to prevent suffocation. Do not use fuel-burning devices inside the tent.
- **Weather Conditions:** While the tent is windproof up to 35 MPH and water-resistant, avoid setting it up in extreme weather conditions such as severe storms, heavy snow, or high winds exceeding recommended limits.
- **Staking:** Always properly stake down the tent and use all guy lines to ensure stability, especially in windy conditions.
- **Children:** Keep children away from the tent during setup and takedown to prevent injury from moving poles.
- **Zippers:** When operating zippers, ensure tent fabric does not get caught to prevent damage and jamming.

3. PACKAGE CONTENTS

Verify that all components are present before beginning setup.

- 1 x Instant Cabin Tent
- 1 x Carry Bag
- 1 x Rainfly
- 9 x Stakes
- 1 x Peg Bag
- 1 x Gear Loft
- 1 x Welcome Mat

PACKAGING DETAILS



1 x Instant Cabin Tent



1 x Carry Bag



1 x Peg Bag




1 x Gear Loft



1 x Welcome Mat



1 x Rainfly

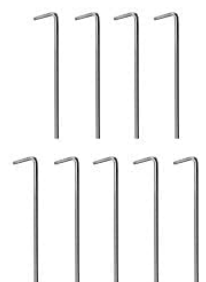

9 x Stake

Image: All components included in the FanttikOutdoor Zeta C4 Pro Instant Cabin Tent package, including the tent, carry bag, rainfly, stakes, peg bag, gear loft, and welcome mat.

4. SETUP INSTRUCTIONS

The FanttikOutdoor Zeta C4 Pro Instant Cabin Tent is designed for a quick 60-second setup. Follow these steps for efficient assembly:

1. **Step 1: Take out all components.** Unpack the tent and all accessories from the carry bag. Lay the tent flat on the ground in your desired camping spot.
2. **Step 2: Lay flat the legs of the tent.** Extend the tent's pre-installed poles outwards, ensuring they are fully spread.
3. **Step 3: Pull straight-out leg poles.** Lift the tent structure and pull each leg pole straight out until it locks into place. This will raise the tent walls.
4. **Step 4: The inner tent is set up.** Once all leg poles are extended and locked, the main structure of the inner tent will be standing.
5. **Attach Rainfly:** Drape the rainfly over the top of the tent, aligning its corners with the tent's corners. Secure the rainfly to the tent poles using the attached bungee straps and velcro wraps.
6. **Stake the Tent:** Secure the tent to the ground using the provided stakes. Insert stakes through the tent's corner loops and any additional loops along the base.
7. **Adjust Guy Lines:** Attach the guy lines to the designated points on the rainfly and stake them into the ground at an appropriate distance from the tent. Adjust tension to ensure stability and proper water runoff.



Image: Visual guide demonstrating the four quick steps to set up the FanttikOutdoor Instant Cabin Tent in 60 seconds.

Setup Video Guide



Video: Official guide on how to set up the FanttikOutdoor Zeta C4 Pro Instant Cabin Tent. This video demonstrates the quick and easy assembly process.

5. OPERATION AND FEATURES

Ventilation

The tent features mesh windows on all four sides, floor vents, and a mesh ceiling design to promote airflow and keep the interior cool. These mesh areas also allow for stargazing on clear nights.

EXCELLENT VENTILATION



Image: Interior view of the tent showcasing the mesh windows and ceiling for optimal ventilation.

Weather Protection

Constructed from premium water-resistant fabric with a 1500mm rating, the tent offers reliable protection against rain. The door zipper includes a drainage channel, and the base features a bathtub design to prevent water accumulation and leakage. Properly adjusted guy lines and sturdy tent pegs help the tent withstand winds up to 35 MPH.

Note: The inner tent's mesh roof is not waterproof. Always use the outer rainfly during rainy weather to ensure full protection.



Image: Diagram illustrating the weather protection features of the tent, including the water-resistant rainfly, fully zipped windows, guylines, multi-layer protection, and water-resistant floor.

Convenience Features

- **Power Cord Entrance:** A dedicated entrance allows for external power access, keeping your devices charged.
- **Built-in Mesh Pockets:** Convenient mesh pockets are integrated into the tent walls for storing small items like phones, keys, or flashlights.
- **Gear Loft:** An overhead gear loft provides additional storage space, keeping essentials off the tent floor.
- **SBS Zippers:** Equipped with durable SBS zippers for smooth operation.

WEATHER PROTECTION



Gear Loft



Cable Port



Built-in Storage Bag



Easy-Pull Zipper

Image: Close-up views of the tent's interior features, including the gear loft, cable port, built-in storage bag, and easy-pull zipper.

6. MAINTENANCE

- **Cleaning:** Hand wash the tent fabric with mild soap and water. Do not use harsh detergents or bleach. Allow the tent to air dry completely before packing to prevent mildew.
- **Storage:** Store the tent in its carry bag in a cool, dry place away from direct sunlight. Ensure the tent is completely

dry before storage.

- **Zipper Care:** Periodically clean zippers and apply a zipper lubricant if they become stiff. Always pull zippers gently and ensure no fabric is caught.
- **Pole Inspection:** Regularly inspect poles for any signs of damage or bending. Replace damaged poles promptly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Water pooling on tent roof/leakage	Guy lines too loose; rainfly not properly tensioned; inner tent used without rainfly in rain.	Adjust guy lines to appropriate tension. Ensure rainfly is correctly installed and taut. Always use the outer rainfly in conjunction with the inner tent during rainy weather.
Zipper jamming	Tent fabric caught in zipper; zipper dirty or stiff.	Pull the zipper with your thumb facing forward to guide it smoothly. Be careful not to let the tent fabric get caught. Clean zippers and apply lubricant if needed.
Tent unstable in wind	Insufficient staking; guy lines not used or improperly tensioned.	Ensure all stakes are firmly in the ground. Use all available guy lines and adjust them for maximum tension and stability. Avoid setting up in winds exceeding 35 MPH.
Condensation inside tent	Lack of ventilation; high humidity.	Open mesh windows and floor vents to increase airflow. Ensure proper air circulation, especially during humid conditions.

8. SPECIFICATIONS

Feature	Detail
Brand	FanttikOutdoor
Model Name	Zeta C4 Pro
Product Dimensions (L x W x H)	96" x 96" x 59"
Item Weight	14.5 pounds
Occupancy	4 Person
Seasons	3 Season
Water Resistance Technology	1500mm
Material Type	Polyester (Tent), Polyethylene (Floor), Carbon Fiber (Poles)
Installation Type	Free Standing
Closure Type	Zipper
Included Components	Carry Bag, Instant Cabin Tent, Rainfly, Stakes

9. WARRANTY & SUPPORT

Warranty Information

This FanttikOutdoor Zeta C4 Pro Instant Cabin Tent comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship. It does not cover damage caused by misuse, improper setup, accidents, normal wear and tear, or modifications. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or general inquiries, please contact FanttikOutdoor customer support. Refer to the official FanttikOutdoor website or your purchase documentation for the most current contact information. You can also visit the official [FanttikOutdoor Store on Amazon](#) for more product information and support resources.

© 2026 FanttikOutdoor. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question