

COSLUS T40

COSLUS T40 Portable Oral Irrigator User Manual

Model: T40

1. PRODUCT OVERVIEW

The COSLUS T40 is a compact and portable oral irrigator designed for effective interdental cleaning and gum care. Its lightweight design and integrated nozzle storage make it ideal for both home use and travel. Featuring four adjustable water pressure modes and a detachable water tank, it offers a customizable and hygienic oral cleaning experience.

ご家族の口腔健康を守り、
自信満ちた笑顔を咲かせましょう！



Image 1.1: The COSLUS T40's compact design and integrated nozzle storage for portability.

2. SETUP AND INITIAL USE

2.1 Charging the Device

Before first use, fully charge the COSLUS T40. Connect the provided Type-C charging cable to the device and a compatible USB power adapter (not included). The charging indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes approximately 3 hours and provides up to 60 uses (based on 2 uses per day for 30 days).



Image 2.1: Charging the COSLUS T40 via its Type-C port.

2.2 Attaching the Nozzle

- Open the nozzle storage compartment on the top of the device.
- Select your desired nozzle type (standard, soft, or tongue cleaner).
- Insert the nozzle firmly into the opening until it clicks into place.

2.3 Filling the Water Tank

- Detach the water tank by gently pulling it downwards from the main body.
- Open the water tank cap.
- Fill the tank with lukewarm water. Do not use hot water or mouthwash containing alcohol.
- Close the water tank cap securely and reattach the tank to the main body until it clicks.

掃除が簡単 ストレスフリーな加水

着脱式タンク & 広口給水口



Image 2.2: Detaching and refilling the water tank.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off and Mode Selection

- Press the power button to turn the device on.
- Press the mode button to cycle through the four water pressure modes:
 - **Soft Mode:** Gentle pressure for sensitive gums or first-time users.
 - **Normal Mode:** Standard pressure for daily cleaning.
 - **Power Mode:** Strong pressure for deep cleaning and stubborn food debris.
 - **Pulse Mode:** Pulsating water flow for gum massage and enhanced cleaning.
- Press the power button again to turn the device off.

4 モード洗浄機能でやさしく食べかす除去

あらゆる年代の歯を清潔に



ソフトモード

やさしい使い心地
(初めての方にも)



ノーマルモード

毎日の基本用



パワーモード:

食べかすをしっかり除去



パルスモード:

強度調節可能! 水流で
やさしく洗浄&快適ケア



Image 3.1: Control panel and mode selection on the COSLUS T40.

3.2 Using the Oral Irrigator

- Lean over a sink and place the nozzle tip into your mouth.
- Close your lips slightly to prevent splashing, but allow water to flow from your mouth into the sink.
- Aim the water jet at the gumline at a 90-degree angle.
- Start with your back teeth and work your way around, pausing briefly between teeth.
- Ensure to clean both the front and back surfaces of your teeth.
- Continue until the water tank is empty or all areas have been cleaned.



Image 3.2: Step-by-step guide for operating the COSLUS T40.

Your browser does not support the video tag.

Video 3.1: Demonstration of the COSLUS T40 oral irrigator in use, showing water jet action and cleaning effectiveness.

4. MAINTENANCE AND CARE

4.1 Cleaning the Water Tank

- After each use, detach the water tank and empty any remaining water.
- Rinse the tank thoroughly with clean water.
- For deeper cleaning, use the provided cleaning brush to scrub the inside of the tank.
- Allow the tank to air dry completely before reattaching or storing to prevent mold and mildew.



Image 4.1: Easy cleaning of the detachable water tank.

4.2 Cleaning the Nozzles

- Remove the nozzle from the device.
- Rinse the nozzle under running water.
- Replace nozzles every 3 months or sooner if they show signs of wear.

4.3 Device Exterior Cleaning

- Wipe the exterior of the device with a soft, damp cloth.
- Do not use abrasive cleaners or harsh chemicals.

4.4 Storage

- Ensure the device is dry before storing.
- Store the nozzle in its integrated storage compartment to prevent loss and maintain hygiene.
- Store the device in a cool, dry place away from direct sunlight.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or no charge.	Charge the device fully.
Weak water flow.	Low battery, clogged nozzle, or insufficient water in tank.	Charge the device, clean or replace the nozzle, refill the water tank.
Water leaks from the device.	Water tank not properly attached or cap not sealed.	Ensure the water tank is securely attached and the cap is tightly closed.
Nozzle detaches during use.	Nozzle not inserted firmly.	Ensure the nozzle clicks into place when attaching.

6. SPECIFICATIONS

Feature	Detail
Model Number	T40
Dimensions	16.7 x 16.7 x 3.8 cm
Weight	213 g
Water Tank Capacity	180 ml
Water Pressure Modes	4 (Soft, Normal, Power, Pulse)
Waterproof Rating	IPX7
Battery Type	Lithium Ion (1 included)
Charging Time	Approx. 3 hours (Type-C fast charging)
Operating Time	Up to 60 uses per charge
Color	White

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The COSLUS T40 Portable Oral Irrigator comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain

your proof of purchase for warranty claims.

7.2 Return and Exchange Policy

We offer a **30-day free return/exchange policy** from the date of purchase. If you are not satisfied with your product, please contact our customer service within this period.

7.3 Customer Support

For any questions, technical assistance, or warranty claims, please contact our customer support team. We provide **24-hour after-sales service** to assist you.

- **Online Support:** Visit the COSLUS official website or your retailer's support page.
- **Email Support:** Refer to the contact information provided in your product packaging.