

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Wonlink](#) /

› [Wonlink WiFi 6 AX1500 Dual Band WiFi Repeater User Manual](#)

## Wonlink WL-NE3601

# Wonlink WiFi 6 AX1500 Dual Band WiFi Repeater User Manual

Model: WL-NE3601

## 1. INTRODUCTION

The Wonlink WiFi 6 AX1500 Dual Band WiFi Repeater is designed to extend your existing wireless network coverage, eliminating dead zones and providing a stronger, more reliable internet connection throughout your home or office. This device supports the latest WiFi 6 (802.11ax) standard, offering dual-band speeds up to 1500 Mbps (1201 Mbps on 5 GHz and 300 Mbps on 2.4 GHz). It features four high-gain antennas and a Fast Ethernet port for stable wired connections.



Image 1.1: The Wonlink WiFi 6 AX1500 Dual Band WiFi Repeater, showcasing its design and key features like WiFi 6, ultra-speed, dual band, and WPS configuration.

This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your WiFi repeater to ensure optimal performance.

## 2. SETUP INSTRUCTIONS

There are two primary methods to set up your Wonlink WiFi Repeater: using the WPS button or through a web browser.

### 2.1. WPS (Wi-Fi Protected Setup) Method

1. Plug the WiFi Repeater into a power outlet near your main router.

2. Wait for the WiFi LED indicator on the repeater to start blinking.
3. Press the WPS button on your main router.
4. Within two minutes, press the WPS button on the Wonlink WiFi Repeater.
5. The WiFi LED indicator on the repeater should turn solid, indicating a successful connection.
6. You can now unplug the repeater and move it to a desired location within your router's WiFi range.

## 2.2. Web Browser Method (Manual Configuration)

1. Plug the WiFi Repeater into a power outlet.
2. Connect your computer or smartphone to the repeater's default WiFi network (e.g., "WONLINK\_WiFi" or similar, usually found on a label on the device). No password is required for the initial connection.
3. Open a web browser (e.g., Chrome, Firefox) and enter **192.168.10.1** in the address bar.
4. Enter the default login password (usually "admin").
5. Follow the on-screen instructions to select your main WiFi network and enter its password.
6. The repeater will restart. Once restarted, connect your devices to the new extended WiFi network (e.g., "YourNetworkName\_EXT" or similar).



Image 2.1: Visual guide for quick installation using a smartphone or the WPS button on the Wonlink WiFi Repeater.

## 3. OPERATING MODES

The Wonlink WiFi Repeater supports multiple operating modes to suit various network requirements.

### 3.1. Repeater Mode

In Repeater Mode, the device extends the coverage of an existing wireless network. It receives the WiFi signal from your main router and re-transmits it, effectively expanding the range. This is ideal for eliminating WiFi dead zones.

### 3.2. Access Point (AP) Mode

In AP Mode, the device connects to a wired network (via the Ethernet port) and transforms it into a wireless access point. This is useful for adding WiFi capability to a wired-only network or creating a new wireless network segment.

### 3.3. Router Mode

In Router Mode, the device acts as a primary router, connecting directly to a modem via its Ethernet port to create a new

private wireless network. This mode is suitable for small offices or homes where a dedicated router is needed.

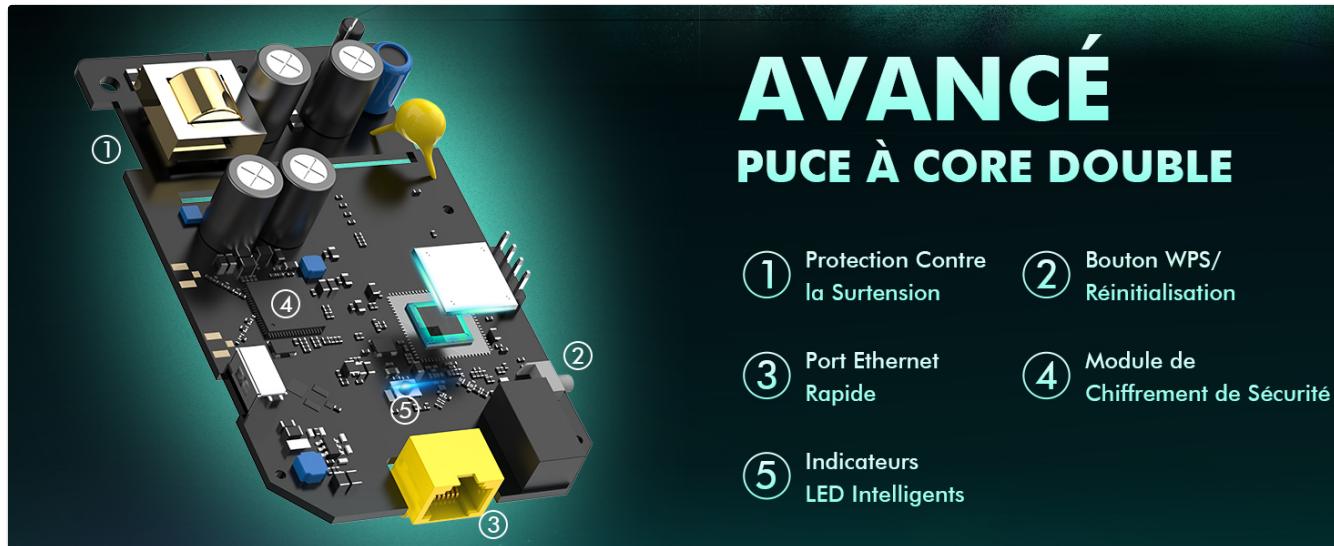


Image 3.1: Illustration of the Wonlink WiFi Repeater extending WiFi coverage throughout a multi-story home, demonstrating strong signal penetration and stable connection.

## 4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your WiFi Repeater.

### 4.1. Cleaning

Regularly clean the device with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials that could damage the casing or internal components. Ensure the ventilation holes are free from dust to prevent overheating.

### 4.2. Placement

Place the repeater in an open area, away from obstructions like thick walls, metal objects, and other electronic devices that may cause interference. Optimal placement is typically halfway between your router and the area with weak signal.

### 4.3. Firmware Updates

Check the manufacturer's website periodically for firmware updates. Keeping your device's firmware up-to-date can improve performance, add new features, and enhance security.

### 4.4. Resetting the Device

If you encounter persistent issues or wish to reconfigure the device from scratch, you can perform a factory reset. Locate the WPS/Reset button (often a small pinhole button) and press and hold it for about 5-10 seconds until the LED indicators change, then release. The device will revert to its factory default settings.

## 5. TROUBLESHOOTING

If you experience issues with your WiFi Repeater, refer to the following common problems and solutions:

- **No Internet Access:**

- Ensure the repeater is successfully connected to your main router. Check the LED indicators.
- Verify that your main router has an active internet connection.
- Try repositioning the repeater closer to your main router.

- Perform a factory reset and reconfigure the repeater.

- **Slow Connection Speed:**

- The repeater might be too far from the main router. Move it to an optimal location.
- Check for interference from other electronic devices.
- Ensure your main router is providing adequate speed.
- Connect to the 5 GHz band if available, as it generally offers higher speeds with less interference.

- **Frequent Disconnections:**

- Ensure the repeater is receiving a strong signal from your main router.
- Update the repeater's firmware if available.
- Avoid placing the repeater near large metal objects or thick concrete walls.

- **Cannot Access Web Management Page (192.168.10.1):**

- Ensure your device is connected to the repeater's WiFi network (not your main router's).
- Try a different web browser.
- Clear your browser's cache and cookies.
- Temporarily disable any VPN or proxy settings on your device.

## 6. SPECIFICATIONS

---

Feature	Detail
Brand	Wonlink
Model Number	WL-NE3601
Wireless Standard	802.11a/b/g/n/ac, 802.11ax (WiFi 6)
Data Transfer Rate	Up to 1500 Mbps (1201 Mbps on 5 GHz, 300 Mbps on 2.4 GHz)
Frequency Band Class	Dual Band (2.4 GHz, 5 GHz)
Antennas	4 High-Gain Antennas
Special Features	1-Click Setup, MU-MIMO, LED Indicator
Compatible Devices	All standard WiFi-enabled devices
Security Protocol	WPA3/WPA2/WPA-PSK
Ethernet Port	1x Fast Ethernet Port (RJ45)
Color	Black
Included Components	1x WiFi 6 Repeater, 1x RJ45 Ethernet Cable, 1x Quick Installation Guide

# Amplificateur de WiFi à Double Bande à Haute Vitesse 1500Mbps

**1200Mbps**

5.8GHz

Jeux Vidéo

Diffusion Multimédia

Conférence Vidéo



**300Mbps**

2.4GHz

Transfert de Fichiers

Navigation Web

Téléchargement

Image 6.1: Performance breakdown showing 1200 Mbps on 5 GHz for gaming and streaming, and 300 Mbps on 2.4 GHz for file transfer and web browsing.

## 7. WARRANTY INFORMATION

This Wonlink WiFi Repeater comes with a manufacturer's warranty of 1 year. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external factors.

## 8. CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided in the quick installation guide included with your product. You may also visit the official Wonlink website for FAQs and support resources.