

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CEROBEAR](#) /

› [CEROBEAR Food Vacuum Sealer Machine Model QH-72 User Manual](#)

CEROBEAR QH-72

CEROBEAR Food Vacuum Sealer Machine Model QH-72 User Manual

Model: QH-72 | Brand: CEROBEAR

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before operating the CEROBEAR Food Vacuum Sealer Machine. Retain this manual for future reference.

- Always ensure the appliance is unplugged from the electrical outlet when not in use, before cleaning, or before performing any maintenance.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep out of reach of children. Close supervision is necessary when any appliance is used by or near children.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- Use only vacuum sealer bags specifically designed for vacuum sealing.
- Do not use outdoors. This appliance is for household use only.
- Avoid touching hot sealing strip immediately after use.

PRODUCT OVERVIEW

The CEROBEAR Food Vacuum Sealer Machine Model QH-72 is designed to extend the freshness of your food by removing air and creating an airtight seal. Its compact design and intuitive controls make food preservation simple and efficient.

Package Contents

- 1 x CEROBEAR Food Vacuum Sealer Machine
- 1 x Power Cord
- 15 x BPA-free Vacuum Sealer Bags (6.7" x 9.8")
- 1 x User Manual (this document)

Product Diagram



Figure 1: Overview of the CEROBEAR Food Vacuum Sealer Machine, showing its sleek design, control panel, and a vacuum-sealed food item.

SETUP

Unpacking

Carefully remove the vacuum sealer and all accessories from the packaging. Inspect the unit for any signs of damage. If any damage is found, do not use the appliance and contact customer support.

Initial Preparation

Place the vacuum sealer on a flat, stable, and dry surface. Ensure there is enough space around the unit for safe operation. Wipe down the exterior of the machine with a damp cloth to remove any dust from manufacturing or packaging.

Power Connection

Insert the power cord into the power port on the back of the vacuum sealer, then plug the other end into a standard electrical outlet. The machine is now ready for operation.

OPERATING INSTRUCTIONS

General Operation

The CEROBEAR Food Vacuum Sealer features a simple three-button interface for various food types and sealing needs.



Figure 2: The three operational buttons: Vac Seal for dry foods, Pulse for moist/delicate foods, and Seal for bag sealing.

- **Vac Seal:** This mode is for dry foods such as nuts, fruits, and vegetables. It automatically vacuums the air from the bag and then seals it.
- **Pulse:** Designed for moist or delicate foods like seafood, meat, or bread. This function allows you to manually control the vacuum process. Press and hold the 'Pulse' button to vacuum, release when the

desired vacuum level is reached (to prevent crushing delicate items or drawing liquids into the machine), then press 'Seal' to complete the process.

- **Seal:** Use this function to seal bags without vacuuming. This is useful for resealing original packaging (e.g., chip bags) or creating custom-sized bags from a roll of vacuum sealer material.

Step-by-Step Sealing Process



Figure 3: Visual representation of the simple 3-step sealing process.

1. **Prepare the Bag:** Place the food item into a vacuum sealer bag, ensuring the open end is clean, dry, and free of food particles. Leave at least 2-3 inches of space between the food and the top of the bag.
2. **Position the Bag:** Open the lid of the vacuum sealer. Place the open end of the bag flat into the vacuum chamber, ensuring it is centered over the sealing strip.
3. **Close and Latch:** Press down firmly on both ends of the lid until you hear two distinct "pops," indicating that the lid is securely latched.
4. **Select Function:** Press the appropriate button for your food type: "Vac Seal" for dry foods, "Pulse" for moist/delicate foods (followed by "Seal"), or "Seal" for sealing only.
5. **Monitor and Finish:** The machine will automatically vacuum and seal (for "Vac Seal") or allow manual control (for "Pulse"). Once the process is complete, the indicator light will turn off. Press the release buttons on the sides (if applicable) to open the lid and remove the sealed bag.

Smart Sealing Technology

FASTER AND SMARTER VACUUM SEALER



Newly Upgraded Sensor-assisted Tech

✓ Our-Intelligent Seal in 8-10 Seconds

✗ Others-20 Second Fixed Wait

SAVES
50%
TIME



Figure 4: The smart sensor technology adjusts sealing time for optimal results, typically within 8-10 seconds.

The CEROBEAR vacuum sealer incorporates smart sensor technology that monitors bag pressure and contents. This allows the machine to adjust the sealing time dynamically, ensuring an optimal seal in as little as 8-10 seconds, which is faster than many conventional models.

MAINTENANCE AND CLEANING

Cleaning the Drip Tray

EASY TO CLEAN

Removable tray for hassle-free cleaning



Figure 5: The removable drip tray simplifies cleaning and maintenance.

The vacuum sealer features a removable drip tray designed to catch any liquids or food particles. To clean, simply detach the drip tray, wash it with mild soap and warm water, and ensure it is completely dry before reinserting it into the machine.

General Cleaning

Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface. Ensure the sealing strip and vacuum chamber are clean and free of debris before each use to ensure proper sealing.

Storage

EASY TO STORE AND CARRY



Figure 6: The compact design allows for easy storage in various kitchen spaces.

Due to its compact size (13.4" L x 3.3" W x 2.2" H), the CEROBEAR vacuum sealer can be easily stored in kitchen drawers, cabinets, or on countertops. Store in a dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your vacuum sealer, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not turn on	Power cord not connected; Outlet not functional	Ensure power cord is securely plugged into the machine and a working electrical outlet.
Machine not vacuuming properly	Bag not positioned correctly; Lid not latched; Sealing strip dirty; Incompatible bag	Ensure bag opening is flat within the vacuum chamber. Press lid firmly until two 'pops' are heard. Clean sealing strip. Use only approved vacuum sealer bags.
Bag not sealing	Heating strip dirty/damaged; Moisture in sealing area; Overheating	Clean heating strip. Ensure bag opening is dry. Allow machine to cool down if used continuously.
Food crushed during vacuuming	Excessive vacuum pressure for delicate items	Use the 'Pulse' function to manually control vacuum pressure for delicate or moist foods.

SPECIFICATIONS

- **Brand:** CEROBEAR
- **Model:** QH-72
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Color:** White
- **Product Dimensions:** 13.4" L x 3.3" W x 2.2" H
- **Item Weight:** 1.76 Pounds
- **Power Source:** AC
- **Operation Mode:** Automatic
- **Manufacturer:** Zhejiang Qunhai Electronic Technology Co.,Ltd.

WARRANTY AND SUPPORT

This CEROBEAR product is covered by a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your purchase or visit the official CEROBEAR website.

For technical support, troubleshooting assistance, or any questions not addressed in this manual, please contact CEROBEAR customer service. Contact information can typically be found on the product packaging, the official website, or your purchase receipt.