

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Depuley](#) /

› [Depuley 66" Ceiling Fan with Lights User Manual](#)

## Depuley WS-FPZ197-66C

# Depuley 66" Ceiling Fan with Lights User Manual

Model: WS-FPZ197-66C

## 1. IMPORTANT SAFETY INFORMATION

---

Please read and understand this entire manual before attempting to assemble, install, or operate this product. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Ensure all electrical connections comply with local codes, ordinances, and the National Electrical Code (NEC).
- Consult a qualified electrician if you are unfamiliar with electrical wiring.
- Turn off power at the circuit breaker before beginning installation to prevent possible electrical shock.
- The mounting structure must be capable of supporting the fan's weight (approximately 22.7 lbs).
- Do not bend the blade holders during installation or cleaning.
- Keep hands clear of the fan blades when the fan is operating.
- This fan is suitable for both indoor and outdoor (covered patio) use. Ensure proper protection from direct water exposure for outdoor installations.

## 2. PACKAGE CONTENTS

---

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact Depuley customer service.



Image: Overview of the Depuley 66-inch ceiling fan and its included components, such as the motor, blades, various downrod lengths, and control options.

### 3. INSTALLATION INSTRUCTIONS

---

#### 3.1 Planning and Preparation

- Choose a suitable location for the fan, ensuring at least 7 feet (2.13 meters) clearance from the floor to the blade and 18 inches (0.46 meters) from the blade to any wall or obstruction.
- Ensure the electrical box is securely mounted and capable of supporting the fan's weight.


#### 3.2 Mounting the Fan

1. Turn off power at the circuit breaker.
2. Attach the mounting bracket to the electrical box.
3. Assemble the downrod and canopy.
4. Carefully lift the fan assembly and hang it from the mounting bracket.
5. Make electrical connections according to the wiring diagram provided in the full installation guide (not included)

in this summary).

### 3.3 Attaching the Blades

The fan blades feature two color options: a classic black finish and a warm wood grain tone. Select the desired side before attachment.

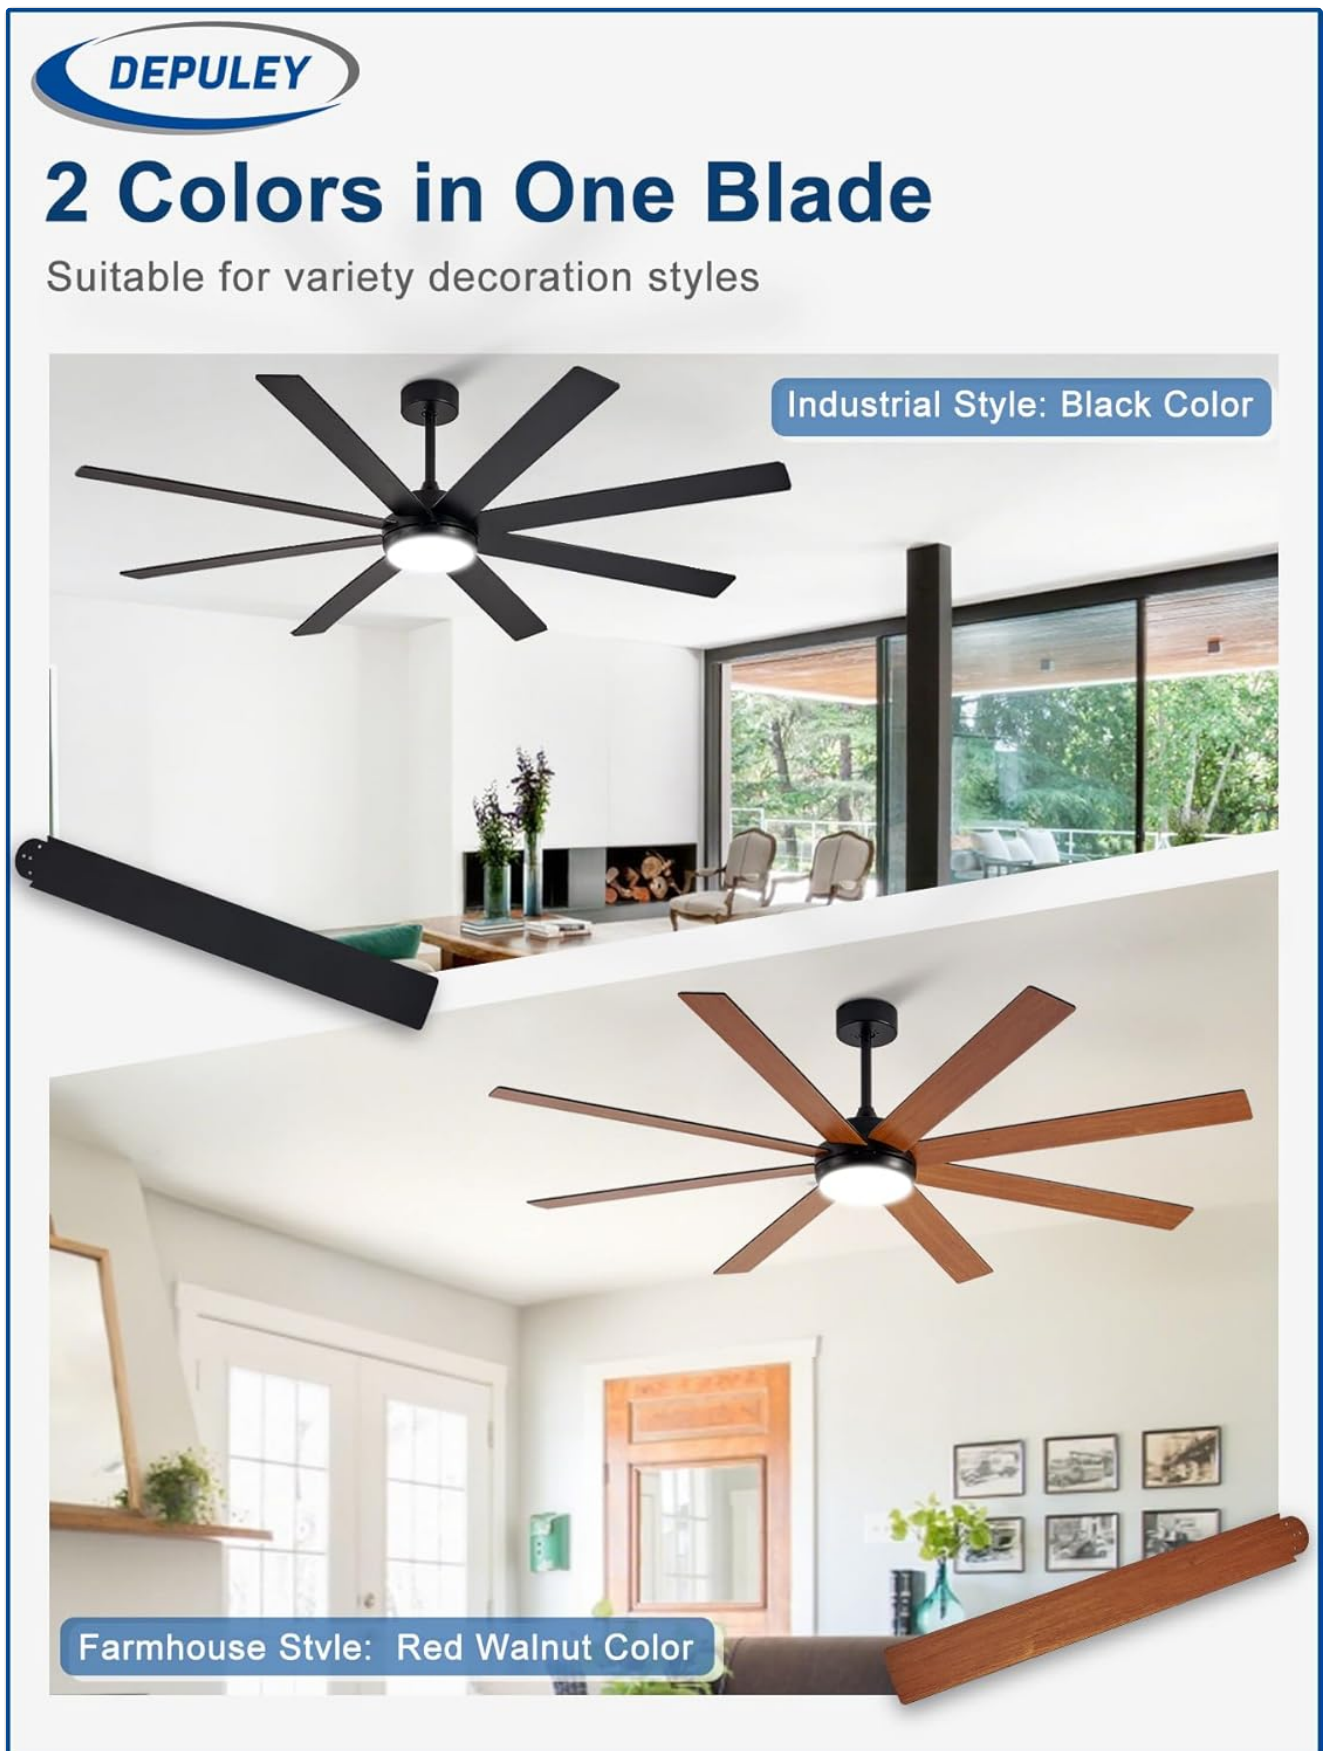

The advertisement features the DEPULEY logo at the top left. The main headline is "2 Colors in One Blade" in a large, bold, blue font, with the subtext "Suitable for variety decoration styles" below it. The central image is split into two horizontal panels. The top panel shows a black ceiling fan with seven blades in a modern living room with large windows and a fireplace. A blue callout box in the top right of this panel reads "Industrial Style: Black Color". A single black blade is shown in a close-up view on the left side of the panel. The bottom panel shows a red walnut ceiling fan with seven blades in a farmhouse-style living room with a wooden door and framed pictures. A blue callout box in the bottom left of this panel reads "Farmhouse Style: Red Walnut Color". A single red walnut blade is shown in a close-up view on the right side of the panel.

Image: Close-up view of the fan blades, illustrating the reversible design with a black finish on one side and a wood grain finish on the other, allowing for customization.

6. Attach each blade to the motor housing using the provided screws. Ensure all screws are tightened securely.

### 3.4 Final Assembly

7. Install the light kit and light cover.
8. Restore power at the circuit breaker.

**DEPULEY**

# 66 Inch Large Ceiling Fan

Quiet wind speeds

A: 5"  
B: 10"  
C: 24"

A: 14"  
B: 19"  
C: 33"

6"

66"

**Room Size: 18ft.x18ft.-26ft.x26ft**

**Low Ceiling**      **High Ceiling**      **Villa ceiling**

The diagram shows a 66-inch ceiling fan with a central light fixture. Dimensions are provided for the fan's width (66 inches) and the downrod (6 inches). Three blade span options are shown: A (14 inches), B (19 inches), and C (33 inches). Three downrod lengths are also shown: A (5 inches), B (10 inches), and C (24 inches). The fan is shown in three different room settings: a living room with a fireplace (Low Ceiling), a room with a high ceiling and large windows (High Ceiling), and a villa with a vaulted wooden ceiling and large arched windows (Villa ceiling).

Image: Diagram illustrating the dimensions of the 66-inch ceiling fan, including blade span and downrod lengths, along with

recommended room sizes for various ceiling heights.

## 4. OPERATING INSTRUCTIONS

### 4.1 Remote Control Operation

The included remote control allows for convenient operation of the fan and light functions.

**DEPULEY**

# 6-Speed Reversible

Cooler in summer, warmer in winter

**Winter Reverse**  
Increase air circulation

**Summer Forward**  
Send breeze and keep cool

Image: The remote control for the Depuley ceiling fan, highlighting buttons for power, fan speed adjustment (1-6), light on/off, color temperature, dimming, timer, and reversible airflow.

- **Fan Speed:** Adjust between 6 speeds (1-6) for optimal airflow.
- **Reversible Function:** Press the 'F/R' button to change the direction of blade rotation.
- **Timer:** Set a 2-hour timer for automatic fan shutdown.
- **Light Control:** Turn the light on/off, adjust brightness, and change color temperature (3000K warm white, 4000K natural white, 6500K cool white).

## 4.2 App Control

This fan also supports control via a dedicated mobile application. Refer to the full instruction manual for detailed pairing and app usage instructions.

## 4.3 Reversible Airflow

The fan features a reversible DC motor for year-round comfort.

- **Summer Mode (Downdraft):** Blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.
- **Winter Mode (Updraft):** Blades rotate clockwise, drawing air upwards to circulate warm air trapped near the ceiling.



Image: Visual representation of the fan's reversible function, showing downward airflow for cooling in summer and upward airflow for circulating warm air in winter.

 
#### **4.4 Dimmable Lighting with Memory Function**

The integrated LED light offers adjustable brightness and three color temperatures (3000K, 4000K, 6500K). The fan automatically saves your preferred fan speed and light settings after power-off.



# Soft& Warm Light Fan

illuminate every moment

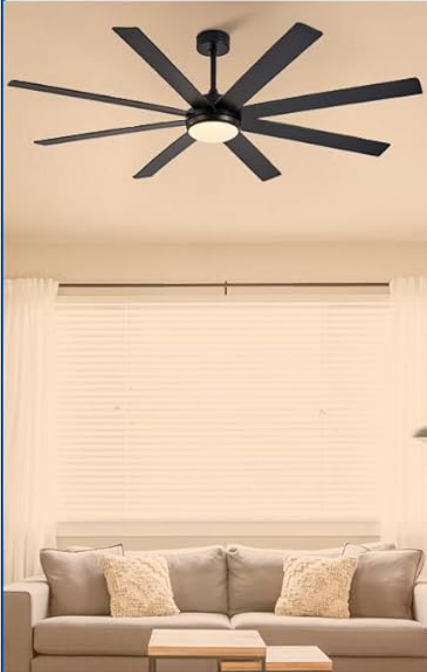

**3000K**

Warms Light



**4500K**

Natural Light



**6500K**

Cold White Light



## Stepless Dimmable Light


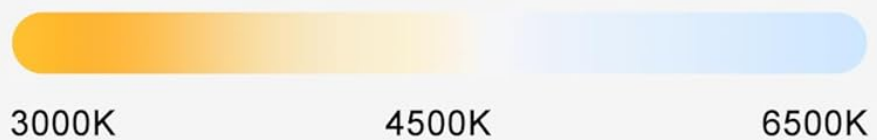 


Image: Illustration of the fan's lighting capabilities, displaying the three adjustable color temperatures (Warm Light 3000K, Natural Light 4500K, Cold White Light 6500K) and the stepless dimming feature.

### 4.5 Quiet Operation

 The fan is designed with a quiet DC motor for minimal noise disruption.

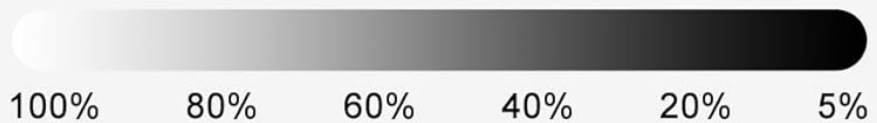

# Quiet Enjoyment

2H timer setting



Image: Graphic demonstrating the low noise output of the Depuley fan (35dB), comparing it to sounds like a library (25dB) and a whisper (45dB), highlighting its quiet performance.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Periodically check that all blade screws are tight. Loose screws can cause wobbling and noise.
- **Light Cover:** Clean the light cover with a soft cloth to maintain light output.
- **Electrical Connections:** Annually inspect all electrical connections for tightness.

## 6. TROUBLESHOOTING

Before attempting any repairs, ensure the power is turned off at the circuit breaker.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker; Verify all wire connections; Replace remote battery or re-pair remote.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Use balancing kit (if included) to balance blades; Ensure mounting bracket is secure.
Light does not work	Loose wire connection in light kit; LED driver failure.	Check light kit wiring; Contact customer service if LED driver is suspected.
Remote control not working	Battery low or dead; Remote not paired with fan; Obstruction between remote and receiver.	Replace battery; Re-pair remote (refer to full manual); Ensure clear line of sight.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Depuley
Model Name	WS-FPZ197-66C
Product Dimensions	66"D x 66"W x 14"H
Item Weight	22.7 pounds
Color	Black
Power Source	DC
Voltage	120 Volts
Wattage	22 watts
Motor Type	Brushless DC Motor

Feature	Detail
Number of Power Levels	6 (Fan Speeds)
Special Features	2H Timer, Dimmable LED Light (3000K-6500K), Memory Function, Quiet DC Motor, Reversible 6 Speeds
Control Method	App, Remote
Indoor/Outdoor Usage	Indoor, Outdoor (Covered Patios)

## 8. WARRANTY AND SUPPORT

---

Depuley is committed to customer satisfaction. This product includes a satisfaction guaranteed warranty.

If you encounter any issues or are not satisfied with your product, please feel free to contact Depuley customer service for assistance. Contact information can typically be found on the product packaging or the official Depuley website.