

ALLIMITY N2QAYB000097

ALLIMITY N2QAYB000097 Replacement Remote Control User Manual

For Panasonic DVD Home Theater Models SC-PTX50 & SC-PTX5

1. INTRODUCTION

This manual provides instructions for the ALLIMITY N2QAYB000097 replacement remote control, designed for use with Panasonic DVD Home Theater systems, specifically models SC-PTX50 and SC-PTX5. This remote operates using infrared (IR) technology and requires no programming or pairing. Please read these instructions carefully before using your new remote control.

2. SETUP: BATTERY INSTALLATION

The ALLIMITY N2QAYB000097 remote control requires two (2) AAA alkaline batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating correct battery placement.

Important: Ensure batteries are inserted with the correct polarity. Incorrect installation can damage the remote control.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required.



Image: Front view of the remote control, displaying all function buttons.

3.1 Basic Functions

- **Power (⏻)**: Turns the Panasonic DVD Home Theater system on or off.
- **TV/AV**: Switches between TV and AV input modes.
- **Volume (+/-)**: Adjusts the master volume level.
- **Mute**: Silences the audio output.
- **DVD**: Selects the DVD function.

- **FM/EXT-IN:** Selects FM radio or external input.
- **Number Buttons (0-9):** Used for direct track selection or inputting numbers.
- **Play ():** Starts playback.
- **Pause ():** Pauses playback.
- **Stop ():** Stops playback.
- **Skip ():** Skips to the next or previous track/chapter.
- **Slow/Search ():** Fast forwards or rewinds, or performs slow motion playback.

3.2 Navigation and Menu Functions

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms selections.
- **TOP MENU:** Accesses the main menu of a DVD.
- **FUNCTIONS:** Accesses various function menus.
- **RETURN:** Goes back to the previous menu or screen.

3.3 Advanced Functions

- **QUICK OSD:** Displays On-Screen Display quickly.
- **ONE TOUCH PLAY:** Initiates playback with a single button press (functionality depends on the connected device).
- **MENU:** Accesses the system menu.
- **PLAY LIST:** Accesses the playlist function.
- **SUBWOOFER:** Adjusts subwoofer settings.
- **LEVEL:** Adjusts audio levels.
- **EQ:** Accesses equalizer settings.
- **H.BASS:** Activates or deactivates the H.BASS feature.
- **GROUP:** Manages group settings.
- **AUDIO:** Changes audio tracks or settings.
- **REPEAT:** Sets repeat playback mode.
- **PLAY MODE:** Selects different playback modes.
- **QUICK REPLAY:** Jumps back a few seconds during playback.
- **ZOOM:** Zooms in on the picture.
- **MANUAL SKIP:** Allows manual skipping.
- **ANGLE/SUBTITLE:** Changes viewing angle or subtitle track.
- **PAGE:** Navigates through pages.
- **SETUP:** Accesses the system setup menu.
- **SLEEP:** Sets the sleep timer.
- **FL DISPLAY:** Controls the fluorescent display.
- **MUTING:** Mutes the audio.

4. COMPATIBILITY

This ALLIMITY N2QAYB000097 replacement remote control is specifically designed to be compatible with the following Panasonic DVD Home Theater models:

- SC-PTX50
- SC-PTX5

No additional programming or setup is required for these models. Simply insert batteries and begin use.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, or high humidity.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	Batteries are dead or inserted incorrectly.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote control works intermittently.	Low battery power. Obstruction between remote and device.	Replace batteries. Ensure a clear line of sight between the remote's IR emitter and the device's IR receiver.
Remote control does not control the device.	Device is not compatible.	Verify that your Panasonic DVD Home Theater model is SC-PTX50 or SC-PTX5. This remote is not universally programmable.

7. SPECIFICATIONS

- **Model:** N2QAYB000097
- **Brand:** ALLIMITY
- **Compatibility:** Panasonic DVD Home Theater SC-PTX50, SC-PTX5
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Maximum Range:** Approximately 33 feet (10 meters)
- **Color:** Black
- **Dimensions (L x W x H):** 5" x 1" x 0.5" (approx. 12.7 cm x 2.54 cm x 1.27 cm)
- **Item Weight:** 84 grams (approx. 2.96 oz)
- **Special Feature:** Ergonomic design

8. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller or your purchase documentation. For technical support or inquiries, please contact the seller directly through the platform where the purchase was made.

Please note that this remote control is designed to function as a direct replacement and does not require complex setup or programming. Ensure your device is compatible as listed in Section 4.