

[Manuals.plus](#) /

› [VIKIO HOME](#) /

› VIKIO HOME Range Hood Insert Instruction Manual

VIKIO HOME VK-RB12-30-T

VIKIO HOME Range Hood Insert

Model: VK-RB12-30-T

User Instruction Manual

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the VIKIO HOME Range Hood Insert. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new range hood. Please read this manual thoroughly before installation and retain it for future reference.



Figure 1: VIKIO HOME Range Hood Insert (Model VK-RB12-30-T)

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for household use only. Do not attempt to repair or replace any part of your range hood unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

- Ensure the power supply is disconnected before installation, cleaning, or servicing.
- Proper grounding is required.
- Do not operate the range hood with a damaged cord or plug.
- Maintain proper ventilation in the room when the range hood is used simultaneously with appliances burning gas or other fuels.
- Clean grease filters regularly to prevent grease fires.

3. PARTS LIST

Verify that all components are present before beginning installation:

- Range Hood Insert Unit
- Ducting (if applicable for ducted installation)
- Charcoal Filters (for ductless conversion)
- Installation Hardware (screws, anchors, brackets)
- User Manual



Figure 2: Included components for the range hood insert.

4. INSTALLATION AND SETUP

The VIKIO HOME Range Hood can be installed in both ducted and ductless configurations. Ensure you have the necessary tools and follow local building codes.

4.1 Pre-Installation Steps

1. Measure your cabinet opening to ensure it accommodates the 30-inch insert. Refer to the specifications section for exact dimensions.
2. Prepare the cabinet for installation, ensuring adequate support for the range hood's weight.
3. For ducted installation, ensure the ductwork is properly sized and routed. For ductless, ensure charcoal filters are installed.

4.2 Mounting the Range Hood

Carefully lift the range hood into the prepared cabinet opening. Secure it using the provided mounting screws and brackets. Ensure it is level and firmly attached.

Your browser does not support the video tag.

Video: Range Hood Insert/Built-in-Installation Demonstration. This video provides a visual guide for installing the range hood insert into your cabinet.

4.3 Electrical Connection

Connect the range hood to a grounded electrical outlet. Ensure the voltage matches the product specifications (110 Volts).



Figure 3: Connecting the range hood to power.

5. OPERATING INSTRUCTIONS

Your VIKIO HOME Range Hood features both touch and gesture controls for ease of use.

5.1 Control Panel Overview



Figure 4: Gesture and Touch Control Panel.

The control panel includes:

- **Power On/Off:** Touch the power icon to turn the unit on or off.

- **Light Control:** Touch the light bulb icon to turn the LED lights on or off. The 4000K LED lights provide clear illumination for your cooking area.
- **Fan Speed Control:** Select from 3 fan speeds (Low, Medium, High) using the fan speed icons. The 980 CFM motor efficiently removes smoke and odors.
- **Gesture Control:** Wave your hand in front of the sensor to activate or adjust settings. This feature offers 25% higher sensitivity for convenient operation, especially with dirty hands.



Figure 5: Bright LED lighting for enhanced visibility.

5.2 Ventilation Modes

The range hood supports both ducted and ductless ventilation. For heavy cooking tasks, ducted mode is recommended. For light to moderate tasks, ductless mode is suitable.



Figure 6: Ducted vs. Ductless Ventilation.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your range hood.

6.1 Cleaning Grease Filters

The stainless steel baffle filters are dishwasher-safe and easy to remove. Clean them regularly (monthly or more frequently depending on cooking habits) to prevent grease buildup and maintain efficient air filtration.

1. Turn off and unplug the range hood.
2. Locate the filter latches and release the filters.
3. Place filters in the dishwasher or wash by hand with hot, soapy water.
4. Allow filters to dry completely before re-installing.



Figure 7: Easy-to-clean stainless steel filters.

6.2 Cleaning Exterior Surfaces

Wipe exterior stainless steel surfaces with a soft cloth and a non-abrasive stainless steel cleaner. Avoid harsh chemicals or abrasive pads that can scratch the finish.

6.3 Replacing Charcoal Filters (Ductless Mode)

If using the range hood in ductless mode, charcoal filters should be replaced every 3-6 months, depending on usage. Refer to the product's accessory guide for compatible replacement filters.

7. TROUBLESHOOTING

If you encounter issues with your range hood, consult the following table before contacting customer service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Range hood does not operate	No power supply	Check if the power cord is plugged in and the circuit breaker is on.
Poor suction performance	Clogged grease filters or improper ducting	Clean or replace grease filters. Check ductwork for obstructions or proper sealing.
Excessive noise	Loose parts, improper installation, or ducting issues	Ensure all screws are tightened. Verify proper installation and check ductwork for kinks or restrictions.
Lights not working	Bulb failure or electrical issue	Replace LED bulbs if necessary. Check electrical connections.

8. SPECIFICATIONS

Feature	Detail
Model Number	VK-RB12-30-T
Air Flow Capacity	980 Cubic Feet Per Minute (CFM)
Material	Stainless Steel
Noise Level	As low as 35 dBA (low speed), under 65 dBA (high speed)
Mounting Type	Insert Mount
Controls Type	Touch & Gesture Control
Voltage	110 Volts
Number of Speeds	3
Item Weight	14.8 Pounds
Light Source Type	LED (4000K, 3W)
Filter Type	Baffle (Dishwasher-safe)
Ventilation Type	Ducted/Ductless Convertible
Product Dimensions (L x W x H)	11.77 x 27.71 x 13.66 inches

Suitable for 30-inch

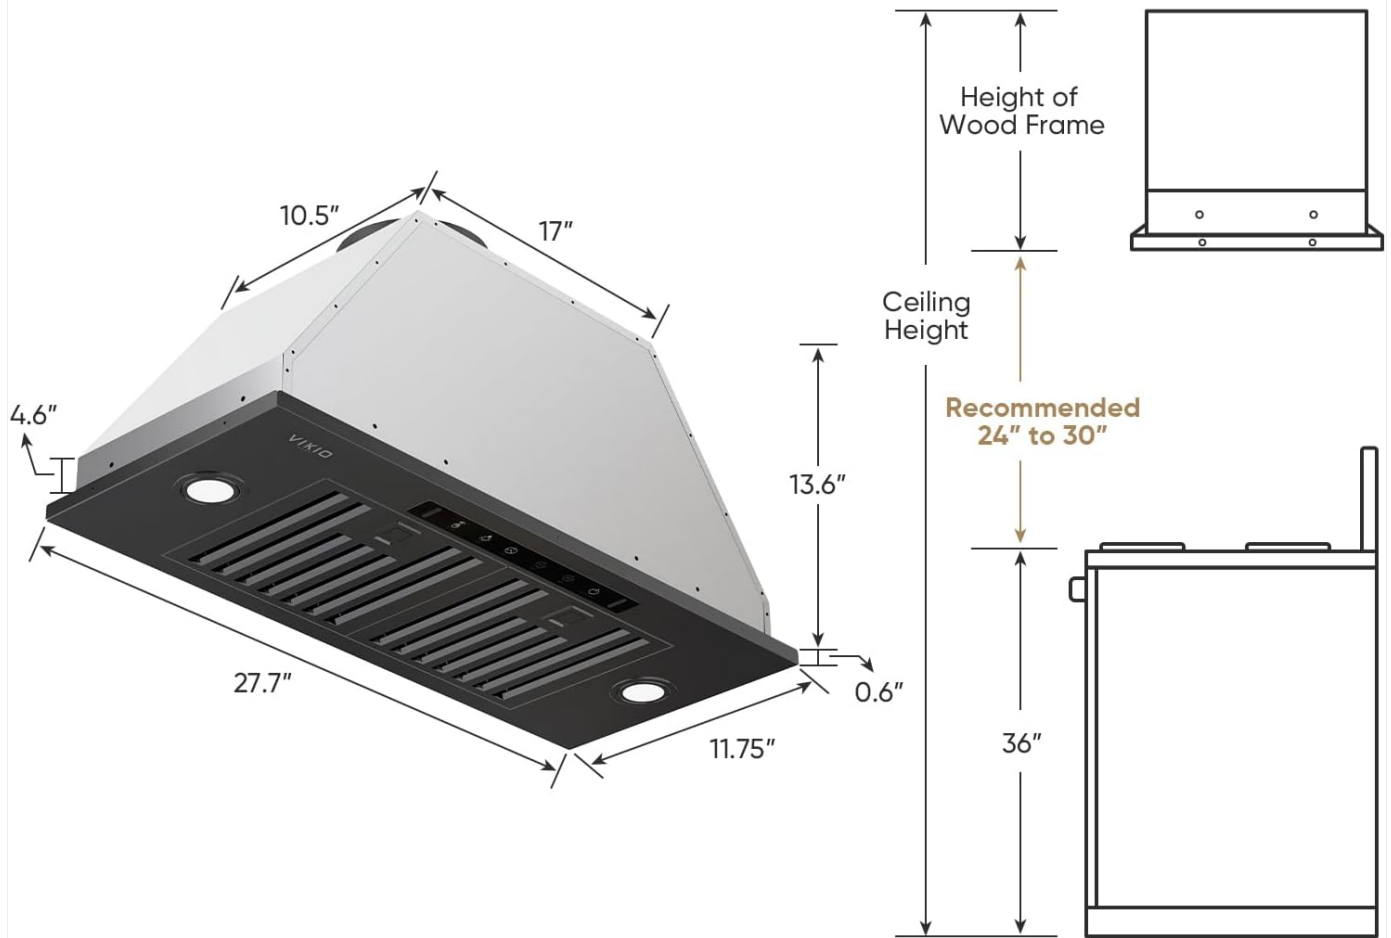


Figure 8: Product Dimensions and Installation Guide.

9. WARRANTY AND SUPPORT

VIKIO HOME offers a comprehensive warranty for this product. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official VIKIO HOME website. For any questions, concerns, or to request free replacements for accessories like filters and lights, please contact our professional and friendly customer service team. Contact information can be found on our website or the product packaging.

[Visit the VIKIO HOME Store for more information](#)

© 2025 VIKIO HOME. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question