

## SUPRENT HC256BX

# SUPRENT HC256BX Professional Cordless Hair Clippers and Trimmer Instruction Manual

Model: HC256BX

## 1. INTRODUCTION

Thank you for choosing the SUPRENT HC256BX Professional Cordless Hair Clippers and Trimmer. This manual provides essential information for the safe and effective operation, maintenance, and care of your new grooming device. Please read it thoroughly before first use and retain it for future reference.

## 2. SAFETY INFORMATION

**WARNING: To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:**

- Do not immerse the device in water or use it near water.
- Keep the device away from heated surfaces.
- Do not use the device if it has a damaged cord or plug, or if it is not working properly.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended household use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Always unplug the device from the electrical outlet immediately after use and before cleaning.
- Store the device in a dry place.

*Note: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is for personal grooming.*

## 3. PACKAGE CONTENTS

Carefully unpack your SUPRENT HC256BX kit and ensure all items are present:



Image: The complete SUPRENT HC256BX hair cutting kit, including the clipper, trimmer, guide combs, cleaning brush, oil, and USB-C charging cables.

- SUPRENT Professional Hair Clipper
- SUPRENT Professional Hair Trimmer
- 6 Guide Combs for Clipper (1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm)
- 3 Guide Combs for Trimmer (1mm, 2mm, 3mm)
- USB-C Charging Cables (x2)
- Cleaning Brush
- Lubricating Oil
- Instruction Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components of your SUPRENT HC256BX devices.

# FACTORY-CALIBRATED ZERO GAPPED FOR PRECISE TRIMMING

No Adjustment Required



Image: Detail of the trimmer blade, highlighting its factory-calibrated zero-gapped design for precise trimming down to 0.1mm.

## 4.1 Clipper Features:

- **Titanium-Coated Steel Blades:** Durable and hypoallergenic for safe use.
- **Adjustable Taper Lever:** 5 length settings (0.1-0.2mm precision) for fine-tuning cut length without guide combs.
- **High-Performance 7500 RPM Motor:** Provides powerful and consistent cutting.
- **Ergonomic Metal Body:** Designed for comfortable grip and reduced vibration.
- **"Staring Eye" Battery Indicator:** Illuminates blue for sufficient battery, red for low charge.

## 4.2 Trimmer Features:

- **Precision T-Blade:** Ideal for detailing, edging, and intricate designs.
- **Compact Design:** For intricate work and hard-to-reach areas.
- **"Staring Eye" Battery Indicator:** Illuminates blue for sufficient battery, red for low charge.

## 5. SETUP AND CHARGING

### 5.1 Initial Charge:

Before first use, fully charge both the clipper and trimmer. This typically takes approximately 2.5 hours for each device, providing up to 3 hours of cordless operation.

1. Connect the USB-C charging cable to the charging port at the bottom of the clipper/trimmer.
2. Plug the other end of the USB-C cable into a compatible USB power adapter (not included), computer, or car charger.
3. The "Staring Eye" indicator will glow red while charging. Once fully charged, it will turn blue.
4. Disconnect the device once fully charged to preserve battery life.



Image: Illustration of the hair clipper and trimmer being charged via USB-C cables, showing the battery indicator lights.

## 5.2 Attaching Guide Combs:

Select the desired guide comb for your preferred hair length. The clipper uses larger combs (1.5mm to 13mm), while the trimmer uses smaller combs (1mm to 3mm).

1. Ensure the device is turned off.
2. Align the guide comb with the blade and push it firmly until it clicks into place.
3. To remove, gently pull the comb away from the blade.





Image: The SUPRENT hair clipper and trimmer displayed with their respective sets of blue guide combs, illustrating how they attach.

## 6. OPERATING INSTRUCTIONS

### 6.1 General Hair Cutting:

1. Ensure hair is clean and dry.
2. Attach the desired guide comb to the clipper.
3. Turn on the clipper.
4. Start cutting from the nape of the neck, moving upwards against the direction of hair growth.
5. Use smooth, overlapping strokes.
6. For fading, adjust the taper lever or switch to smaller guide combs as you move up the head.

### 6.2 Using the Trimmer for Detailing and Edging:

1. The trimmer is designed for precise lines, edges, and intricate designs.
2. Use without a guide comb for closest cuts and sharp lines.
3. Hold the trimmer at a slight angle to the skin and gently create desired shapes.
4. Be cautious as the blades are very sharp.



Image: A series of images demonstrating the use of the SUPRENT trimmer for various grooming tasks, including beard trimming, necklines, and detailing.

### 6.3 Battery Indicator:

- **Blue Light:** Indicates sufficient battery for operation.
- **Red Light (Pulsing):** Indicates low battery, requiring recharge.
- **Red Light (Solid while charging):** Indicates charging in progress.
- **Blue Light (Solid while charging):** Indicates fully charged.



Image: Visual representation of the "Staring Eye" battery indicator, showing blue for sufficient battery and red for low battery or charging status.

## 7. MAINTENANCE

Regular cleaning and oiling will ensure optimal performance and extend the lifespan of your SUPRENT devices.

### 7.1 Cleaning the Blades:

1. Turn off and unplug the device.
2. Use the provided cleaning brush to remove loose hairs from the blades.
3. For a more thorough cleaning, you may carefully detach the blade assembly (refer to specific instructions if provided with the device for blade removal, otherwise clean while attached).
4. Do not rinse the entire device under water. The blades can be wiped with a damp cloth, but ensure they are completely dry before reattaching or oiling.

## 7.2 Oiling the Blades:

1. After each use or cleaning, apply 1-2 drops of the provided lubricating oil to the blades.
2. Turn on the device for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.
4. Oiling helps maintain blade sharpness and reduces friction.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low or no battery charge.	Charge the device fully (refer to Section 5.1).
Blades pull hair or cut poorly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades (refer to Section 7). If problem persists, blades may need replacement.
Device makes unusual noise or vibrates excessively.	Hair caught in blades or internal issue.	Clean blades thoroughly. If noise continues, discontinue use and contact customer support.
Battery indicator not working.	Device malfunction.	Ensure device is charging correctly. If issue persists, contact customer support.

## 9. SPECIFICATIONS

- **Model:** HC256BX
- **Brand:** SUPRENT
- **Motor Speed:** 7500 RPM
- **Blade Material:** Titanium-Coated Steel
- **Precision (Clipper):** 0.1-0.2mm (5 length settings)
- **Power Source:** Cordless / Corded (USB-C Rechargeable)
- **Battery Life:** Up to 3 hours cordless operation
- **Charging Time:** Approximately 2.5 hours
- **Body Material:** Metal
- **Color:** Black
- **Recommended Uses:** Beard, Head, Mustache, Neck
- **Package Dimensions:** 8.78 x 6.26 x 2.68 inches
- **Item Weight:** 1.54 Pounds




## 10. WARRANTY AND SUPPORT

SUPRENT products are manufactured to high-quality standards. For warranty information, product support, or to purchase replacement parts, please visit the official SUPRENT store or contact customer service.

Official SUPRENT Store: [SUPRENT Store on Amazon](#)

Please retain your proof of purchase for any warranty claims.

## Related Documents - HC256BX

	<p><a href="#">Suprent BT575BX Beard Trimmer User Manual</a></p> <p>User manual for the Suprent BT575BX Beard Trimmer, detailing specifications, basic parameters, product description, and warranty information.</p>
	<p><a href="#">SUPRENT BC-VD-NH515 User Manual - Operation, Safety, and Specifications</a></p> <p>Comprehensive user manual for the SUPRENT BC-VD-NH515, providing detailed instructions on operation, safety precautions, maintenance, troubleshooting, and product specifications.</p>
	<p><a href="#">SUPRENT PRO ZEUS Hair Clipper Kit HC735BX User Manual</a></p> <p>User manual for the SUPRENT PRO ZEUS Hair Clipper Kit HC735BX, detailing specifications, basic parameters, product description, usage instructions, and warranty information.</p>