

## JVC XS-N1154B

# JVC XS-N1154B Bluetooth Speaker Instruction Manual

## 1. INTRODUCTION

---

Thank you for purchasing the JVC XS-N1154B Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

---

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble or modify the speaker. This will void the warranty.
- Keep the speaker away from water and liquids, despite its waterproof rating, to prevent damage to internal components.
- Use only the specified charging cable and power adapter.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

## 3. PACKAGE CONTENTS

---

Ensure all items are present in the package:

- JVC XS-N1154B Bluetooth Speaker
- Charging Cable
- User Manual
- Remote Control (if included)

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the speaker's components and controls.



**Figure 1:** Front view of the JVC XS-N1154B Bluetooth Speaker, showcasing the speaker grille and integrated music-activated LED lights.



**Figure 2:** Top view of the JVC XS-N1154B Bluetooth Speaker, displaying the control panel with various buttons and the volume knob.

### Control Panel Functions:

- **Power Button:** Turns the speaker on or off.

- **Mode (M) Button:** Switches between Bluetooth, USB, SD Card, and FM Radio modes.
- **Play/Pause (▶ ||) / TWS Button:** Plays or pauses audio. Long press for TWS (True Wireless Stereo) pairing.
- **Previous Track (◀◀) Button:** Skips to the previous track or tunes down in FM mode.
- **Next Track (▶▶) Button:** Skips to the next track or tunes up in FM mode.
- **EQ Button:** Cycles through equalizer presets.
- **Volume Knob:** Rotates to adjust the volume level.

## 5. SETUP

---

### 5.1 Charging the Speaker

1. Connect the charging cable to the speaker's charging port.
2. Plug the other end of the cable into a suitable USB power adapter (not included) or a powered USB port.
3. The charging indicator light will illuminate, typically red, during charging.
4. Once fully charged, the indicator light may change color (e.g., turn off or turn blue/green). Disconnect the speaker from the power source.

### 5.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the speaker powers on and you hear an audible prompt.
- **To Power Off:** Press and hold the Power button again until the speaker powers off.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the Mode (M) button to switch to Bluetooth mode. The speaker will indicate it is ready for pairing (e.g., a blinking LED or audible prompt).
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "JVC XS-N1154B" from the list of devices.
4. Once paired, the speaker will provide an audible confirmation, and the Bluetooth indicator light will become solid.
5. You can now play audio from your device through the speaker.

### 6.2 USB/SD Card Playback

1. Insert a USB flash drive or an SD card (with supported audio files) into the corresponding port on the speaker.
2. The speaker will automatically switch to USB or SD card mode and begin playing audio. If not, press the Mode (M) button to select the correct input.
3. Use the Previous Track (◀◀), Next Track (▶▶), and Play/Pause (▶ ||) buttons to control playback.

## 6.3 FM Radio Operation

1. Press the Mode (M) button to switch to FM Radio mode.
2. To auto-scan and save available stations, press and hold the Play/Pause (▶||) button. The speaker will scan and store stations automatically.
3. Use the Previous Track (◀◀) and Next Track (▶▶) buttons to navigate between saved FM stations.

## 6.4 LED Light Modes

The speaker features music-activated LED lights. These lights typically synchronize with the audio playback. There may be an additional button or a combination of buttons to cycle through different light modes or to turn them off. Refer to the remote control section for specific controls if available.

## 6.5 Volume Control

Rotate the Volume Knob on the top panel clockwise to increase volume and counter-clockwise to decrease volume.

## 6.6 Remote Control Usage

If your package includes a remote control, it provides convenient access to various functions:

- **Power:** On/Off
- **Mode:** Switch input sources (Bluetooth, USB, SD, FM)
- **Volume +/-:** Adjust volume
- **Play/Pause:** Control playback
- **Previous/Next:** Skip tracks/stations
- **EQ:** Change equalizer presets
- **LED:** Control LED light modes (if applicable)

# 7. MAINTENANCE

---

## 7.1 Cleaning

Wipe the speaker's exterior with a soft, dry, lint-free cloth. Do not use liquid cleaners, sprays, or solvents, as these may damage the finish or internal components. Ensure all ports are dry before use, especially given its waterproof nature.

## 7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the battery periodically to maintain its lifespan.

# 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.

Problem	Possible Cause	Solution
No sound.	Volume is too low or muted. Device not paired correctly.	Increase volume. Re-pair Bluetooth device. Check audio source.
Bluetooth pairing fails.	Speaker is not in pairing mode. Device is too far. Interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer. Turn off other Bluetooth devices.
USB/SD card not playing.	Incorrect file format. Card/drive not inserted correctly.	Ensure audio files are in a supported format. Reinsert the USB drive/SD card. Press Mode button to select correct input.
FM radio reception is poor.	Weak signal.	Relocate the speaker to an area with better reception.

## 9. SPECIFICATIONS

- **Model:** XS-N1154B
- **Brand:** JVC
- **Connectivity:** Bluetooth, USB, SD Card
- **Radio:** Digital FM Radio
- **Power Output:** 4 Watts
- **Audio Output Mode:** Stereo
- **Control Method:** Remote
- **Material:** Plastic
- **Waterproof:** Yes
- **Power Source:** Battery Powered
- **Dimensions:** Approximately 18.6D x 18.9W x 25.5H cm
- **Weight:** Approximately 1.2 kg
- **Compatible Devices:** Laptop, Smartphone

## 10. WARRANTY AND SUPPORT

### 10.1 Warranty Information

This JVC XS-N1154B Bluetooth Speaker comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

### 10.2 Customer Support

For technical assistance, warranty claims, or further inquiries, please contact JVC customer support through their official website or the retailer where the product was purchased. Please have your product model number (XS-N1154B) and proof of purchase ready when contacting support.

