

GOEBLESON JF5491

GOEBLESON 70.9" Floor Lamp with Shelves (Model JF5491) Instruction Manual

Model: JF5491 | Brand: GOEBLESON

[Product Overview](#)

[Safety Instructions](#)

[Package Contents](#)

[Setup & Assembly](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

The GOEBLESON 70.9" Floor Lamp with Shelves (Model JF5491) is a modern standing lamp designed to provide both illumination and functional storage. It features three light sources with linen shades, integrated dual-layer shelves, and a convenient foot switch for easy operation. This lamp is suitable for various rooms including living rooms, bedrooms, studies, and offices.

Key Features:

- **Chic Design with Three Linen Shades:** The lamp includes three naturally textured linen shades that diffuse light to create a soft, warm, and inviting ambiance.
- **Dual-Layer Storage Solution:** Two vintage-style shelves, crafted from high-quality engineered wood, offer practical storage or display space. Each shelf can support up to 20 lbs (9 kg).
- **Sturdy Metal Base:** A heavy-duty metal base ensures stability and provides an additional platform for decorative items.
- **Convenient Foot Switch:** Easily turn the lamp on or off with a simple tap of the foot switch. The 5.6-foot power cord allows flexible placement.
- **E26 Bulb Compatibility:** Equipped with E26 bases, compatible with various bulbs (not included) up to 60 watts, allowing for diverse lighting needs.

Double-Shelf Floor Lamp

Two shelves for convenient item placement.



Image 1.1: The GOBLESON 70.9" Floor Lamp with Shelves providing ambient lighting in a bedroom.

2. SAFETY INSTRUCTIONS

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Always disconnect the power cord from the electrical outlet before cleaning, changing bulbs, or

performing any maintenance.

- **Bulb Requirements:** Use only E26 base bulbs. Do not exceed the maximum wattage of 60 watts per bulb. Using higher wattage bulbs can cause overheating and fire.
- **Placement:** Place the lamp on a flat, stable surface to prevent tipping. Keep the lamp away from water and flammable materials.
- **Cord Management:** Ensure the power cord is not pinched or damaged. Do not place heavy objects on the cord. Keep the cord out of high-traffic areas to prevent tripping hazards.
- **Children and Pets:** Keep children and pets away from the lamp during operation and assembly. Do not allow them to play with the lamp or its components.
- **Cleaning:** Clean the lamp only with a soft, dry cloth. Do not use liquid or abrasive cleaners.
- **Damage:** Do not operate the lamp if the cord or plug is damaged, or if the lamp has been dropped or damaged in any way. Contact customer support for assistance.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, please contact GOEBLESON customer service.

Your browser does not support the video tag.

Video 3.1: Installation video showing all parts and assembly steps for the GOEBLESON Floor Lamp with Shelves.

Refer to the installation video above (0:00:59 mark) for a visual representation of the package contents. Typically, your package should include:

- Lamp Base (1)
- Vertical Poles (various lengths, typically 6-9 sections)
- Wooden Shelves (2)
- Lamp Holders with E26 Sockets (3)
- Linen Lampshade Fabric (3)
- Lampshade Metal Rings (6, 2 per shade)
- Foot Switch (integrated with power cord)
- Power Cord
- Assembly Hardware (e.g., washers, nuts)
- Instruction Manual

4. SETUP & ASSEMBLY

Assembly is straightforward and requires no special tools. Follow these steps carefully. For a visual guide, please refer to the "GOEBLESON Floor Lamp with Shelves, Installation Video" (Video 3.1) provided in the Package Contents section.

1. **Prepare the Base:** Place the lamp base on a clean, flat surface. Identify the initial vertical pole sections. Carefully feed the power cords through the poles as you assemble them.
2. **Assemble Lower Poles:** Screw the first set of vertical poles into the lamp base. Ensure the wires are not twisted or pinched.
3. **Install First Shelf:** Slide the first wooden shelf down over the assembled poles until it rests securely. Ensure the wires pass through the designated holes.
4. **Assemble Middle Poles:** Connect the next set of vertical poles on top of the first shelf. Continue feeding the wires through.
5. **Install Second Shelf:** Slide the second wooden shelf down over the middle poles.

6. **Assemble Upper Poles and Lamp Holders:** Connect the final vertical poles. Attach the three lamp holders to the top of these poles, ensuring the electrical connections are secure.
7. **Assemble Lampshades:** For each lampshade, take one fabric piece and two metal rings. Clip the fabric onto the rings, securing the top and bottom edges. Use the Velcro strip to close the vertical seam of the fabric, forming a cylindrical shade.
8. **Attach Lampshades:** Carefully place each assembled lampshade onto its respective lamp holder. Secure them with the provided retaining rings.
9. **Insert Bulbs:** Screw three E26 base bulbs (not included, max 60W each) into the lamp holders.
10. **Final Check:** Ensure all connections are tight, wires are clear, and the lamp is stable. Plug the power cord into a suitable electrical outlet.



Image 4.1: The lamp is compatible with E26 bulbs (max 60W, not included). Each vintage-style shelf supports up to 20 lbs.

5. OPERATING INSTRUCTIONS

The GOEBLESON Floor Lamp is designed for simple and convenient operation.

- **Power On/Off:** Use the integrated foot switch located on the power cord to turn the lamp on or off. A single press will toggle the power.

- **Bulb Selection:** The lamp uses E26 base bulbs. You can choose bulbs with different color temperatures (e.g., warm white, cool white) to create various ambiances. Ensure bulbs do not exceed 60 watts.



Image 5.1: The lamp can produce warm light or cool light depending on the installed E26 bulbs.

Your browser does not support the video tag.

Video 5.2: Product overview video demonstrating the lamp's features and use in various settings.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your GOEBLESON Floor Lamp.

- **Cleaning:**

- *Lamp Body:* Wipe the metal poles and wooden shelves with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- *Lampshades:* Gently dust the linen shades with a soft brush or a lint roller. For deeper cleaning, lightly dab with a damp cloth, avoiding saturation.

- **Bulb Replacement:**

- Always ensure the lamp is unplugged before replacing bulbs.
- Allow bulbs to cool completely before handling.
- Unscrew the old bulb and screw in a new E26 base bulb, ensuring it does not exceed 60 watts.

- **Inspections:** Periodically check the power cord for any signs of damage or fraying. Ensure all connections remain secure.

7. TROUBLESHOOTING

If you encounter any issues with your lamp, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	Power cord not plugged in. Foot switch not pressed. Bulb is loose or burnt out. Power outlet is not working.	Ensure the power cord is securely plugged into a working outlet. Press the foot switch firmly. Tighten or replace the bulb(s). Test the outlet with another device.
Lamp flickers.	Loose bulb connection. Faulty bulb.	Tighten the bulb(s). Replace the bulb(s) with new ones.
Lamp is unstable.	Poles not securely tightened. Uneven surface.	Review assembly steps and ensure all pole connections are securely tightened. Place the lamp on a flat, level surface.
Missing parts during assembly.	Packaging error.	Contact GOEBLESON customer service immediately for replacement parts.

8. SPECIFICATIONS

Feature	Detail
Brand	GOEBLESON
Model Number	JF5491

Feature	Detail
Lamp Type	Floor Lamp
Product Dimensions (D x W x H)	11.8"D x 11.8"W x 70.89"H
Item Weight	6.4 Kilograms
Number of Light Sources	3
Bulb Base	E26
Max Wattage per Bulb	60 Watts (Bulbs not included)
Light Source Type	Compatible with LED, Incandescent, CFL
Shade Material	Linen
Shade Color	Beige
Base Material	Metal
Shelf Material	Particleboard (Engineered Wood)
Shelf Weight Capacity	20 lbs (9 kg) per shelf
Control Type	Foot Switch
Power Cord Length	5.6 feet (approx.)
Room Type	Living Room, Bedroom, Study, Office
Color	Rustic Brown + Beige
Style	Modern

9. WARRANTY & SUPPORT

Warranty Information: Specific warranty details for your GOEBLESON product may vary. Please refer to the warranty card included in your package or visit the official GOEBLESON website for the most up-to-date warranty policy.

Customer Support: If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact GOEBLESON customer service. Have your model number (JF5491) and purchase information ready when contacting support.

Contact information (e.g., email, phone, website) would typically be provided here by the manufacturer.