

[Manuals.plus](#) /

› [WASTDE](#) /

› WASTDE Wireless Powerbank PN-W35 User Manual

WASTDE PN-W35

WASTDE Wireless Powerbank PN-W35 User Manual

Model: PN-W35 | Brand: WASTDE

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your WASTDE Wireless Powerbank PN-W35. Please read this manual thoroughly before using the device and retain it for future reference.

2. PRODUCT OVERVIEW

The WASTDE PN-W35 is a 20000mAh magnetic wireless power bank designed for fast charging. It features built-in USB-C and iOS cables, wireless charging capabilities, and a ring holder that doubles as a stand. It can charge up to four devices simultaneously.



Figure 2.1: WASTDE Wireless Powerbank PN-W35. This image displays the power bank magnetically attached to the back of a smartphone, highlighting its compact design, integrated USB-C and iOS charging cables, and the versatile ring holder that can also function as a kickstand. The power bank's indicator lights are visible at the bottom.

3. WHAT'S IN THE BOX

- WASTDE Wireless Powerbank PN-W35
- Charging Cable (USB-C)
- User Manual

4. SPECIFICATIONS

Feature	Detail
Model Number	PN-W35

Battery Capacity	20000mAh
Product Dimensions	4.7 x 2.7 x 1 inches
Item Weight	7.9 ounces
Input/Output Ports	USB Type-C (In/Out), Built-in USB-C Cable, Built-in iOS Cable, Wireless Charging
Special Features	Magnetic Attachment, Integrated Cables, Ring Holder/Stand, Overcharge Protection, Short Circuit Protection, Temperature Control
Voltage	3.7 Volts

5. SETUP AND CHARGING THE POWER BANK

- 1. Initial Charge:** Before first use, fully charge the power bank. Connect the included USB-C cable to the power bank's USB-C input/output port and the other end to a compatible USB wall adapter (not included). The LED indicators will show charging progress.
- 2. LED Indicators:** The power bank features LED lights to indicate the remaining battery level. Refer to the power bank's surface for the specific indicator pattern.

6. OPERATING INSTRUCTIONS

6.1 Charging Devices Wirelessly (Magnetic)

1. Ensure your device supports magnetic wireless charging (e.g., iPhone 12 series and newer).
2. Align the back of your compatible device with the magnetic charging area on the power bank. The magnets will snap into place, and charging will begin automatically.

6.2 Charging Devices via Built-in Cables

- 1. For iOS Devices:** Pull out the built-in iOS cable and connect it to your iPhone (11/XR/X/8/7/6 Series, 12/13/14/15/16 Series).
- 2. For USB-C Devices:** Pull out the built-in USB-C cable and connect it to your Android device (Samsung Galaxy, Google Pixel, Moto, LG, iPad) or other USB-C compatible devices.
3. Charging will commence automatically.

6.3 Charging Devices via USB-C Port

1. Use your own USB-C to USB-C or USB-C to Lightning cable.
2. Connect one end of your cable to the power bank's USB-C input/output port and the other end to your device.
3. Charging will commence automatically.

6.4 Using the Ring Holder/Stand

- The integrated ring on the back of the power bank can be pulled out to serve as a secure finger grip for carrying.
- It can also be rotated and positioned to act as a kickstand, allowing you to prop up your phone for hands-free viewing.

7. MAINTENANCE

- Keep the power bank dry and away from moisture.
- Avoid extreme temperatures. Do not expose to direct sunlight or high heat.
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store in a cool, dry place when not in use for extended periods.
- Charge the power bank at least once every three months to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Charging cable faulty; Wall adapter not working; Power bank battery depleted.	Try a different USB-C cable and wall adapter. Ensure the power bank is connected to a live power source.
Device not charging from power bank	Power bank battery depleted; Incorrect cable connection; Device not compatible with wireless charging; Device case too thick for wireless charging.	Recharge the power bank. Ensure cables are securely connected. For wireless charging, remove thick phone cases or use a cable. Verify device compatibility.
Slow charging	Using a low-power adapter; Cable not supporting fast charging; Device drawing less power.	Use a fast-charging compatible wall adapter (e.g., 18W or higher). Ensure the cable supports fast charging.
Power bank overheating	Overuse; Poor ventilation; Environmental temperature too high.	Disconnect devices and allow the power bank to cool down. Ensure proper ventilation during use. Avoid charging in direct sunlight or hot environments. The power bank has built-in temperature control for safety.

9. SAFETY INFORMATION

- Do not disassemble, open, or shred the power bank.
- Do not expose the power bank to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit the power bank. Do not store in a box or drawer where other metal objects may short-circuit it.
- Do not subject the power bank to mechanical shock such as impact or dropping.
- In the event of a leak, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Keep the power bank out of reach of children.
- This power bank is equipped with multiple protection systems including temperature control, overcharge protection, and short circuit protection.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official WASTDE website. Please have your model number (PN-W35) and purchase details ready when contacting support.



© 2025 WASTDE. All rights reserved.