

[manuals.plus](#) /› [Fieety](#) /› [Fieety Elite 9 Cordless Vacuum Cleaner User Manual](#)

Fieety Elite 9

Fieety Elite 9 Cordless Vacuum Cleaner

USER MANUAL

Model: Elite 9 | ASIN: B0F4WTPS27

Introduction

Thank you for choosing the Fieety Elite 9 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors. Put away after use to prevent accidents.
- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. Batteries can explode in a fire.

Package Contents

Please check the package contents to ensure all parts are present and undamaged.



Image: All components of the Fieety Elite 9 Cordless Vacuum Cleaner, including the main unit, extension wand, floor brush, crevice tool, dusting brush, spare battery, wall mount, and filters.

- Main Vacuum Unit (Handheld)
- Extension Wand
- Motorized Floor Brush
- Crevice Tool
- 2-in-1 Dusting Brush
- Spare Lithium-ion Battery
- Wall Mount Charging Dock
- Power Adapter
- HEPA Filter (Pre-installed + Spare)
- User Manual (This document)

Product Overview

Familiarize yourself with the main components of your Fieety Elite 9 Cordless Vacuum Cleaner.



Image: The Fieety Elite 9 Cordless Vacuum Cleaner in its upright configuration, alongside its removable spare battery.

- **Main Unit:** Contains the motor, dust cup, and control panel.
- **Dust Cup:** Transparent container for collecting dust and debris.
- **Filters:** Cyclone and HEPA filtration system for efficient dust separation.
- **Extension Wand:** Connects the main unit to the floor brush or other attachments for extended reach.
- **Motorized Floor Brush:** Features a 2-in-1 soft-hard roller for various floor types.
- **LED Display:** Shows suction mode, remaining power, and blockage warnings.
- **Removable Battery:** Lithium-ion battery for cordless operation.

Setup

1. Assembly

1. **Attach the Extension Wand:** Align the main vacuum unit with the top end of the extension wand and push until it clicks into place.
2. **Attach the Floor Brush:** Align the bottom end of the extension wand with the motorized floor brush and push until it clicks into place.
3. **Install Battery:** Insert the fully charged battery into the slot at the back of the main unit until it clicks.
4. **Attach Accessories:** For handheld use, attach the crevice tool or 2-in-1 dusting brush directly to the main unit.

2. Charging the Battery

The Fieety Elite 9 comes with two removable lithium-ion batteries, providing extended runtime.

60MINS LONG RUNTIME



lithium battery



20-60Mins
Long Runtime



4Hours
Fast Charging



Image: An illustration detailing the battery's performance, indicating a 20-60 minute runtime per battery and approximately 4 hours for a full charge.

- **Direct Charging:** Connect the power adapter directly to the charging port on the battery.
- **Wall Mount Charging:** Install the wall mount charging dock in a convenient location. Connect the power adapter to the wall mount. You can hang the entire vacuum cleaner on the wall mount for charging, or remove the battery and charge it separately on the dock.

Wall Mounted Charging & Storage

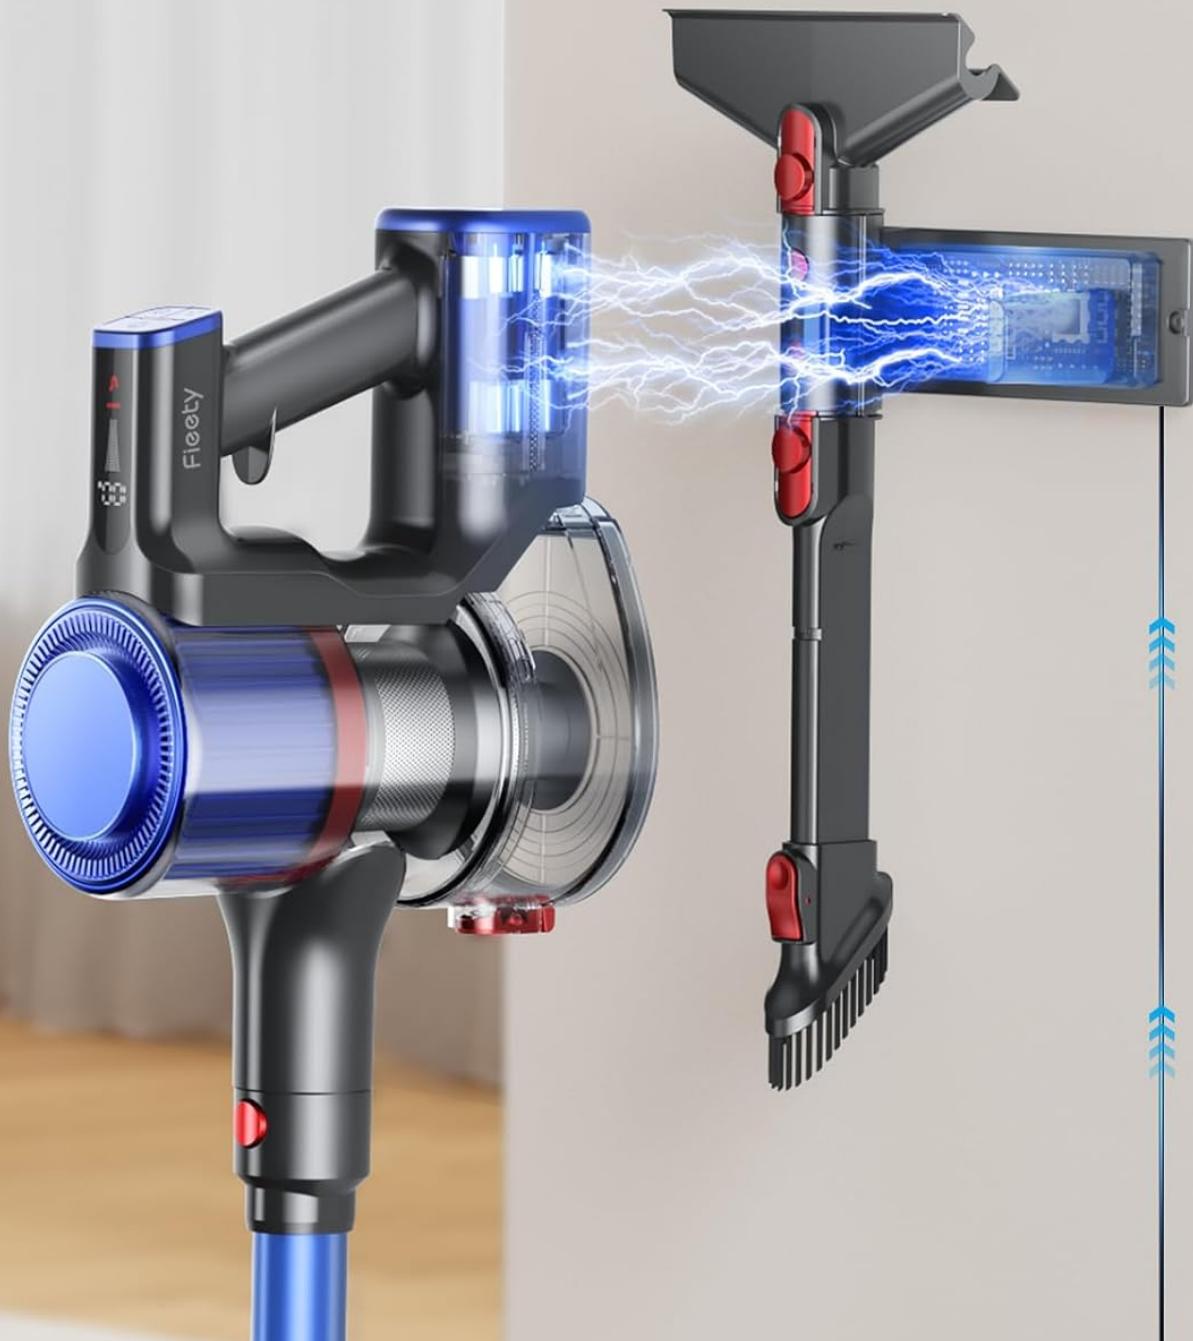


Image: The Fieety Elite 9 Cordless Vacuum Cleaner mounted on its wall charging and storage dock, illustrating the charging connection.

A full charge typically takes approximately 4 hours. The battery indicator on the LED display will show charging status.

Operating Instructions

1. Powering On/Off

- Press the power button once to turn the vacuum cleaner on.

- Press the power button again to turn the vacuum cleaner off.

2. Adjusting Suction Modes

The Fieety Elite 9 offers three suction modes to suit various cleaning needs.



Image: An illustration highlighting the 550W upgraded motor and the three suction levels: 18KPa, 28KPa, and 45KPa, suitable for different debris types.

- While the vacuum is on, press the mode button (usually located near the power button) to cycle through the three

suction levels: Low, Medium, and Max (up to 45KPa).

- The current suction mode will be displayed on the LED screen.

3. Using Attachments

- **Motorized Floor Brush:** Ideal for cleaning carpets and hard floors. Its 2-in-1 soft-hard roller effectively picks up debris and reduces hair entanglement.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.
- **2-in-1 Dusting Brush:** Use the brush bristles for delicate surfaces like curtains or keyboards, or retract the bristles for a wider nozzle for upholstery.

Soft-hard Roller for Floors and Carpets



Image: A close-up view of the motorized floor brush, showcasing its soft-hard roller design, effective for both hard floors and carpets.

4. Self-Standing Function

The Fieety Elite 9 features a stable upright technology, allowing the vacuum cleaner to stand on its own during breaks in cleaning.

Self-standing Design



Image: The Feetty Elite 9 Cordless Vacuum Cleaner standing independently in an upright position, demonstrating its self-standing design.

Simply push the vacuum into an upright position, and it will lock into place, providing convenience for temporary pauses during cleaning.

5. LED Display

The intuitive LED display provides real-time information about the vacuum's status.

Multi-function LED Display



Image: A detailed view of the multi-function LED display, showing indicators for battery level, suction mode, and potential blockage warnings.

- **Battery Level:** Indicates the remaining battery charge.
- **Suction Mode:** Shows the currently selected suction power (Low, Medium, Max).
- **Blockage Warning:** Alerts you if the roller brush or air duct is blocked, indicated by a specific icon.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dust Cup

- Press the dust cup release button to detach the dust cup from the main unit.
- Hold the dust cup over a trash bin and press the bottom release latch to open the dust cup and empty its contents.
- Close the dust cup bottom and reattach it to the main unit until it clicks.

It is recommended to empty the dust cup after each use or when the MAX fill line is reached.

2. Cleaning Filters

The Fieety Elite 9 uses a multi-stage filtration system including a cyclone and HEPA filter.

- **Removing Filters:** Twist and pull to remove the filter assembly from the dust cup. Separate the HEPA filter from the cyclone filter.
- **Cleaning:** Tap the filters gently over a trash bin to remove loose dust. For a deeper clean, rinse the filters under running water.
- **Drying:** Allow all filter components to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use a dryer or other heating device.

Clean filters regularly, especially if suction power decreases. Replace HEPA filters every 3-6 months depending on usage.

Immersed in the Aroma



Image: A visual representation of the built-in scented card feature, which adds a pleasant aroma during the cleaning process.

The built-in scented card can be replaced or refreshed during filter maintenance to maintain a pleasant aroma during cleaning.

3. Cleaning the Brush Roll

- Turn off the vacuum and detach the motorized floor brush.
- Locate the brush roll release tab/lock on the side of the brush head. Unlock and remove the brush roll.

- Use scissors or a cleaning tool to cut and remove any tangled hair or debris from the brush roll.
- Reinsert the clean brush roll and lock it back into place.

4. Battery Care

- Always use the original charger provided.
- Do not expose the battery to extreme temperatures or direct sunlight.
- If storing the vacuum for an extended period, charge the battery to about 50% and store it in a cool, dry place.

Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Loss of suction.	Dust cup is full; Filters are clogged; Air duct or brush roll is blocked.	Empty dust cup. Clean or replace filters. Check and clear any blockages in the air duct or brush roll.
Brush roll not spinning.	Hair or debris tangled in brush roll; Brush roll is not properly installed.	Clean the brush roll. Ensure it is correctly reinserted and locked.
Short battery runtime.	Battery not fully charged; Battery life degrading.	Ensure battery is fully charged. If battery life has significantly decreased, consider replacing the battery.
LED display shows warning.	Indicates a blockage in the air duct or brush roll.	Refer to the LED display section for specific warning icons and clear any indicated blockages.

Specifications

Feature	Detail
Brand	Fieety
Model Name	Elite 9
ASIN	B0F4WTPS27
Motor Power	550W Brushless Motor
Suction Power	Up to 45KPa
Battery Type	Removable Lithium-ion
Runtime	Up to 60 minutes (per battery), 120 minutes (with spare battery)
Charging Time	Approx. 4 hours
Filter Type	Cyclone, HEPA

Feature	Detail
Number of Suction Modes	3
Form Factor	Stick
Special Features	Self-standing, Wall Mount Charging, LED Display, Scented Card Slot

Warranty and Support


Fieety products are manufactured to the highest quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or visit the official Fieety website. You can also contact customer support through the retailer where you purchased the product.



© 2024 Fieety. All rights reserved.

Related Documents - Elite 9

<p>此页不印刷 成型尺寸: 110*180mm 材质: 封面材质200g铜版纸+覆膜 内页105g铜版纸 颜色: Pantone1291C+4C印刷 装订: 骑马订</p>	<p>Fieety Elite 9 Cordless Vacuum Cleaner Quick User Guide</p> <p>This quick user guide provides essential information for operating, assembling, cleaning, and maintaining the Fieety Elite 9 cordless vacuum cleaner. Learn about product features, charging, troubleshooting, and warranty.</p>
<p>此页不印刷 成型尺寸: 110*180mm 材质: 封面材质200g铜版纸+覆膜 内页105g铜版纸 颜色: Pantone1291C+4C印刷 装订: 骑马订</p>	<p>Fieety Elite 9 Cordless Vacuum Cleaner Quick User Guide</p> <p>A comprehensive quick user guide for the Fieety Elite 9 Cordless Vacuum Cleaner, covering product features, charging, assembly, operation, cleaning, maintenance, and troubleshooting.</p>
<p>此页不印刷 成型尺寸: 110*180mm 材质: 封面材质200g铜版纸+覆膜 内页105g铜版纸 颜色: Pantone1291C+4C印刷 装订: 骑马订</p>	<p>Fieety V7 Cordless Vacuum Cleaner Quick User Guide</p> <p>This guide provides essential information for setting up, operating, and maintaining your Fieety V7 cordless vacuum cleaner. Learn how to assemble, charge, use different modes, and perform regular cleaning for optimal performance.</p>

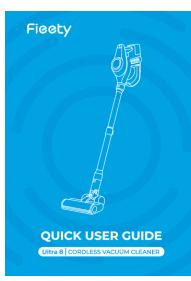	<p><u>Feetty V9 Cordless Vacuum Cleaner Quick User Guide</u></p> <p>A quick user guide for the Feetty V9 Cordless Vacuum Cleaner, covering important safety warnings, product components, charging instructions, assembly, operation modes, cleaning and maintenance procedures, troubleshooting, and warranty information.</p>
	<p><u>Feetty Ultra 8 Cordless Vacuum Cleaner Quick User Guide</u></p> <p>This quick user guide provides essential information for the Feetty Ultra 8 cordless vacuum cleaner, including safety precautions, product identification, assembly instructions, operating modes, charging procedures, cleaning and maintenance tips, troubleshooting common issues, warranty information, and disposal guidelines.</p>
<p>此页不印刷 成型尺寸: 110*180mm 材质: 封面封底200g铜版纸+覆哑膜 内页105g铜版纸 颜色: Pantone1291C专色+4C印刷 装订: 骑马钉</p>	<p><u>Feetty Elite 9 Cordless Vacuum Cleaner Quick User Guide</u></p> <p>This quick user guide provides essential information for operating, assembling, cleaning, and maintaining the Feetty Elite 9 cordless vacuum cleaner. Learn about product features, charging, troubleshooting, and warranty.</p>

Documents - Feetty – Elite 9



此页不印刷
成型尺寸: 110*180mm
材质: 封面封底200g铜版纸+覆哑膜
内页105g铜版纸
颜色: Pantone1291C专色+4C印刷
装订: 骑马钉

[Feetty Elite 9 Cordless Vacuum Cleaner Quick User Guide](#)

This quick user guide provides essential information for operating, assembling, cleaning, and maintaining the Feetty Elite 9 cordless vacuum cleaner. Learn about product features, charging, troubleshooting, and warranty.

lang: **score:21** filesize: 9.8 M page_count: 49 document date: 2024-05-09

此页不印刷
成型尺寸: 110*180mm
材质: 封面封底200g铜版纸+覆哑膜
内页105g铜版纸
颜色: Pantone2191C专色+4C印刷
装订: 骑马钉

Feetty Elite 9 Cordless Vacuum Cleaner Quick User Guide

A comprehensive quick user guide for the Feetty Elite 9 Cordless Vacuum Cleaner, covering product features, charging, assembly, operation, cleaning, maintenance, and troubleshooting.

lang: score:17 filesize: 9.8 M page_count: 49 document date: 2024-05-23