

IWOBAC WD08-5K

IWOBAC 5K Digital Camera User Manual

Model: WD08-5K

1. INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your IWOBAC 5K Digital Camera. Designed for photography enthusiasts and vloggers, this camera captures stunning 5K video and 75MP photos, offering advanced features like autofocus, 18X digital zoom, and Wi-Fi connectivity. Please read this manual thoroughly before using your camera to ensure optimal performance and longevity.

2. PACKAGE CONTENTS

Upon opening the package, verify that all items listed below are present and in good condition:

- IWOBAC 5K Digital Camera
- Two (2) 1150mAh Rechargeable Batteries (BL-5C type)
- One (1) 64GB SD Card
- USB Cable (for charging and data transfer)
- User Manual (this document)



Image: The IWOBAC 5K Digital Camera shown with its included accessories: two BL-5C batteries and a 64GB Micro SD card.

3. PRODUCT FEATURES

3.1 5K Video & 75MP Photo Resolution

Capture stunning visuals with 5K video recording at 15 frames per second (FPS) and high-resolution 75-megapixel still images. The camera is equipped with a 12MP CMOS sensor for vibrant colors and sharp details in various lighting conditions. A built-in flash is included for low-light photography.

5K UHD

Digital Video Camera



Enjoy smooth & vivid video recording



Image: The camera's 5K UHD video capability is demonstrated by a dynamic shot of a surfer, emphasizing smooth and vivid video recording.

3.2 Autofocus & 18X Digital Zoom

The A/F autofocus system ensures quick and precise subject capture. Utilize the 18x digital zoom to bring distant subjects closer without compromising image quality. Adjust zoom easily using the T/W button.

75MP Autofocus Digital Camera

Fast and precise autofocus to capture every detail

18X



8X



4X



Image: A visual representation of the camera's 18X digital zoom and autofocus capabilities, showing clear focus on subjects at varying distances.

3.3 3.0-inch 180° Flip Screen

The 3.0-inch IPS display features a 180° flip mechanism, ideal for self-portraits and vlogging. The camera is lightweight (232g) and includes a standard tripod screw mount. Built-in features include anti-shake, continuous shooting, time-lapse, slow-motion, and smile capture modes.

3.0-inch 180° Flip Screen Camera

with beauty and smile capture function



 beauty

 180°
Flip Screen

 smile
capture

Image: A user demonstrating the 3.0-inch 180° flip screen, perfect for capturing selfies and vlogs with ease.

3.4 Wireless Wi-Fi & Webcam Functionality

Transfer photos and videos wirelessly to your smartphone or tablet via a dedicated app. Connect to a PC via USB for file transfer or use the camera as a webcam for live streaming and video calls.

Built-in WiFi

Easily upload
photos to your phone
for quick sharing



Download

Remote

Playback

Image: The camera's built-in Wi-Fi feature allows for easy and quick transfer of photos to a smartphone for sharing.

3.5 Long-Lasting Battery & Ample Storage

The camera includes two 1150mAh rechargeable batteries, each providing up to 80 minutes of continuous HD video recording. A 64GB SD card is also provided for ample storage space.

Long-Lasting Recording,
Perfect For Travel
And Vlog Creation



1150mAh



battery and
64GB SD card

Image: The camera's long-lasting battery and included 64GB SD card are depicted, emphasizing suitability for travel and extended recording.

4. SETUP

4.1 Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.

2. Insert a fully charged 1150mAh BL-5C battery into the compartment, ensuring the contacts align correctly.
3. Close the battery compartment cover until it clicks securely into place.

4.2 SD Card Installation

1. Locate the SD card slot, usually next to the battery compartment.
2. Insert the 64GB SD card with the metal contacts facing down, pushing gently until it clicks into place.
3. To remove, push the card in slightly until it springs out.

4.3 Charging the Battery

Connect the camera to a power source (e.g., computer USB port or USB wall adapter) using the provided USB cable. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.

- * Built-in Flash
- * Beauty Function
- * Auto Smile Capture

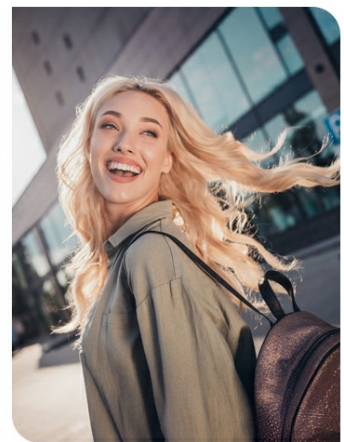 
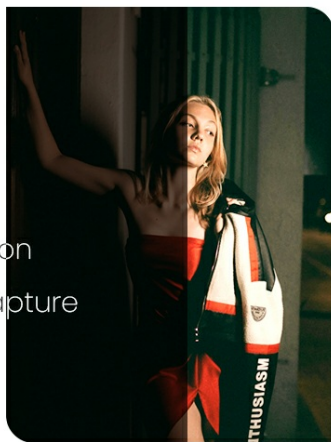 


Image: An overview of the camera's key components, including the battery compartment, SD card slot, 3.0-inch 180° flip screen, and 1/4 screw port for tripod mounting.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the Power button to turn the camera on or off.

5.2 Taking Photos

Select your desired photography mode from the menu:

- **Single Photo:** Captures one image per shutter press.
- **Auto Shooting:** Automatically takes photos at set intervals.
- **Continuous Shooting:** Captures a rapid sequence of photos (3P/s or 5P/s).
- **Timed Shooting:** Sets a delay before taking a photo.

5K Ultra HD Video Camera

Capture perfect moments, ideal for creators and vloggers



Image: Visual examples of the four available photography modes: Single Photo, Auto Shooting, Continuous Shooting, and Timed Shooting.

5.3 Recording Videos

Choose from various video recording modes:

- **Normal Recording:** Standard video capture.
- **Loop Recording:** Records video in a continuous loop, overwriting older footage.
- **Slow-Motion Recording:** Captures video at a higher frame rate for slow-motion playback.
- **Time-lapse Recording:** Records frames at set intervals to create a sped-up video.
- **Video + Photo:** Captures both video and still images simultaneously.



Image: Examples illustrating the five different video modes available on the camera: Normal, Loop, Slow-Motion, Time-lapse, and Video + Photo.

5.4 Wi-Fi Connectivity

To transfer files wirelessly:

1. Download the dedicated app to your smartphone or tablet.
2. Enable Wi-Fi on the camera and connect your smart device to the camera's Wi-Fi network.
3. Use the app to browse, download, and share your photos and videos.

5.5 Webcam Functionality

To use the camera as a webcam:

- 1. Connect the camera to your computer using the USB cable.
- 2. Select "Webcam Mode" on the camera's screen (if prompted).
- 3. Your computer should recognize the camera as a webcam, allowing its use for live streaming or video calls.





Single Photo — Auto Shooting — Continuous Shooting — Timed Shooting

4 Photography Modes

Image: The camera's versatility is shown through its webcam functionality for video calls and the ability to record while charging, ensuring continuous operation.

5.6 Special Features

  - **Built-in Flash:** Provides illumination in low-light conditions.
- **Beauty Function:** Enhances facial features in photos.
- **Auto Smile Capture:** Automatically takes a photo when a smile is detected.
- **19 Kinds of Filters:** Apply various artistic filters to your photos and videos.

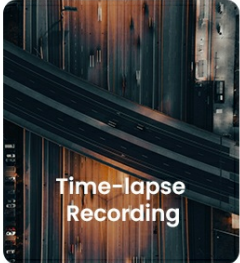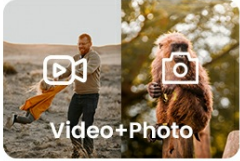

Normal Recording

Slow-Motion Recording

Loop Recording

Video+Photo

Time-lapse Recording

5
Video Modes

Image: Demonstrations of the camera's built-in flash for improved lighting, the beauty function for enhanced portraits, and auto smile capture for candid moments.



Image: A display showcasing the variety of 19 filters available, allowing users to add different styles to their photos and videos.

6. MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Avoid using harsh chemicals.
- **Cleaning the Body:** Wipe the camera body with a dry, soft cloth. Do not use liquid cleaners.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Fully charge batteries before first use. Avoid overcharging or completely draining batteries.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is dead or not inserted correctly.	Charge the battery or reinsert it correctly. Ensure battery contacts are clean.
Cannot take photos/videos.	SD card is full, locked, or not inserted.	Delete files, unlock the SD card, or insert it properly. Format the SD card if necessary (this will erase all data).
Poor image quality.	Lens is dirty, low light, or incorrect settings.	Clean the lens. Use flash in low light. Adjust exposure settings.
Wi-Fi connection issues.	Incorrect password, out of range, or app issue.	Verify Wi-Fi password. Move closer to the camera. Restart camera and smart device. Reinstall app.

8. SPECIFICATIONS

Model Name	WD08-5K
Brand	IWOBAC
Effective Still Resolution	75 MP

Photo Sensor Resolution	12 MP
Video Resolution	5K (15FPS)
Optical Zoom	18x Digital Zoom
Screen Size	3.0 Inches (180° Flip IPS LCD)
Memory Storage	64 GB SD Card (included)
Battery Type	1150mAh BL-5C (x2 included)
Connectivity	Wi-Fi, USB
Special Features	Autofocus, Anti-shake, Continuous Shooting, Time-lapse, Slow-motion, Smile Capture, Built-in Flash, Beauty Function, Webcam Function
Weight	232g

9. WARRANTY AND SUPPORT

IWOBAC is committed to providing high-quality, user-friendly digital cameras. Your satisfaction is our top priority. For any issues or support inquiries, please contact our customer service. We are dedicated to resolving any problems you may encounter or providing a refund.

For further assistance, please visit the official IWOBAC store on Amazon:[IWOBAC Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F4WZ7XZJ>

More documents and user manuals: <https://manuals.plus/>