

[manuals.plus](#) /› [Ardes](#) /› [Ardes ARMST02D Automatic Shirt Dryer and Ironing Mannequin User Manual](#)

## Ardes ARMST02D

# Ardes ARMST02D Automatic Shirt Dryer and Ironing Mannequin User Manual

Model: ARMST02D | Brand: Ardes

[Product Overview](#)   [Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty](#)  
& Support

## 1. PRODUCT OVERVIEW

The Ardes ARMST02D Blowy D is an automatic shirt dryer and ironing mannequin designed to dry and iron shirts, blouses, t-shirts, and dresses in minutes. It features an innovative breathable fabric mannequin for ultra-fast drying and perfect ironing, saving time and effort. The mannequin's side zippers allow it to adapt to all sizes, from XS to XXL. Equipped with an efficient 1400 W motor, adjustable temperature and air speed settings, and a timer up to 3 hours, it can handle even delicate garments. The touch control panel simplifies operation. The unit is compact for easy storage and includes a set of 4 weight clips for optimal ironing results.



ASCIUGATURA E  
STIRATURA IN  
POCHI MINUTI



2 VELOCITÀ  
DELL'ARIA



4 LIVELLI DI  
TEMPERATURA

# BLOWY D

## ASCIUGA E STIRA CAMICIE

Figure 1: Ardes ARMST02D Automatic Shirt Dryer and Ironing Mannequin. This image displays the Ardes ARMST02D mannequin with its key dimensions: 102 cm height, 44 cm width, and 16.5 cm depth. It highlights features such as automatic drying and ironing in minutes, 2 air speeds, and 4 temperature levels.

### Key Features:

- Automatic Drying and Ironing:** Dries and irons garments completely automatically in minutes, eliminating wrinkles and saving time.
- Versatile Garment Compatibility:** Suitable for shirts, blouses, t-shirts, sweaters, and dresses. Adjustable hinges accommodate sizes from XS to XXL.
- Customizable Performance:** Features 4 power levels, 4 temperature settings, 2 air speeds, and a 180-minute timer for tailored drying based on fabric type.
- Efficient Motor:** 1400 W motor provides gentle yet powerful drying.
- User-Friendly Controls:** Intuitive touch control panel for easy operation.
- Compact Design:** Easy to store with dimensions of 44 cm (length), 16.5 cm (depth), and 102 cm (assembled height), 26 cm (disassembled height).
- Wrinkle Removal:** Includes 4 weight clips to ensure perfect, wrinkle-free results.

## 2. SETUP

### 2.1 Unpacking and Inspection

1. Carefully remove all components from the packaging.
2. Verify that all parts are present and undamaged. Refer to the packing list for a complete inventory.
3. Retain the packaging for future storage or transport.

## **2.2 Assembly**

1. Place the main unit (base) on a stable, flat surface.
2. Insert the telescopic rod into the designated slot on the main unit. Secure it firmly.
3. Attach the inflatable mannequin fabric to the top of the telescopic rod and secure it according to the instructions provided in the quick start guide. Ensure the fabric is properly aligned and sealed to allow for inflation.
4. Connect the power cord to the main unit and then to a suitable electrical outlet.

## **2.3 Placement**

- Ensure the appliance is placed on a stable, level surface to prevent tipping.
- Position the unit in a well-ventilated area, away from walls or other objects that could obstruct airflow.
- Keep the unit away from water sources and flammable materials.

## **3. OPERATION**

---

### **3.1 Preparing the Garment**

1. Ensure the garment is clean and damp (not dripping wet). For best results, use garments that have just been spin-dried in a washing machine.
2. Carefully place the garment over the inflatable mannequin. Smooth out any major creases by hand.
3. Attach the 4 provided weight clips to the hem of the garment at even intervals. These clips help to stretch the fabric and ensure a wrinkle-free finish.

**SET DI 4 MOLLETTE  
E PESINI**  
**Per una stiratura  
perfetta**



**PRIMA / DOPO**  
**Stiratura in**  
**10 minuti\***

\*Tempo di stiratura per una camicia classica di cotone

Figure 2: Using the 4 weight clips for optimal ironing. The image shows the set of 4 weight clips used to ensure perfect ironing results. A 'before' section displays a wrinkled shirt, while the 'after' section shows the same shirt perfectly ironed in approximately 10 minutes.

### 3.2 Using the Control Panel

- Power On:** Press the power button on the touch control panel to turn on the appliance.
- Select Temperature:** Choose one of the 4 temperature levels (e.g., RT, 50, 60, 70, Low, High) suitable for your garment's fabric type. Refer to the garment's care label.
- Adjust Air Speed:** Select one of the 2 available air speeds. A higher speed will dry faster but may be more intense for delicate fabrics.
- Set Timer:** Use the timer function to set the desired drying duration, from 15 to 180 minutes. The appliance will operate autonomously and shut off once the timer expires.

## ASCIUGATURA PERSONALIZZATA

**Consente di selezionare la durata, la temperatura e la velocità dell'aria per personalizzare l'asciugatura in base ai tessuti**



Figure 3: Touch control panel for setting duration, temperature, and air speed. A detailed view of the touch control panel, showing options to select drying duration (15 to 180 minutes), temperature levels (RT, 50, 60, 70, Low, High), and air speed settings.

### 3.3 Drying and Ironing Process

- Once settings are selected, the mannequin will inflate with warm air, drying and smoothing the garment.
- Monitor the process. For most shirts, perfect results can be achieved in about 10 minutes.
- The appliance will automatically shut off when the timer finishes.

## ASCIUGATURA E STIRATURA

**L'aria gonfia il manichino  
e asciuga e stira  
automaticamente in  
pochi minuti l'indumento**



## SUPER COMPATTO

**Asta telescopica smontabile, facile da riporre**

Figure 4: Air inflation for automatic drying and ironing. This visual explains the core function: air inflates the mannequin to automatically dry and iron garments in minutes. It also emphasizes the super compact design with a dismountable telescopic rod for convenient storage.

### 3.4 Removing the Garment

- After the cycle is complete and the unit has cooled slightly, carefully remove the weight clips.
- Gently lift the garment off the mannequin. It should be dry and wrinkle-free.



**IDEALE  
PER TUTTE LE TAGLIE**

Figure 5: Mannequin in use, ideal for all sizes. The mannequin is shown in a home setting, effectively drying and ironing a shirt, reinforcing its 'Ideal for all sizes' feature due to adjustable hinges.



# CURA TOTALE

**Per camicie,  
camicette, t-shirt,  
maglioni, felpe e  
giacche di ogni taglia.  
Anche per capi  
delicati**

Figure 6: Versatility for various garments. This image demonstrates the versatility of the Blowy D mannequin, suitable for a wide range of garments including shirts, blouses, t-shirts, sweaters, and dresses of all sizes, even delicate items.

## 4. MAINTENANCE

### 4.1 Cleaning the Mannequin Fabric

- Ensure the appliance is unplugged and completely cool before cleaning.
- The breathable fabric of the mannequin can be gently wiped with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Allow the fabric to air dry completely before storing or next use.

### 4.2 Cleaning the Base Unit

- Wipe the exterior of the base unit with a soft, damp cloth.
- Do not immerse the base unit in water or any other liquid.
- Ensure no water enters the ventilation openings.

### 4.3 Storage

- When not in use, disassemble the telescopic rod and mannequin fabric for compact storage.

- Store the appliance in a dry, cool place, away from direct sunlight and moisture.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly. Power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet.
Garments are not drying/ironing effectively.	Incorrect temperature/air speed settings. Garment too wet. Mannequin fabric not properly sealed. Weight clips not used or improperly placed.	Adjust temperature and air speed settings according to fabric type. Ensure garment is damp, not dripping wet. Check that the mannequin fabric is securely attached and sealed. Use all 4 weight clips and distribute them evenly.
Excessive wrinkles remain.	Garment not smoothed before placing on mannequin. Insufficient drying time. Weight clips not providing enough tension.	Manually smooth out major wrinkles before starting the cycle. Increase the timer duration. Ensure weight clips are securely attached and providing adequate tension to the fabric.
Mannequin does not inflate properly.	Air leakage from fabric or connections. Obstruction in air vents.	Check all connections and zippers on the mannequin fabric for proper sealing. Ensure air vents on the base unit are clear of debris.

## 6. SPECIFICATIONS

- **Brand:** Ardes
- **Model Number:** ARMST02D
- **Color:** White
- **Product Dimensions:** 44 x 16.5 x 102 cm (Length x Width x Height)
- **Power:** 1400 watts
- **Voltage:** 230 Volts (AC)
- **Material:** Plastic
- **Product Weight:** 3 kg
- **Heating Time:** Up to 180 minutes (Timer setting)
- **Style:** Upright

## 7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Ardes website. Keep your purchase receipt as proof of purchase for any warranty claims.

