

ATOZEE AT-CP20 Android tablet

ATOZEE 10 Inch Android 15 Tablet AT-CP20 User Manual

Model: AT-CP20

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your ATOZEE 10 Inch Android 15 Tablet, model AT-CP20. Designed for both productivity and entertainment, this tablet offers a versatile computing experience.

Equipped with a 10.1-inch high-definition screen, a powerful processor, and ample memory, it is suitable for various tasks including office work, online learning, video streaming, and gaming. The included accessories transform it into a portable workstation.

2. PACKAGE CONTENTS

Please verify that all items listed below are present in your package:

- ATOZEE 10 Inch Android 15 Tablet
- Keyboard
- Mouse
- Protective Case
- Stylus
- TYPE-C Cable



Image: The ATOZEE 10 Inch Android 15 Tablet displayed with its full set of accessories, including a detachable keyboard, a wireless mouse, a stylus, a protective case, and a USB-C charging cable.

3. PRODUCT OVERVIEW

The ATOZEE AT-CP20 tablet is engineered for performance and user convenience. Key features include:

- **Display:** 10.1-inch high-definition screen with 1280x800 pixel resolution.
- **Operating System:** Android 15.
- **Processor:** 2.0GHz Octa-Core CPU for efficient multitasking.
- **Memory:** 12GB RAM (4GB physical + 8GB virtual) for smooth operation.
- **Storage:** 64GB internal storage, expandable up to 1TB via microSD card.
- **Cameras:** 8MP rear camera and 2MP front camera for photos and video calls.
- **Battery:** 6000mAh battery for extended usage.
- **Connectivity:** Supports 5G and Wi-Fi 6 for fast internet access.
- **Dimensions:** Approximately 9.8 x 6.7 x 0.3 inches.

- **Weight:** Approximately 1 pound.

Powerful Processor and Fast Response

Octa Core Cpu and Android 15 System provide Fast app running and web browsing speed.



Android 15



10.1 inch



12GB RAM



64GB ROM



Expandable 1TB



Image: A visual representation of the tablet's core specifications, emphasizing its powerful processor, Android 15 operating system, 10.1-inch display, 12GB RAM, 64GB internal storage, and 1TB expandable storage capacity.



8MP
Rear Camera



2MP
Front Camera



Image: A close-up view of the tablet's camera specifications, indicating an 8MP rear camera and a 2MP front camera, accompanied by sample images demonstrating their use for photography and video calls.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the tablet using the provided TYPE-C cable and a compatible power adapter (not included). The 6000mAh battery ensures long usage times, but an initial full charge is recommended.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the screen illuminates.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options that appear on the screen.

4.3 Connecting to Wi-Fi

1. Go to 'Settings' > 'Network & internet' > 'Wi-Fi'.
2. Toggle Wi-Fi 'On'.
3. Select your desired network from the list of available networks.
4. Enter the network password if prompted, then tap 'Connect'. The tablet supports 5G and Wi-Fi 6 for faster connections.

4.4 Pairing Accessories (Keyboard, Mouse)

The included keyboard and mouse connect via Bluetooth.

1. Ensure the keyboard and mouse are charged and powered on.
2. On your tablet, go to 'Settings' > 'Connected devices' > 'Bluetooth'.
3. Toggle Bluetooth 'On'.
4. The tablet will scan for nearby Bluetooth devices. Select the keyboard and mouse from the list to pair them. Follow any on-screen prompts.

4.5 Inserting a MicroSD Card

To expand storage up to 1TB:

1. Locate the microSD card slot on the side of the tablet.
2. Gently insert the microSD card into the slot until it clicks into place.
3. The tablet will prompt you to format the card for use. Follow the on-screen instructions.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

The tablet runs on Android 15. Navigate using touch gestures:

- **Tap:** Select an item.
- **Swipe:** Scroll through lists or pages.
- **Pinch-to-zoom:** Zoom in or out on images and web pages.
- **Long press:** Access contextual menus or move icons.

5.2 Using the Keyboard, Mouse, and Stylus

Once paired, these accessories enhance your interaction:

- **Keyboard:** Use for typing documents, emails, and navigating with arrow keys.
- **Mouse:** Provides precise cursor control for navigating the interface, selecting items, and interacting with applications.
- **Stylus:** Ideal for drawing, note-taking, and precise selections on the screen.



Image: A user operating the ATOZEE tablet in a desktop-like setup, utilizing the external keyboard and mouse for productivity tasks, demonstrating its versatility as a mini-laptop.

5.3 Camera Usage

The tablet features an 8MP rear camera and a 2MP front camera.

1. Open the 'Camera' application.
2. Switch between front and rear cameras as needed.
3. Tap the shutter button to take photos or start/stop video recording.

5.4 App Installation and Management

Download applications from the Google Play Store.

1. Open the 'Play Store' app.
2. Search for desired applications.
3. Tap 'Install' to download and install.

4. To manage apps, go to 'Settings' > 'Apps' to uninstall or adjust permissions.

Store All You Want

Download any APPS you want via Google Play Store

12GB
RAM

64GB
ROM

1TB
EXPANSION

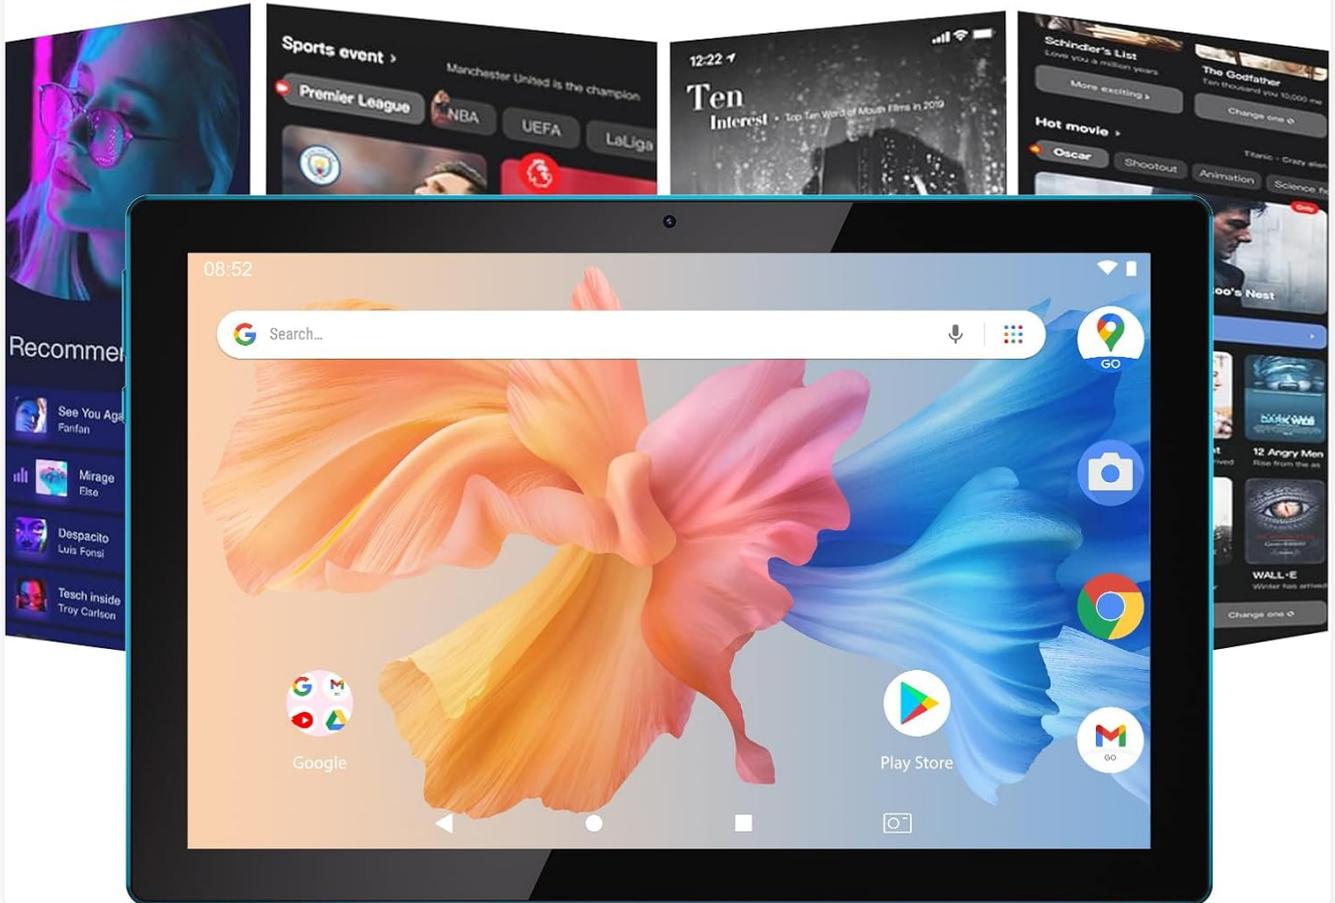


Image: The tablet's display showcasing the Google Play Store interface and various application icons, illustrating the device's capability to download and store numerous apps, supported by its 12GB RAM, 64GB ROM, and 1TB expansion.

6. MAINTENANCE

6.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive materials or harsh chemicals. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution.

6.2 Battery Care

To prolong the life of your 6000mAh battery:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the provided TYPE-C cable for charging.

6.3 Software Updates

Regularly check for and install system updates to ensure optimal performance and security. Go to 'Settings' > 'System' > 'System update'.

6.4 Storage Optimization

To maintain performance, periodically clear unnecessary files and uninstall unused applications. Utilize the 1TB expansion slot for large media files.

7. TROUBLESHOOTING

This section addresses common issues you might encounter.

7.1 Tablet is Slow or Unresponsive

- Close background applications that are not in use.
- Clear the cache of frequently used apps.
- Restart the tablet.
- Ensure sufficient free storage space (consider using the 1TB expansion).

7.2 Keyboard/Mouse Not Connecting

- Ensure the keyboard and mouse are fully charged and powered on.
- Verify Bluetooth is enabled on the tablet ('Settings' > 'Connected devices' > 'Bluetooth').
- Unpair and re-pair the devices.
- Check if the accessories require specific drivers or firmware updates (refer to accessory documentation).

7.3 Unable to Connect to Wi-Fi

- Ensure Wi-Fi is enabled on the tablet.
- Double-check the Wi-Fi password.
- Restart your Wi-Fi router.
- Try connecting to a different Wi-Fi network to isolate the issue.
- Forget the network and reconnect.

7.4 Screen Issues (e.g., no display, flickering)

- Ensure the tablet is charged.
- Perform a hard reset by holding the power button for 10-15 seconds.
- If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	AT-CP20 Android tablet

Feature	Specification
Operating System	Android 15
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels
Processor	2.0GHz Octa-Core
RAM	12GB (4GB physical + 8GB virtual)
Internal Storage	64 GB
Expandable Storage	Up to 1TB via MicroSD card
Rear Camera	8 MP
Front Camera	2 MP
Battery Capacity	6000mAh
Average Battery Life	8 Hours
Wireless Type	802.11g (Wi-Fi 6 supported), 5G
Product Dimensions	9.8 x 6.7 x 0.3 inches
Item Weight	1 pound
Color	Navy blue

9. WARRANTY INFORMATION

Specific warranty details for the ATOZEE AT-CP20 tablet are typically provided with your purchase documentation or on the manufacturer's official website. Please refer to these resources for information regarding warranty duration, coverage, and claims procedures.

10. SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact ATOZEE customer support through the contact information provided with your product or on the official ATOZEE website. When contacting support, please have your model number (AT-CP20) and purchase details ready.

