

[Manuals.plus](#) /

› [ATOZEE](#) /

› ATOZEE 10-inch Android 15 Tablet User Manual (Model AT-CP20)

ATOZEE AT-CP20

ATOZEE 10-inch Android 15 Tablet User Manual

Model: AT-CP20

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your ATOZEE 10-inch Android 15 Tablet (Model AT-CP20). Please read this guide thoroughly to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

Upon unboxing your ATOZEE AT-CP20 Tablet, please verify that all the following items are included:

- ATOZEE 10-inch Android 15 Tablet
- Bluetooth Keyboard
- Wireless Mouse
- Protective Case
- Stylus Pen
- USB Type-C Charging Cable



Image: The ATOZEE tablet displayed with its full set of accessories, including the keyboard, mouse, stylus, protective case, and USB-C cable.

SETUP

1. Initial Charging

Before first use, fully charge the tablet using the provided USB Type-C cable and a compatible power adapter (not included). The battery indicator on the screen will show charging status.

2. Power On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the ATOZEE logo appears.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the on-screen options.
- **To Restart:** Press and hold the Power button, then select "Restart" from the on-screen options.

3. Connecting Accessories

The included keyboard and mouse connect via Bluetooth. The stylus is typically passive and does not require pairing.

Bluetooth Keyboard/Mouse Pairing:

1. Ensure the keyboard/mouse is charged and powered on.
2. On your tablet, navigate to **Settings > Connected devices > Bluetooth**.
3. Toggle Bluetooth **On**.
4. Put the keyboard/mouse into pairing mode (refer to their individual instructions, usually by pressing a dedicated button or key combination).
5. Select the device name (e.g., "Bluetooth Keyboard," "Bluetooth Mouse") from the list of available devices on your tablet.
6. Follow any on-screen prompts to complete pairing.



Image: A user interacting with the ATOZEE tablet, keyboard, and mouse, demonstrating the accessory setup.

4. Wi-Fi Connection

1. Go to **Settings > Network & internet > Internet**.

2. Toggle Wi-Fi **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted, then tap **Connect**.

OPERATING THE TABLET

1. Basic Navigation

- **Touch Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Access apps, widgets, and notifications.
- **Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.

2. Installing Applications

Your tablet comes with Google Mobile Services (GMS) certification, allowing full access to the Google Play Store.

1. Ensure you are connected to Wi-Fi.
2. Open the **Play Store** app from your home screen or app drawer.
3. Search for the desired application.
4. Tap **Install** to download and install the app.

Store All You Want

Download any APPS you want via Google Play Store

12GB
RAM

64GB
ROM

1TB
EXPANSION

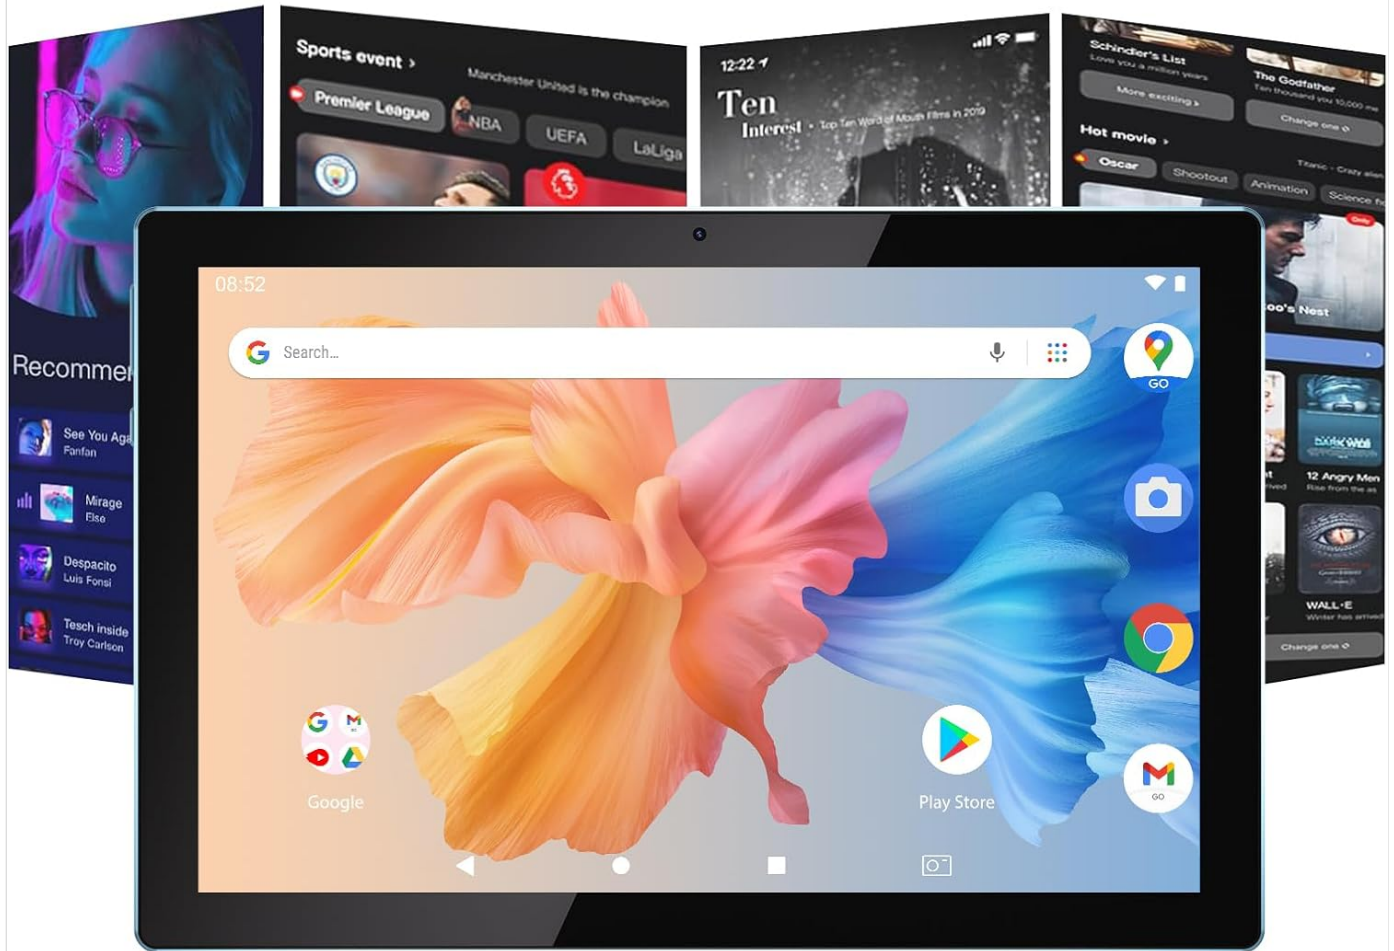


Image: The tablet screen displaying the Google Play Store interface, ready for app downloads.

3. Camera Usage

The tablet features an 8MP rear camera and a 2MP front camera.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo.
3. Use the camera switch icon to toggle between front and rear cameras.
4. Access settings within the app for various modes and adjustments.



8MP
Rear Camera



2MP
Front Camera



Image: Visual representation of the tablet's dual camera system, highlighting its 8MP rear and 2MP front cameras.

4. Storage Management

The tablet comes with 64GB of internal storage and supports expansion up to 1TB via a microSD card (not included).

- **To insert a microSD card:** Locate the card slot on the side of the tablet and gently insert the card until it clicks into place.
- **To manage storage:** Go to **Settings > Storage** to view usage and manage files.

64GB large Memory 12GB Running Memory

1TB Additional Expansion

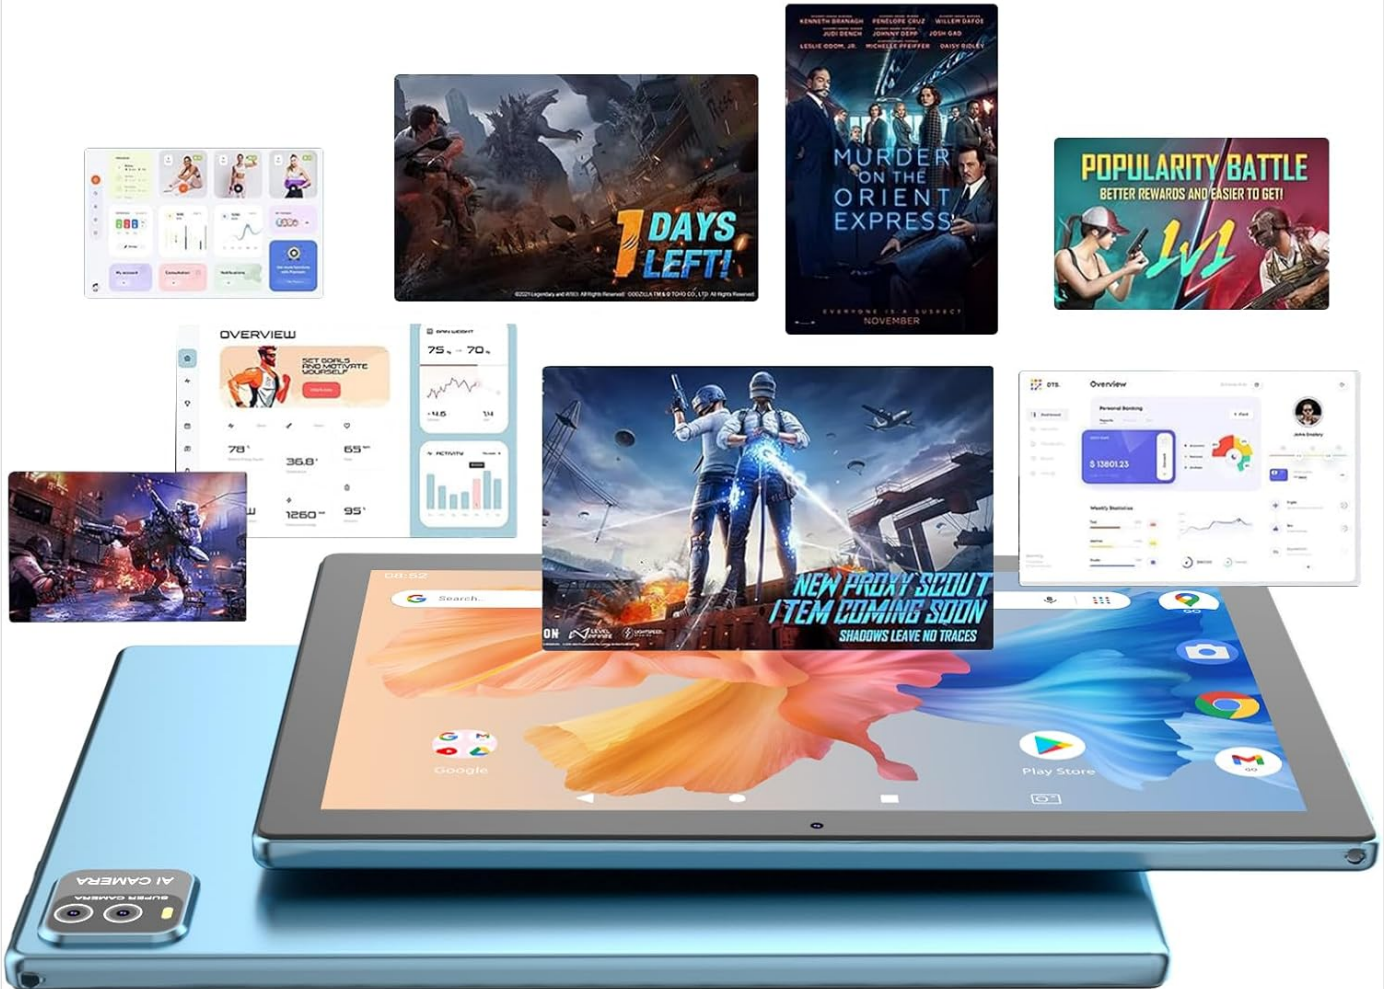


Image: A visual demonstrating the tablet's memory and storage capacities, including 64GB ROM, 12GB RAM, and 1TB expansion.

MAINTENANCE

1. Cleaning

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals or abrasive materials.
- For stubborn smudges, slightly dampen the cloth with water or a screen-specific cleaner.

2. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not leave the tablet charging for extended periods after it reaches 100%.
- For long-term storage, charge the battery to about 50% and power off the device.

3. Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features, security patches, and

performance improvements.

1. Ensure your tablet is connected to Wi-Fi and has sufficient battery.
2. Go to **Settings > System > System update**.
3. Follow the on-screen instructions to check for and install updates.

TROUBLESHOOTING

This section addresses common issues you might encounter with your ATOZEE tablet.

Tablet Not Turning On

- Ensure the tablet is sufficiently charged. Connect it to a power source for at least 30 minutes.
- Press and hold the Power button for 10-15 seconds to perform a forced restart.

Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on in Settings.
- Restart your Wi-Fi router.
- Forget the network in tablet settings and reconnect.

Bluetooth Accessory Pairing Failure

- Ensure the accessory is charged and in pairing mode.
- Restart both the tablet and the accessory.
- Clear Bluetooth cache (Settings > Apps > Show system apps > Bluetooth > Storage > Clear cache/data).

Slow Performance

- Close unused applications running in the background.
- Clear cache for frequently used apps (Settings > Apps > [App Name] > Storage > Clear cache).
- Free up storage space by deleting unnecessary files or apps.
- Restart the tablet periodically.

SPECIFICATIONS

Below are the technical specifications for the ATOZEE 10-inch Android 15 Tablet (Model AT-CP20):

Feature	Specification
Model Name	AT-CP20
Operating System	Android 15
Screen Size	10.1 Inches
Max Screen Resolution	1280 x 800 Pixels
Processor	2.0 GHz Octa-Core
RAM	12GB (4GB physical + 8GB virtual)
Internal Storage (ROM)	64GB

Expandable Storage	Up to 1TB via microSD card
Rear Camera	8 MP
Front Camera	2 MP
Battery Capacity	6000mAh
Average Battery Life	Up to 8 Hours
Wireless Connectivity	5G, Wi-Fi 6 (802.11g)
Dimensions (LxWxH)	9.8 x 6.7 x 0.3 inches
Item Weight	1 pound

Powerful Processor and Fast Response

Octa Core Cpu and Android 15 System provide Fast app running and web browsing speed.



Android 15



10.1 inch



12GB RAM



64GB ROM



Expandable 1TB



Image: A visual summary of the tablet's core specifications, emphasizing its performance and storage capabilities.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official ATOZEE website. Keep your proof of purchase for warranty claims.

If you encounter issues not covered in this manual, please contact ATOZEE customer service for further assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question