

[Manuals.plus](#) /

› [CDC DIGI](#) /

› CDC DIGI Digital Electronic Money Safe, Model 17E - User Manual

CDC DIGI 17E

CDC DIGI Digital Electronic Money Safe - Model 17E

User Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your CDC DIGI Digital Electronic Money Safe, Model 17E. This steel security lock box is designed to protect your valuables such as cash, jewelry, important documents, and other items. It features a robust construction with two 18mm diameter active locking bolts for enhanced security. The compact design (9.06" W x 6.69" D x 6.69" H, 0.23 cubic feet capacity) allows for versatile placement in various environments, including closets, drawers, or under tables.

Please read this manual thoroughly before operating the safe and retain it for future reference.



The CDC DIGI Digital Electronic Money Safe, Model 17E, in blue.

Product size



Interior view of the safe, illustrating its capacity for various valuables.

SETUP INSTRUCTIONS

1. Initial Opening and Battery Installation

1. **Remove Override Key Cover:** Locate and remove the cover for the override keyhole.
2. **Open the Safe:** Insert the override key into the keyhole and turn it counterclockwise. Simultaneously, turn the knob to open the safe door.
3. **Install Batteries:** Inside the safe, locate the battery compartment cover. Remove it and install 4 x "AA" batteries, ensuring correct polarity.

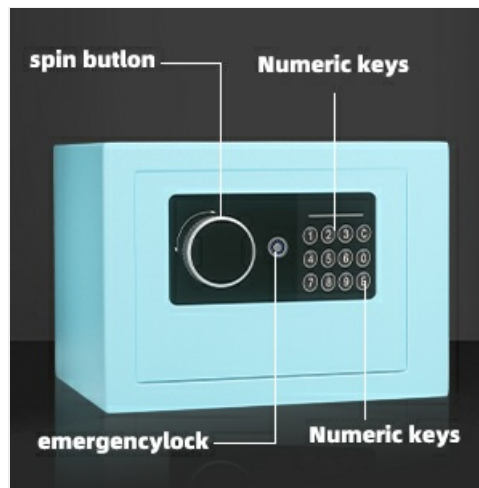


Illustration of the battery compartment and reset button location.

2. Setting Your Personal Code

After installing batteries and with the safe door open:

1. **Press the Reset Button:** Locate the red reset button inside the safe, usually near the battery compartment, and press it. The indicator light on the keypad will turn yellow.
2. **Enter New Password:** Within 15 seconds, enter your desired 3 to 8 digit personal code on the keypad.
3. **Confirm Password:** Press the "E" button to confirm your new password. The indicator light will turn green, signifying successful programming.
4. **Clear Entry:** If you make a mistake while entering the code, press "C" to clear the entry and start again.

Important: Keep your override keys in a secure location outside the safe. Do not store them inside the safe.



Visual guide for setting the personal code and using the emergency key.

3. Mounting the Safe

The safe can be securely mounted to a wall, shelf, or cabinet using the provided mounting bolts.

1. **Position the Safe:** Choose a desired location for mounting.
2. **Mark Drilling Points:** With the safe door open, mark the positions for drilling through the pre-drilled holes on the back or bottom of the safe.
3. **Drill Holes:** Use an appropriate drill bit to create holes in the wall or surface.
4. **Insert Expansion Plugs:** Insert the expansion plugs into the drilled holes.
5. **Secure the Safe:** Align the safe with the holes, insert the mounting bolts, and tighten them securely.



SUITABLE FOR MULTI-SCENE USAGE



Examples of multi-scene usage and mounting options for the safe.

OPERATING INSTRUCTIONS

Opening the Safe

Your safe offers two methods for opening:

Method 1: Using the Personal Code

1. **Enter Personal Code:** Input your previously set 3 to 8 digit personal code on the keypad.
2. **Confirm:** Press the "E" button. The indicator light will turn green.
3. **Turn Knob:** Within 3 seconds, turn the knob clockwise to open the safe door.

Method 2: Using the Override Key (Emergency Access)

This method is used for initial setup, if you forget your code, or if the batteries are depleted.

1. **Remove Key Cover:** Remove the cover for the override keyhole.
2. **Insert Key:** Insert the override key into the keyhole. Ensure the key is fully inserted.
3. **Turn Key and Knob:** Turn the key counterclockwise. Simultaneously, turn the knob to open the safe door.



Illustration of the two opening methods: override key and digital code.

Highlighted smooth knobs for your easy opening



Detail of the safe's keypad and knob for easy operation.

Closing the Safe

To close the safe, simply shut the door firmly. The locking bolts will engage automatically.

MAINTENANCE

Battery Replacement

When the batteries are low, the keypad may not respond or the indicator light may flash red. Replace all four "AA" batteries promptly to ensure continuous operation. Always use the override key to open the safe if the batteries are completely depleted.

Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish or electronic components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with personal code.	Incorrect code entered, batteries are low or depleted.	Re-enter the correct code carefully. Replace batteries if necessary. Use the override key for emergency access.
Keypad is unresponsive.	Batteries are depleted or incorrectly installed.	Check battery installation and replace with new "AA" batteries. Use the override key to open the safe.
Door is stuck or difficult to open/close.	Obstruction in the door frame, or safe is not level.	Check for any obstructions. Ensure the safe is placed on a flat, level surface.
Forgot personal code.	Code forgotten.	Use the override key to open the safe, then follow the "Setting Your Personal Code" instructions to set a new code.

SPECIFICATIONS

- Brand:** CDC DIGI
- Model Number:** 17E
- Product Dimensions:** 9.33" D x 7.95" W x 7.08" H (External)
- Internal Dimensions:** Approximately 8.6" W x 6.4" D x 6.4" H (based on images)
- Capacity:** 0.23 Cubic Feet (4.6 liters)
- Lock Type:** Electronic Keypad with Mechanical Override Key
- Material:** SPCC Steel
- Color:** Blue (for this variant)
- Item Weight:** 2.5 Kilograms
- Special Features:** Alarm System, Two 18mm active locking bolts, Pry-resistant steel door, Hidden pry-resistant hinges.
- Mounting Type:** Wall Mount (hardware included)
- Included Components:** 1 x safe box, 2 x emergency keys, 2 x mounting bolts, 1 x anti-scratch carpet, 1 x user manual.
- Power:** 4 x "AA" batteries (not included)



Detailed product dimensions for the safe.

WARRANTY INFORMATION

Specific warranty details are not provided in the product information. For warranty claims or detailed information regarding your product's warranty, please contact CDC DIGI customer service directly. Keep your purchase receipt as proof of purchase.

CUSTOMER SUPPORT

For any questions, assistance, or service needs, please contact the CDC DIGI Customer Service Center. They are available to help with setup, operation, troubleshooting, and any other inquiries you may have.

Contact Information: Please refer to the contact details provided on the product packaging or the official CDC DIGI website.

Services Offered: No hassle exchanges/returns, 24-hour professional support.



CDC DIGI Customer Service is available for support.

PRODUCT VIDEOS

Digital Electronic Money Safe Overview

Your browser does not support the video tag.

This video provides a general overview of the CDC DIGI Digital Electronic Money Safe, demonstrating its features and functionality.

