

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Gudsunal](#) /

> [Gudsunal 30 Inch Electric Cooktop User Manual](#)

Gudsunal 30 Inch Electric Cooktop

Gudsunal 30 Inch Electric Cooktop User Manual

Model: 30 Inch Electric Cooktop

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- **Electrical Safety:** Ensure the cooktop is properly grounded. Do not use extension cords. Disconnect power before servicing.
- **Surface Safety:** Do not touch hot surfaces. Use handles or knobs. Allow the cooktop to cool before cleaning.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Proper Use:** Use the appliance only for its intended purpose, which is cooking food. Do not use it for heating rooms or as a space heater.
- **Ventilation:** Ensure adequate ventilation around the cooktop.
- **Cleaning:** Clean the cooktop regularly to prevent grease buildup.
- **Certification:** This Gudsunal electric cooktop meets the safety standards of ETL and FCC, ensuring compliance with safety requirements for household appliances.

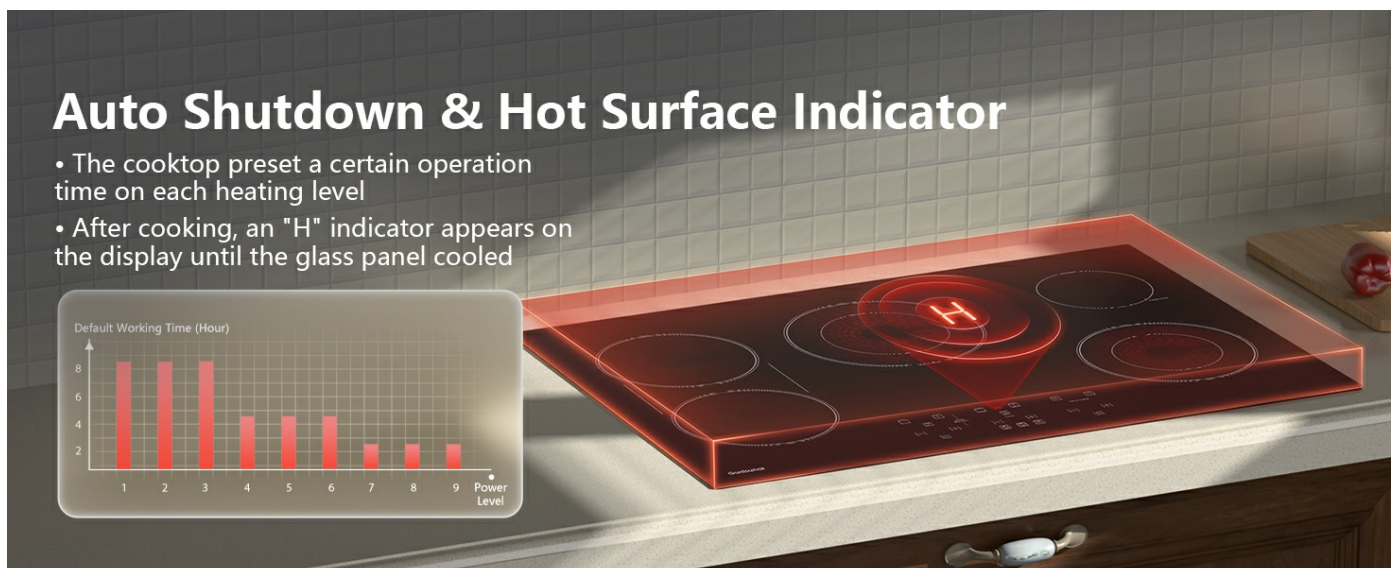 


Image: Visual representation of the cooktop's safety protection features, including auto shutdown and hot surface indicator.

Child Lock Function

Lock the touch buttons during use or when not in operation, preventing children or pets from accidentally touching them and ensuring their safety.



Image: Illustration of the Child Lock function, showing how it secures the touch controls to prevent accidental operation.

WHAT'S IN THE BOX

Before beginning installation, verify that all components are present and undamaged.

- Gudsunal 30 Inch Electric Cooktop
- User Manual
- Quick Guide
- Safety Tips
- Seal Tape
- Installation Kits
- Cut-out Size Board

What's in the Box



Cooktop



User Manual



Cut-out Size Board



Safety Tips



Quick Guide



Seal Tapex2



Installation Kits

Image: A visual display of all items included in the product packaging, such as the cooktop, user manual, quick guide, seal tape, and installation kits.

SETUP AND INSTALLATION

This section provides instructions for installing your Gudsunal electric cooktop. Professional installation is recommended.

Dimensions and Cut-out

Ensure your countertop opening matches the required dimensions for proper fit and ventilation.

- **Product Dimensions:** 21"D x 30"W x 2.28"H
- **Cut-out Dimensions:** Refer to the provided cut-out size board for precise measurements.



Image: Diagram illustrating the cooktop dimensions and required countertop cut-out for easy installation.

Electrical Connection

The cooktop requires a hard-wired electrical connection. Consult a qualified electrician for wiring.

- **Power Supply:** This unit requires a 240V AC dedicated circuit.
- **Wiring:** Follow the wiring diagram provided in the quick guide and on the appliance. Ensure all connections are secure and comply with local electrical codes.
- **Grounding:** The appliance must be properly grounded.

Easy Installation

Designed with standard size allowing you to effortlessly make installation or replacement

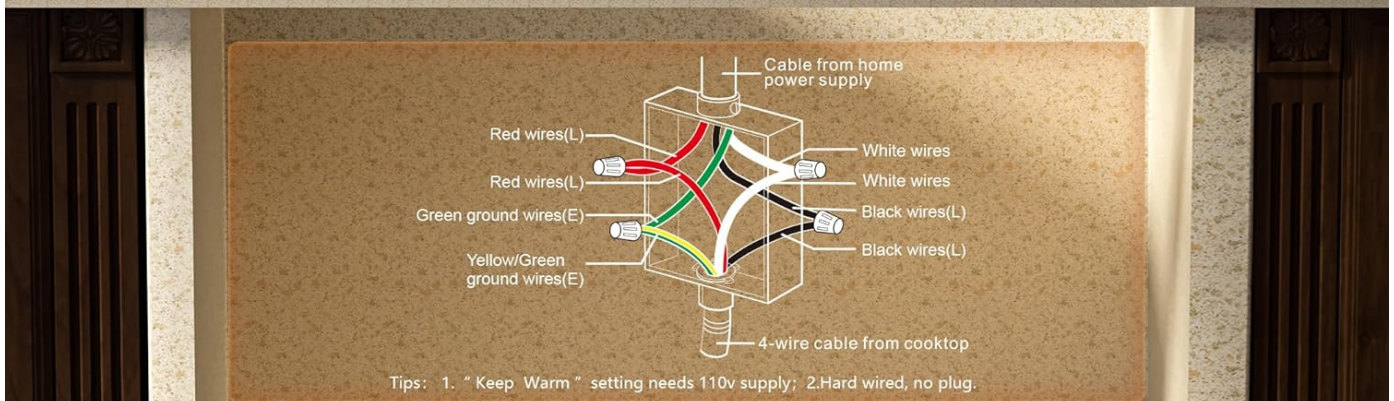 
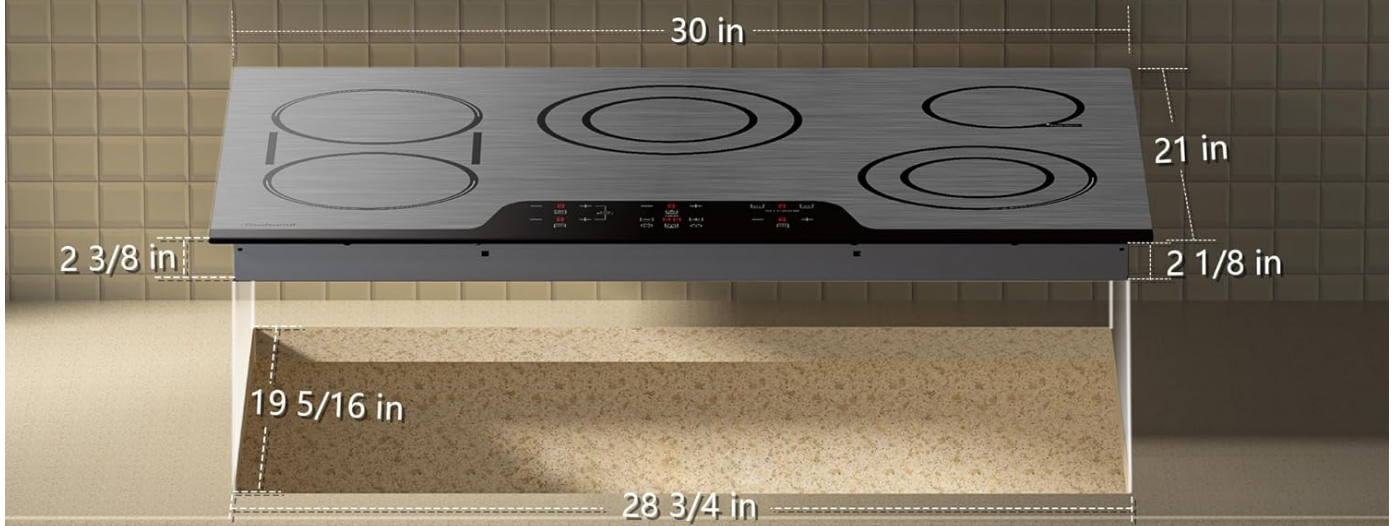 


Image: Detailed electrical wiring diagram showing connections for the cooktop to the home power supply.

OPERATING INSTRUCTIONS

Your Gudsunal electric cooktop features touch controls for precise cooking. Familiarize yourself with the control panel before use.

Control Panel Overview

Gudsunal

Your Kitchen, Reimagined


SINCE 2009



Image: Overhead view of the Gudsunal 30 Inch Electric Cooktop, highlighting the touch control panel and burner layout.

Turning On/Off and Heat Level Adjustment

 - **Power On:** Touch the power symbol to turn on the cooktop.
- **Select Burner:** Touch the desired burner control.
- **Adjust Heat:** Use the '+' and '-' buttons to select a heating level from 1 to 9.
- **Power Off:** Touch the power symbol again or hold the individual burner control to turn off.

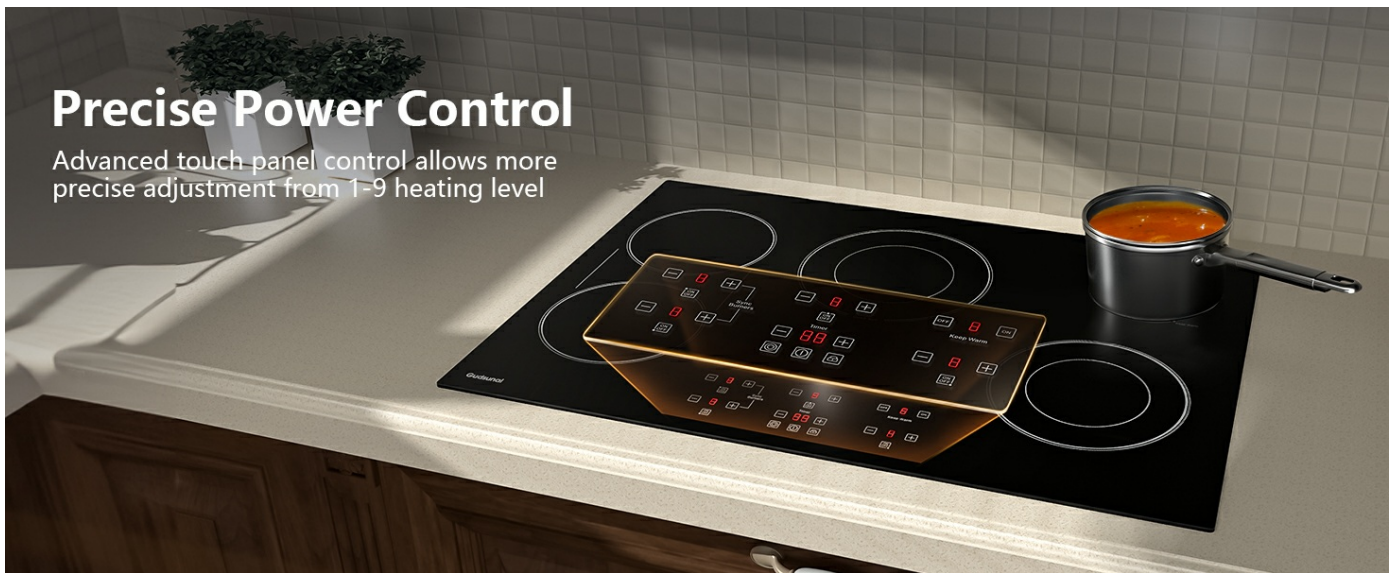

Precise Power Control

Advanced touch panel control allows more precise adjustment from 1-9 heating level

Image: Visual representation of the cooktop's touch panel, demonstrating the 1-9 heating level adjustment for precise power control.

Special Features

- **Sync Burners:** Connect two burners to create a larger cooking zone for griddles or oversized pans. Activate by touching the sync burner control.
- **Dual-Ring Burners:** Two burners offer dual-ring functionality, allowing adjustment for various pot sizes and quick boiling up to 2200W.
- **Quick Boil:** Utilize the high power settings on dual-ring burners for rapid water boiling.
- **Keep Warm:** Select the lowest heating setting to keep food warm without overcooking.
- **Timer Function:** Set a cooking timer for precise shutdown. Touch the timer control and adjust the duration.
- **Child Lock:** Lock the control panel to prevent accidental changes or activation. Touch and hold the child lock symbol to activate/deactivate.
- **Auto Shutdown:** The cooktop is preset with operation times for each heating level, automatically shutting off after a certain period for safety.
- **Hot Surface Indicator:** An "H" indicator will appear on the display when a cooking zone is hot, even after it's turned off.



Sync Burners

Connect and control two cooktop burners as one to create a bigger cooking surface for pans such as griddles

Image: Demonstration of the Sync Burner feature, showing two burners combined to accommodate a large griddle.

Quick Boil on Two Dual Ring Burners

This cooktop has two dual-ring burners with power Max 2200w those allow different pan/pot sizes to be used for quick boiling



Image: Illustration of the Quick Boil function, highlighting the dual-ring burners capable of rapid heating.

Keep Warm Setting

Keep food warm with this functional and lowest heating setting.



Image: Depiction of the Keep Warm setting in use, maintaining food temperature on a burner.

Timer Function

Cooker Reminder & Precision Shutdown, Simplifies and Secures Your Cooking



Image: Visual of the Timer function, indicating its role in precise cooking and automatic shutdown.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

- **Daily Cleaning:** Wipe the glass ceramic surface with a damp cloth and mild detergent after each use, once the surface has cooled.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a specialized ceramic cooktop cleaner and a non-abrasive pad. Follow the cleaner's instructions.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the cooktop surface.
- **Control Panel:** Wipe the control panel gently with a soft, damp cloth. Ensure it is dry before operating.
- **Inspection:** Periodically inspect the cooktop for any signs of damage or wear. If any issues are found, contact customer support.

TROUBLESHOOTING

Before contacting customer support, refer to the following common issues and solutions.

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Child Lock activated; Incorrect operation.	Check circuit breaker. Deactivate Child Lock. Refer to operating instructions.
Burner not heating.	Incorrect heat setting; Pan not suitable for electric cooktop.	Increase heat level. Ensure cookware has a flat bottom and is appropriate for electric cooktops.
"H" indicator remains on.	Surface is still hot.	This is normal. Wait for the surface to cool down.
Cooktop shuts off unexpectedly.	Auto Shutdown feature activated; Overheating.	This is a safety feature. Allow the cooktop to cool. Ensure proper ventilation.

SPECIFICATIONS

Feature	Detail
Brand	Gudsunal
Model	30 Inch Electric Cooktop
Heating Elements	5 Radiant Burners
Power Source	Corded Electric (Hard-wired)
Fuel Type	Electric
Heater Surface Material	Stainless Steel (Cooktop surface is glass ceramic)
Product Dimensions (D x W x H)	21" x 30" x 2.28"
Heating Levels	9
Special Features	Sync Burner, Dual-Ring Burners, Quick Boil, Keep Warm, Timer, Child Lock, Auto Shutdown, Hot Surface Indicator
Certifications	ETL, FCC

WARRANTY INFORMATION

The Gudsunal 30 Inch Electric Cooktop comes with a **1 Year Warranty** from the date of purchase.

This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from improper installation, misuse, abuse, accident, neglect, or unauthorized modification.

Keep your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to make a warranty claim, please contact Gudsunal customer support.

For the most up-to-date contact information, please visit the official Gudsunal website or refer to the contact details provided in your purchase documentation.

Online Support: [Visit the Gudsunal Store on Amazon](#)