



[Manuals.plus](#) /

› [Gudsunal](#) /

› Gudsunal 30 Inch Electric Cooktop UC8032B8 User Manual

Gudsunal UC8032B8

Gudsunal 30 Inch Electric Cooktop UC8032B8 User Manual

Model: UC8032B8

1. INTRODUCTION

Thank you for choosing the Gudsunal 30 Inch Electric Cooktop. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read it thoroughly before use and keep it for future reference.

Gudsunal

Your Kitchen, Reimagined

SINCE 2009



Image 1: Top-down view of the Gudsunal 30 Inch Electric Cooktop installed in a kitchen.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. This cooktop is designed with several safety features and is ETL & FCC certified, meeting stringent safety standards for household appliances in American homes. Always follow basic safety precautions when using this appliance.

Key Safety Features:

- **ETL & FCC Certification:** Ensures the cooktop meets recognized safety standards.
- **Auto Shutdown:** The cooktop automatically shuts off after reaching its maximum heating time, which varies across 9 power levels. This prevents overheating and potential hazards.
- **Hot Surface Indicator:** An 'H' indicator remains on the display until the surface cools down to a safe temperature, preventing accidental burns.
- **Child Lock:** This feature prevents accidental operation by children. To activate, press the lock button briefly. To deactivate, press and hold the lock button for a longer duration.

Child Lock Function

Lock the touch buttons during use or when not in operation, preventing children or pets from accidentally touching them and ensuring their safety.



Image 2: The control panel highlighting the Child Lock function.

3. PRODUCT FEATURES

- **Sync & Dual-Ring Burners:** This 30-inch electric cooktop features 3600W sync burners, ideal for accommodating long pans or griddles by combining two cooking zones. Additionally, two dual-ring burners, with up to 2200 watts, adapt to various pot sizes, offering flexibility from low simmering to quick boiling.
- **Keep Warm Function:** A dedicated 200-watt keep warm burner (located in the top right corner) maintains food at an ideal serving temperature. Note that this burner does not turn red and has a single setting.
- **9 Heating Levels & Timer Function:** The cooktop offers 1-9 heat level settings for precise and even cooking. The integrated timer can be set from 1 to 99 minutes, helping prevent over or undercooking.

Synchronized Burner

Connect and control two cooktop burners as one to create a bigger cooking surface for pans such as griddles



Image 3: Illustration of the synchronized burner function for larger cookware.

Two Dual-Ring and Keep Warm

- Two dual-ring burners that allow for different pan sizes to be used for quick boiling
- "Keep Warm" setting features a range of heat to the power to boil water



Image 4: The cooktop demonstrating the dual-ring burners and the 'Keep Warm' zone.

4. SETUP AND INSTALLATION

The Gudsunal electric cooktop is designed for drop-in installation. Ensure your countertop cutout meets the specified dimensions for a proper fit.

Dimensions:

- **Product Size:** 30 in x 21 in x 2 1/8 in
- **Cut-Out Size:** 28 3/4 in x 19 5/16 in

Easy Installation

Designed with standard size allowing you to effortlessly make installation or replacement

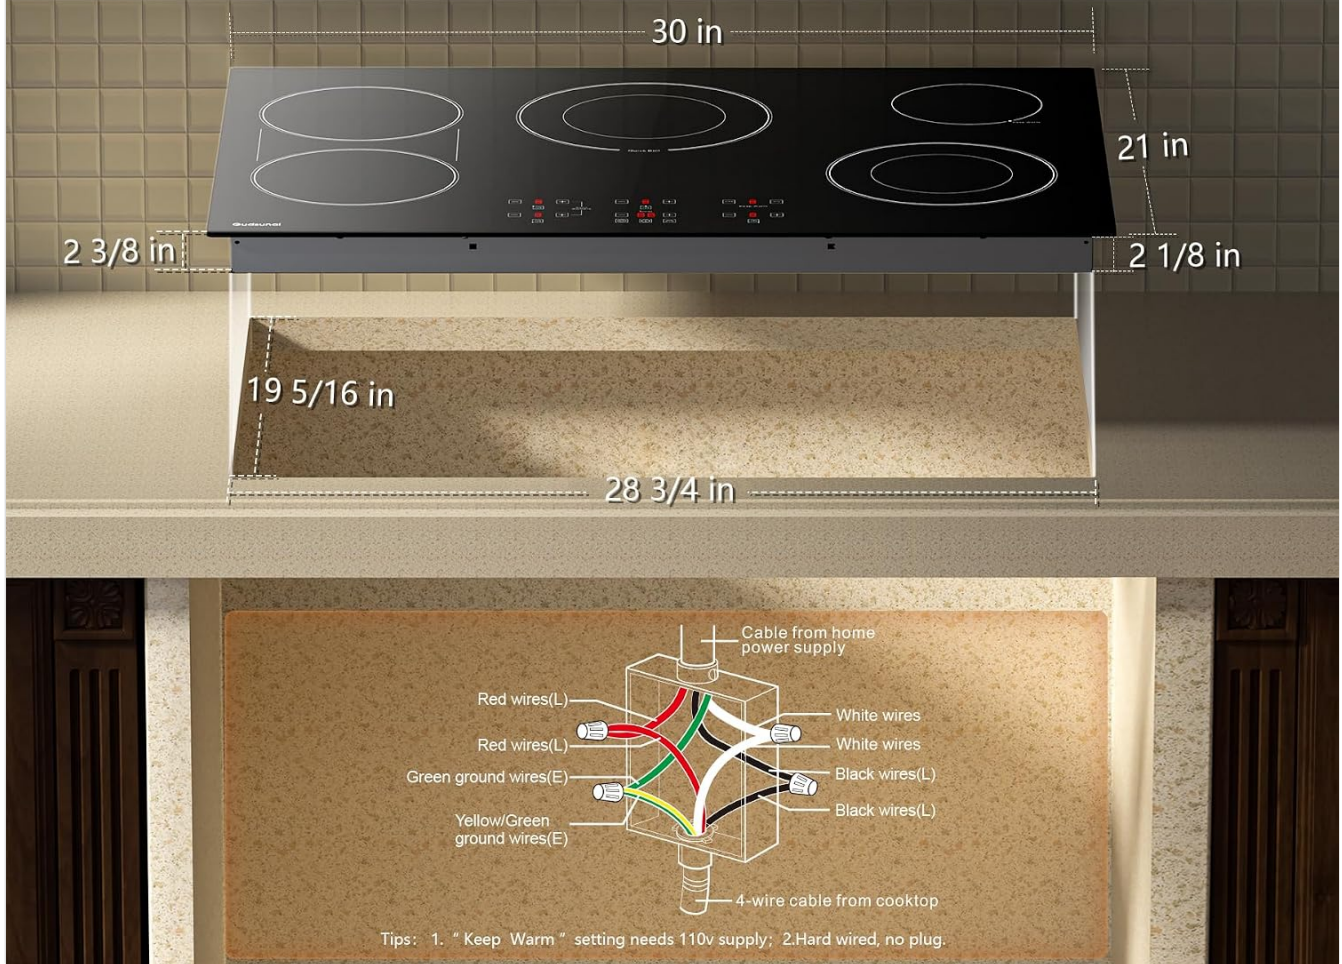 


Image 5: Detailed dimensions for the cooktop and its required countertop cutout.

Electrical Connection:

This appliance requires a 220-240V AC power supply. It is designed for hardwiring and does not come with a plug. Professional installation is recommended to ensure proper and safe electrical connection.

Your browser does not support the video tag.

Video 1: This video provides general guidelines for hardwiring an electric cooktop. It demonstrates the process of stripping and twisting wires for a secure connection.

 
Included Components for Installation:

- Installation Kits
- Quick Guide
- Safety Tips
- Seal Tape
- User manual (this document)


What's In The Box



Cooktop

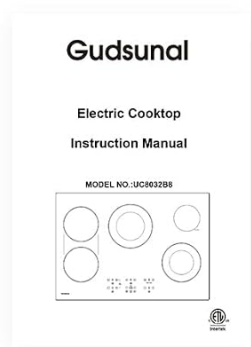

User Manual

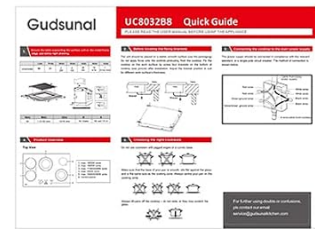 

Quick Guide



Safety Tips



Seal Tape × 2



Installation Kits



Cut-out Size Board

Image 6: Contents of the product packaging, including the cooktop, manuals, and installation accessories.

5. OPERATING INSTRUCTIONS

The cooktop features an advanced touch panel control for easy operation. Each cooking zone has independent controls for power adjustment and activation of special functions.

Powering On/Off:

Press the main power button to turn the cooktop on or off. If the child lock is active, deactivate it first by pressing and holding the lock button.

Adjusting Heating Levels:

Select the desired cooking zone and use the '+' and '-' buttons to adjust the heat level from 1 to 9. The precise power control allows for fine-tuning your cooking.

Precise Power Control

Advanced touch panel control allows more precise adjustment from 1-9 heating level



Image 7: The touch control panel for precise power adjustments.

Using Sync & Dual-Ring Burners:

To activate the sync function for the left two burners, select one of the burners and then press the sync button. For dual-ring burners, select the burner and press the dual-ring button to expand the heating area.

Timer Function:

The timer can be set for individual cooking zones or as a general reminder. Use the timer controls to set the desired duration (1-99 minutes). The cooktop will automatically shut off the selected zone(s) once the timer expires.



Image 8: The control panel highlighting the Timer function.

6. MAINTENANCE

The flat-panel glass design of the Gudsunal electric cooktop makes cleaning simple. Always ensure the cooktop surface is cool before cleaning.

Cleaning the Glass Surface:

- Wipe off any cooking grease or spills with a damp cloth or sponge.
- For stubborn stains, use a non-abrasive ceramic cooktop cleaner.
- Avoid using abrasive pads, harsh chemicals, or sharp objects that could scratch the glass surface.

7. TROUBLESHOOTING

If you encounter any issues with your cooktop, please refer to the following general troubleshooting tips. For more detailed solutions, consult the comprehensive user manual included in your product packaging or contact customer support.

- **Cooktop not turning on:** Check if the power supply is connected correctly and if the circuit breaker has tripped. Ensure the child lock is deactivated.
- **Burner not heating:** Verify that the correct cooking zone is selected and the power level is set above '0'.
- **'H' indicator remains on:** This indicates the surface is still hot. It will turn off automatically once the temperature drops to a safe level.
- **Error codes on display:** Refer to the full user manual for a list of specific error codes and their corresponding solutions.

8. SPECIFICATIONS

Specification	Value
Brand Name	Gudsunal
Model Info	UC8032B8
Item Weight	38.5 pounds
Product Dimensions	21 x 30 x 2.28 inches

Installation Type	Drop-In
Special Features	Adjustable Temperature, Automatic Shut-Off, Hot Surface Indicator, Safety Lock, Timer
Burner type	Radiant
Heating Elements	5
Color	Charcoal Grey
Voltage	220 Volts (AC)
Wattage	8000 watts
Fuel type	Electric
Material Type	Metal

9. WARRANTY AND SUPPORT

Gudsunal aims to provide high-quality products and customer satisfaction. For any questions, technical assistance, or warranty claims, please refer to the contact information provided in your product's Quick Guide or User Manual. Some customers have reported receiving one-year complementary tech support after purchase.