

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [CUCKOO](#) /

> [CUCKOO CR-0661F Micom Rice Cooker & Warmer Instruction Manual](#)

## CUCKOO CR-0661F

# CUCKOO CR-0661F Micom Rice Cooker & Warmer

User Instruction Manual

## 1. INTRODUCTION

---

Thank you for purchasing the CUCKOO CR-0661F Micom Rice Cooker & Warmer. This appliance is designed to provide perfectly cooked rice and a variety of other meals with ease and efficiency. Featuring advanced Fuzzy Logic technology and multiple cooking modes, it ensures consistent results every time. Please read this manual thoroughly before operation to ensure safe and optimal use of your new rice cooker.



Front view of the CUCKOO CR-0661F Micom Rice Cooker & Warmer.

## 2. IMPORTANT SAFETY PRECAUTIONS

---

To prevent personal injury or property damage, always follow basic safety precautions when using electrical appliances. This includes, but is not limited to:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the rice cooker body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### 3. PRODUCT COMPONENTS

---

The CUCKOO CR-0661F comes with the following components:

- Main Unit (Rice Cooker Body)
- Inner Pot (Nonstick)
- Instruction Manual (This document)
- Measuring Cup
- Rice Paddle
- Steamer Basket



The CUCKOO CR-0661F rice cooker shown with its included accessories: inner pot, steamer basket, measuring cup, and rice paddle.

### 4. SETUP AND FIRST USE

---

#### 4.1 Unpacking

Carefully remove all packaging materials from the rice cooker and its accessories. Retain packaging for future storage or transport if needed.

#### 4.2 Initial Cleaning

Before first use, wash the inner pot, steamer basket, measuring cup, and rice paddle with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in

water.

### 4.3 Placement

Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.

## 5. OPERATING INSTRUCTIONS

---

The CUCKOO CR-0661F features an intuitive LCD display and advanced Fuzzy Logic technology for optimal cooking. It offers 8 versatile cooking modes.



The control panel and LCD display of the CUCKOO CR-0661F.

### 5.1 Basic Rice Cooking

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. One cup of uncooked rice typically yields two cups of cooked rice. The maximum capacity is 6 cups uncooked (12 cups cooked).
2. **Wash Rice:** Rinse the rice thoroughly under cold water until the water runs clear. This helps remove excess starch.
3. **Add Rice to Inner Pot:** Place the washed rice into the nonstick inner pot.

4. **Add Water:** Refer to the water level markings inside the inner pot. For white rice, align the water level with the corresponding marking for the number of cups of rice added. For other rice types, consult specific recipes or the manual's cooking chart.
5. **Place Inner Pot:** Ensure the inner pot is dry on the outside, then place it securely into the main unit. Close the lid firmly.
6. **Select Cooking Mode:** Plug in the rice cooker. Use the 'MENU' button to cycle through the available cooking modes (e.g., WHITE/SUSHI, BROWN/GABA, QUINOA, PORRIDGE, STEEL-CUT OATS, STEAM, STORED RICE). The selected mode will be displayed on the LCD.
7. **Start Cooking:** Press the 'START' button. The cooker will begin the cooking process. The Fuzzy Logic technology will automatically adjust cooking time and temperature for optimal results.
8. **Keep Warm:** Once cooking is complete, the cooker will automatically switch to 'WARM' mode to keep the rice at an ideal serving temperature.



Perfectly cooked white rice in the inner pot.

## 5.2 Multi-Cook Functions

Beyond rice, the CR-0661F offers various cooking options:

- **Quick Mode:** For faster cooking of white rice when time is limited.
- **Porridge:** Ideal for creamy porridges.
- **Quinoa:** Optimized for cooking quinoa.
- **Steel-Cut Oats:** Perfect for hearty breakfast oats.
- **Steam:** Use the included steamer basket to steam vegetables, dumplings, or other foods. Place food in the basket, add water to the inner pot (below the basket), select 'STEAM' mode, and press 'START'.



**One Cooker, Countless Dishes**  
Satisfy Every Craving With a Range of Presets for Any Occasion

WHITE/SUSHI   BROWN/GABA   QUINOA   PORRIDGE   STEAL-CUT OATS   STEAM   STORED RICE

Quinoa Salad   Steamed Salmon   White Rice   GABA   Steamed Veggie

The CUCKOO CR-0661F can prepare a wide variety of dishes.



Steaming dumplings using the included steamer basket.

### 5.3 Timer/Delay Start

The 'TIMER' function allows you to set a delayed start time for your cooking. This is useful for preparing meals in advance, such as overnight oats or rice ready for dinner.

- After adding ingredients and selecting your desired cooking mode, press the 'TIMER' button.
- Use the 'TIME' or 'MY MODE' buttons to adjust the desired delay time.
- Press 'START' to confirm. The cooker will begin cooking after the set delay time has elapsed.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your rice cooker.

### 6.1 Auto-Clean Function

The CR-0661F features an auto-clean function that uses steam to clean the interior of the cooker, helping to remove

odors and residue.

- Fill the inner pot with water up to the 'AUTO CLEAN' line (if marked, otherwise a small amount of water).
- Place the inner pot in the cooker and close the lid.
- Select the 'AUTO CLEAN' mode (if available on the menu, otherwise refer to the manual for specific button combination).
- Press 'START'. The cooker will generate steam to clean itself.
- Once complete, unplug the unit and allow it to cool before wiping down the interior.



The auto-clean function uses steam for easy interior cleaning.

## 6.2 Manual Cleaning

- **Inner Pot:** The nonstick inner pot should be hand washed with a soft sponge and mild dish soap. Do not use abrasive cleaners or metal scrubbers, as this can damage the nonstick coating.
- **Detachable Lid:** The inner lid is detachable for thorough cleaning. Remove it and wash with warm, soapy water. Rinse and dry completely before reattaching.
- **Excess Water Drainage Tray:** This tray collects condensation. Remove and empty it after each use, then wash and dry.
- **Exterior:** Wipe the exterior of the rice cooker with a damp cloth. Do not use harsh chemicals or immerse the unit in water.



The removable inner lid and inner pot facilitate easy cleaning.

## 7. TROUBLESHOOTING

If you encounter issues with your CUCKOO CR-0661F, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Rice is too hard/undercooked	Insufficient water; incorrect rice-to-water ratio; lid not properly closed.	Add more water next time; ensure lid is sealed; check water level markings.
Rice is too soft/mushy	Too much water; incorrect rice-to-water ratio.	Reduce water next time; ensure water level matches rice quantity.

Problem	Possible Cause	Solution
Rice cooker does not turn on	Not plugged in; power outage; faulty outlet.	Check power cord connection; test outlet with another appliance; contact customer support if issue persists.
Burning smell during cooking	Food stuck to heating plate; foreign object in cooker; inner pot not clean.	Unplug and clean thoroughly; ensure inner pot is properly seated.
Steam leaking from lid	Lid not properly closed; gasket/seal damaged or dirty.	Ensure lid is securely closed; clean or inspect the lid gasket for damage.

If the problem persists after attempting these solutions, please contact CUCKOO customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	CUCKOO
Model Name	CR-0661F Micom Rice Cooker and Warmer
Capacity	6 Cups (Uncooked) / 12 Cups (Cooked)
Product Dimensions	12.5"D x 9.3"W x 8.4"H
Power Source	Corded Electric
Color	White
Special Features	Advanced Fuzzy Logic, Automatic Keep Warm, Automatic Shut Off, Non-Stick Inner Pot, Programmable
Material	Plastic (Body), Nonstick (Inner Pot)
Item Weight	10.8 Pounds
Included Components	Inner Pot, Instruction Manual, Measuring Cup, Rice Paddle, Steamer Basket

## 9. WARRANTY AND SUPPORT

CUCKOO products are manufactured with high-quality standards. For warranty information and customer support, please refer to the warranty card included with your product or visit the official CUCKOO website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact CUCKOO customer service directly.



