

## Costal Wood Base 2 Cupboards Vintage TV Stand

# Generic Costal Wood Base 2 Cupboards Vintage TV Stand User Manual

Model: Costal Wood Base 2 Cupboards Vintage TV Stand

## 1. INTRODUCTION

Thank you for purchasing the Generic Costal Wood Base 2 Cupboards Vintage TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image 1.1: The Generic Costal Wood Base 2 Cupboards Vintage TV Stand, featuring a white base with two X-pattern cupboard doors and a contrasting wood-finish top.

## 2. SAFETY INFORMATION

- Read All Instructions:** Before assembly and use, read and understand all instructions and warnings provided in this manual.
- Two-Person Assembly:** Assembly of this furniture may require two adults for safety and ease.
- Weight Limits:** Do not exceed the recommended weight limits for the top surface or shelves. Overloading can cause the stand to collapse, resulting in injury or damage.
- Stable Placement:** Place the TV stand on a flat, level, and stable surface. Uneven surfaces can lead

to instability.

- **Tip-Over Prevention:** Always use anti-tip restraints if provided. Secure the TV stand to a wall to prevent accidental tip-overs, especially in homes with children.
- **Children Safety:** Do not allow children to climb on or play with the TV stand. Keep small parts away from children during assembly.
- **Proper Tools:** Use only the tools specified in the assembly instructions.
- **Regular Inspection:** Periodically check all fasteners to ensure they remain tight. Retighten as necessary.

### 3. SETUP AND ASSEMBLY

Assembly is required for this TV stand. Please follow the detailed instructions provided in the separate assembly guide included with your product. Ensure all parts are present before beginning assembly.

#### 3.1. Package Contents

Before assembly, verify that all components listed in your separate assembly guide are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

#### 3.2. Assembly Steps

1. **Unpack:** Carefully unpack all components and hardware from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Identify Parts:** Refer to the parts list in your assembly guide to identify each component.
3. **Follow Instructions:** Assemble the unit step-by-step according to the provided assembly guide. Do not skip steps.
4. **Secure Fasteners:** Ensure all screws, bolts, and other fasteners are tightened securely, but do not overtighten to avoid damaging the material.
5. **Final Check:** Once assembled, gently test the stability of the stand before placing any items on it.

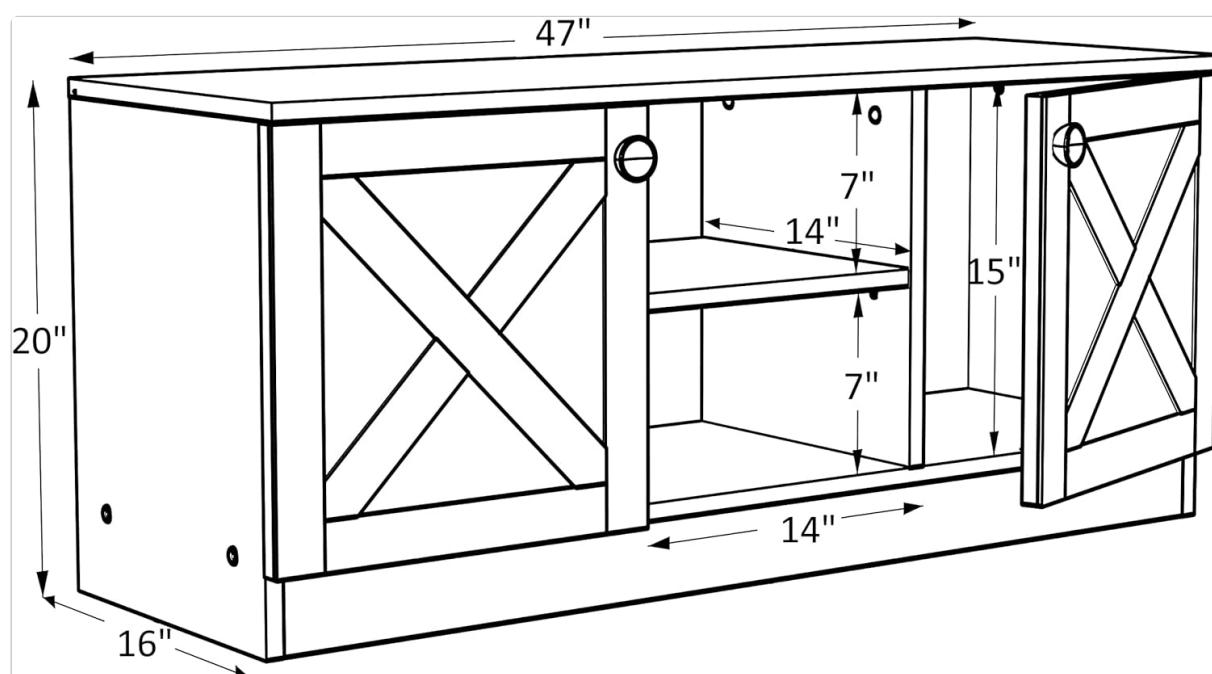


Image 3.1: Dimensional diagram of the TV stand, showing overall dimensions of 47 inches (length), 16 inches (depth), and 20 inches (height), along with internal shelf measurements.

## 4. OPERATING AND USAGE

### 4.1. Placement

Place the TV stand in your desired location, ensuring it is on a stable and level surface. Avoid placing it near heat sources, direct sunlight, or in areas with high humidity.

### 4.2. TV and Media Device Placement

Carefully place your television on the top surface of the stand. Ensure the TV's base is fully supported and does not overhang the edges. Utilize the open central shelves for media devices such as cable boxes, gaming consoles, or soundbars. The rear panel includes a cutout for cable management.



Image 4.1: The TV stand in use, displaying a television on top and media devices on the central shelves, with decorative items.

### 4.3. Storage

The two side cupboards provide enclosed storage for various items, helping to keep your living space tidy. The doors feature an X-pattern design and slide open for access.

## 5. MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the wood and finish.

- **Fastener Check:** Periodically check all assembly fasteners and tighten them if they become loose.
- **Avoid Extreme Conditions:** Protect the furniture from extreme temperature changes and humidity, which can cause warping or cracking.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose fasteners or uneven floor.	Ensure all screws and bolts are securely tightened. Move the stand to a level surface or use shims if necessary.
Cupboard doors do not slide smoothly.	Obstruction in the track or misaligned doors.	Check the sliding tracks for any debris. Ensure the doors are correctly seated in their tracks.
Scratches or minor damage.	Accidental impact or abrasion.	For minor scratches, a furniture repair kit or touch-up pen matching the finish may be used.

## 7. SPECIFICATIONS

**Model:** Costal Wood Base 2 Cupboards Vintage TV Stand

**Brand:** Generic

**Product Dimensions (L x W x H):** 47 x 16 x 20 inches

**Color:** White (with wood-finish top)

**Assembly Required:** Yes

**Material:** Wood Base (as per product title)

**ASIN:** B0F52FYF4T

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the seller directly. If you require assistance with assembly, missing parts, or have any questions regarding your Generic Costal Wood Base 2 Cupboards Vintage TV Stand, please contact the retailer or manufacturer's customer support.

Please have your purchase details and model information (Costal Wood Base 2 Cupboards Vintage TV Stand, ASIN: B0F52FYF4T) ready when contacting support.