



[Manuals.plus](#) /

› [Panasonic](#) /

› Panasonic SR-A110D 5.5-Cup Rice Cooker Instruction Manual

Panasonic SR-A110D

Panasonic SR-A110D 5.5-Cup Rice Cooker Instruction Manual

Model: SR-A110D

INTRODUCTION

Thank you for purchasing the Panasonic SR-A110D 5.5-cup rice cooker. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions thoroughly before use and retain them for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the main unit, power cord, or plug in water or other liquids.
- Ensure the power supply voltage matches the rating indicated on the appliance.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged.
- Always unplug the appliance when not in use and before cleaning.
- Avoid touching hot surfaces. Use handles or knobs.
- Do not block the steam vent during operation.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Panasonic SR-A110D rice cooker.



Figure 1: Front view of the Panasonic SR-A110D rice cooker, showing the control panel and lid release button.



Figure 2: Close-up of the control panel, displaying buttons for various cooking modes and functions.

Included Accessories:

- Inner Pot (Black Thick Pot)
- Measuring Cup
- Rice Spatula
- Instruction Manual

お手入れもカンタン

使用後のお手入れは2つだけ

- 内釜
- ワンタッチふた加熱板



ワンタッチふた加熱板

ふた加熱板は
片手で簡単に取り外せます

Figure 3: The rice cooker shown with its standard accessories: a measuring cup and a rice spatula.

SETUP

1. Unpacking and Placement

1. Carefully remove the rice cooker and all accessories from the packaging.
2. Place the rice cooker on a stable, level surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.

2. Initial Cleaning

1. Wash the inner pot, inner lid, measuring cup, and rice spatula with mild dish soap and warm water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners.

OPERATING INSTRUCTIONS

1. Basic Rice Cooking (White Rice)

1. Measure the desired amount of rice using the provided measuring cup.
2. Wash the rice thoroughly until the water runs clear.
3. Place the washed rice into the inner pot. Add water up to the corresponding water level mark for white rice.
4. Close the outer lid securely.
5. Plug the power cord into an electrical outlet.
6. Press the ' ' (Cook) button to start cooking. The indicator light for ' ' (White Rice) will illuminate.
7. Once cooking is complete, the rice cooker will automatically switch to ' ' (Keep Warm) mode.



Figure 4: Example of cooked white rice, ready for serving.

2. Using Specific Cooking Courses

The SR-A110D offers several cooking courses for different types of rice and dishes:

- **(Unwashed Rice) Course:** For cooking pre-washed rice without the need for rinsing. Select this course using the ' ' (Course) button until ' ' is indicated, then press ' '.
- **(Mixed Rice) Course:** For cooking rice with various ingredients. Prepare ingredients and rice according to your recipe, select ' ' using the ' ' button, then press ' '.
- **(Porridge) Course:** For preparing rice porridge. Select ' ' using the ' ' button, then press ' '.
- **(High-Speed) Course:** For faster cooking when time is limited. Select ' ' using the ' ' button, then press ' '.
- **(Eco Cooking) Course:** For energy-efficient cooking. Select ' ' using the ' ' button, then press ' '.



Figure 5: Example of mixed rice, a dish that can be prepared using the 'Mixed Rice' course.

3. Keep Warm () Function

After cooking, the rice cooker automatically switches to ' ' (Keep Warm) mode to maintain the rice at an optimal serving temperature. To manually activate or deactivate the Keep Warm function, press the ' ' button.

4. Reservation (Timer) Function

To set a delayed cooking start time:

1. Prepare rice and water in the inner pot as usual.
2. Press the ' ' (Reservation) button.
3. Use the '<' and '>' buttons to adjust the desired completion time.
4. Press ' ' (Cook) to confirm the reservation. The timer will start counting down, and cooking will begin automatically at the set time.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your rice cooker. Always unplug the appliance before cleaning.



Figure 6: The inner pot and the one-touch removable inner lid heating plate, ready for cleaning.

1. Inner Pot and Inner Lid Heating Plate

- Remove the inner pot and the one-touch removable inner lid heating plate.
- Wash these parts with mild dish soap and a soft sponge. Rinse thoroughly and dry completely before reassembling.
- Do not use abrasive cleaners or metal scrubbers, as they can damage the non-stick coating.



Figure 7: A hand demonstrating the easy removal of the inner lid for cleaning.

2. Exterior and Main Unit

- Wipe the exterior of the rice cooker with a soft, damp cloth.
- Clean the steam vent and surrounding areas to prevent blockages.
- Ensure no water enters the electrical components.

TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is undercooked or hard.	Insufficient water; lid not closed properly; power interruption.	Add correct amount of water; ensure lid is sealed; check power connection.
Rice is overcooked or mushy.	Too much water; incorrect cooking course selected.	Reduce water amount; select appropriate cooking course.
Rice cooker does not start.	Not plugged in; power outage; lid not closed.	Check power cord; verify power supply; close lid securely.
Steam leaks from lid.	Lid not closed properly; inner lid gasket dirty or damaged.	Ensure lid is fully closed; clean or replace inner lid gasket.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Detailed technical specifications for the Panasonic SR-A110D rice cooker.

Feature	Detail
Brand	Panasonic
Model Number	SR-A110D

Feature	Detail
Capacity	5.5 cups (1.0 Liter)
Dimensions (D x W x H)	30.3 cm x 27.2 cm x 19.4 cm (approx. 11.9 x 10.7 x 7.6 inches)
Weight	2.9 kg (approx. 6.4 lbs)
Power Source	Corded Electric
Inner Pot Material	Black Thick Pot with Binchotan charcoal coating
Care Method	Hand Wash (Inner Pot, Inner Lid)
Country of Origin	China

親しみやすい コンパクトなデザイン

丸みを帯びた形状で柔らかい印象のデザイン。
コンパクトだから狭い空間にも置くことができます。



Figure 8: Dimensional diagram of the rice cooker, indicating height, width, and depth.

This product comes with a manufacturer's warranty. Please refer to the warranty card included in the product packaging for specific terms, conditions, and duration of the warranty. Keep your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact Panasonic customer service in your region. Contact details can typically be found on the Panasonic official website or in the warranty documentation.