

X-Pack 18

Generic USB Charger for ATTOP mini X-Pack 18 Foldable Mini-Drone

Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Generic USB Charger, designed specifically for the ATTOP mini (Model X-Pack 18) Foldable Mini-Drone. Please read this manual thoroughly before use to ensure proper operation and to prevent damage to the charger or your drone's battery.

SAFETY PRECAUTIONS

- Use only with compatible ATTOP mini (Model X-Pack 18) drone batteries.
- Do not expose the charger to water or moisture.
- Avoid extreme temperatures.
- Do not attempt to disassemble or modify the charger.
- Keep out of reach of children.
- Unplug the charger when not in use.

PACKAGE CONTENTS

- 1 x Generic USB Charger (for ATTOP mini X-Pack 18)

SETUP

The Generic USB Charger is designed for straightforward use. No complex setup is required.

1. **Identify the Charger:** Locate the USB charger. It features a standard USB-A plug on one end and a barrel connector on the other, connected by a cable.



Image 1: Front view of the Generic USB Charger, showing the USB-A plug, cable, and barrel connector. The cable has a label "70517AAX".

2. **Power Source:** Connect the USB-A plug of the charger into a compatible 5V USB power source (e.g., computer USB port, USB wall adapter, power bank). Ensure the power source provides stable output.



Image 2: Back view of the Generic USB Charger, displaying product information such as "Model Number: CT-6892" and "Date: Oct/2023" on a label.

OPERATING INSTRUCTIONS

Follow these steps to charge your ATTOP mini X-Pack 18 drone battery:

1. **Connect to Power:** Plug the USB-A end of the charger into a 5V USB power adapter or a computer's USB port.

2. **Connect Battery:** Carefully insert the barrel connector of the charger into the charging port of your ATTOP mini X-Pack 18 drone battery. Ensure a secure connection.
3. **Charging Indicator:** The charger may feature an LED indicator (not explicitly stated in product details, but common for chargers). Refer to your drone battery's manual for specific charging indicator behavior (e.g., red for charging, green for fully charged).
4. **Charging Time:** Charging time will vary depending on the battery's capacity and its current charge level. Avoid overcharging by disconnecting the battery once fully charged.
5. **Disconnect:** Once charging is complete, first disconnect the barrel connector from the battery, then unplug the USB-A end from the power source.

MAINTENANCE

- **Cleaning:** Use a dry, soft cloth to clean the charger. Do not use liquid cleaners or solvents.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the cable and connectors for any signs of damage. If damage is found, discontinue use immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Battery not charging.	Loose connection. Faulty USB power source. Incompatible battery. Damaged charger or battery.	Ensure all connections are secure. Try a different USB power source. Verify the battery is for ATTOP mini X-Pack 18. Inspect charger and battery for visible damage. Replace if necessary.
Charger feels warm during use.	Normal operation.	Slight warmth is normal during charging. If it becomes excessively hot, disconnect immediately and contact support.

SPECIFICATIONS

- **Model:** Generic USB Charger for ATTOP mini X-Pack 18
- **Input Voltage:** 5 Volts (USB Standard)
- **Output Voltage:** 3.7 Volts
- **Product Dimensions:** 2 x 2 x 2 inches (approximate)
- **Manufacturer:** ROBOTIC
- **Compatibility:** ATTOP mini (Model X-Pack 18) Foldable Mini-Drone batteries

SUPPORT

For further assistance or inquiries, please refer to the retailer where the product was purchased.



