

[Manuals.plus](#) /

› [MENTUME](#) /

› MENTUME K70 10.1-inch Android 15 Tablet User Manual

MENTUME K70

MENTUME K70 10.1-inch Android 15 Tablet User Manual

Model: K70

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your MENTUME K70 10.1-inch Android 15 Tablet. Please read this guide thoroughly to ensure proper use and to maximize your device's performance.



Image: The MENTUME K70 tablet displayed with its charger, USB cable, and protective case.

2. SETUP

2.1 Unboxing and Initial Inspection

Carefully remove all items from the packaging. Verify that all components are present and undamaged.

- MENTUME K70 Tablet
- Charger (Power Adapter)
- Charging Cable (USB-C)
- Protective Case

- Instruction Manual (this document)

What's in the Package?



- Tablet
- Data Cable
- Power Adapter
- Leather Sheath

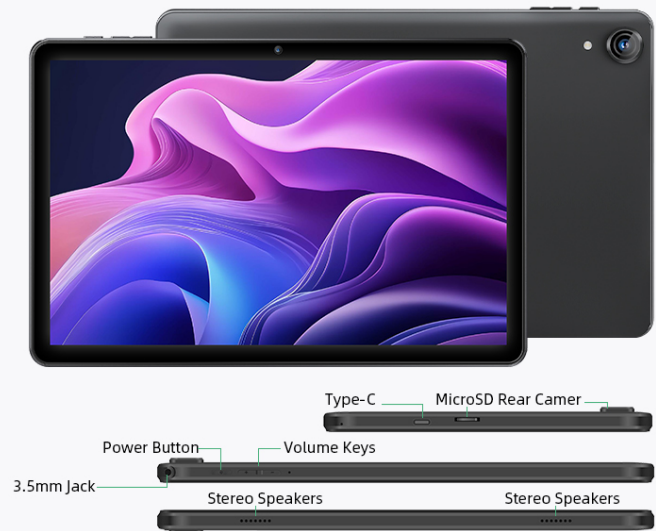 


Image: An illustration detailing the package contents and the tablet's external ports and buttons, including Type-C, MicroSD slot, Rear Camera, Power Button, Volume Keys, 3.5mm Jack, and Stereo Speakers.

2.2 Charging the Tablet

Before first use, fully charge the tablet. Connect the USB-C cable to the tablet's USB-C port and the power adapter. Plug the adapter into a wall outlet. The charging indicator will show the charging status.

2.3 Powering On/Off

- **To Power On:** Press and hold the Power button until the MENTUME logo appears.
- **To Power Off:** Press and hold the Power button until the power options appear on the screen. Select 'Power off'.
- **To Restart:** Press and hold the Power button until the power options appear. Select 'Restart'.

2.4 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, password, or Face Unlock).

3. OPERATING INSTRUCTIONS

3.1 Basic Navigation

The MENTUME K70 tablet uses a touch-based interface. Common gestures include:

- **Tap:** Select an item or open an app.
- **Tap and Hold:** Access contextual menus or move icons.
- **Swipe:** Scroll through pages or lists.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.

3.2 Connecting to Wi-Fi

1. Go to **Settings** > **Network & internet** > **Internet**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

3.3 Bluetooth Pairing

1. Go to **Settings** > **Connected devices** > **Connection preferences** > **Bluetooth**.
2. Turn on Bluetooth.
3. Ensure your Bluetooth device is in pairing mode.
4. Select your device from the list of available devices and follow any on-screen prompts to complete pairing.

3.4 Installing and Uninstalling Applications

- **Install:** Open the **Google Play Store** app, search for your desired application, and tap **Install**.
- **Uninstall:** Tap and hold the app icon on the home screen or app drawer, then drag it to 'Uninstall' or select 'App info' and choose 'Uninstall'. Alternatively, go to **Settings** > **Apps** > **See all apps**, select the app, and tap **Uninstall**.

3.5 Storage Management

Your tablet comes with 128GB of internal storage. You can expand this up to 1TB using a microSD card (not included).

- **To insert a microSD card:** Locate the card slot on the side of the tablet. Gently insert the microSD card until it clicks into place.
- **To manage storage:** Go to **Settings** > **Storage** to view usage and free up space.



Image: A visual representation of the tablet's large capacity storage, highlighting 18GB RAM, 128GB ROM, and 1TB expandability, with various app icons displayed on the screen.

3.6 Camera Usage

The tablet features a 5MP front camera and an 8MP rear camera.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo.
3. Switch between front and rear cameras using the camera toggle icon.
4. Select video mode to record videos.

Capture More Wonderful Moments




LED Flash
Low Light Capture


Front 5MP
Auto Focus


Rear 8MP
HD Video Call



Image: A collage showcasing the tablet's camera capabilities, including LED Flash, Front 5MP, and Rear 8MP HD Video Call features, with example photos.

3.7 Media Playback and Widevine L1

The MENTUME K70 supports Widevine L1, allowing you to stream high-definition content from services like Netflix, Prime Video, and Hulu. Enjoy immersive audio through the tablet's dual speakers.

Widevine L1 Support

Widevine L1 support enables Teclast tablet to securely access high-definition (HD) and ultra-high-definition (UHD) content from premium video streaming services, such as Netflix, Amazon Prime Video, and Disney+, among others.



Image: The tablet screen displaying logos for YouTube, Netflix, Prime Video, and Hulu, indicating Widevine L1 support for high-definition streaming.

3.8 Additional Features

- **GPS Navigation:** Utilize built-in GPS for location services and navigation apps.
- **Face Unlock:** Set up facial recognition for convenient and secure unlocking. Go to **Settings > Security & privacy > Device unlock**.
- **Multitasking Split-Screen:** Open two apps simultaneously by tapping the recent apps button, then tapping the app icon at the top of a recent app and selecting 'Split screen'.
- **Wireless Projection:** Cast your tablet's screen to a compatible TV or display. Go to **Settings > Connected devices > Connection preferences > Cast**.

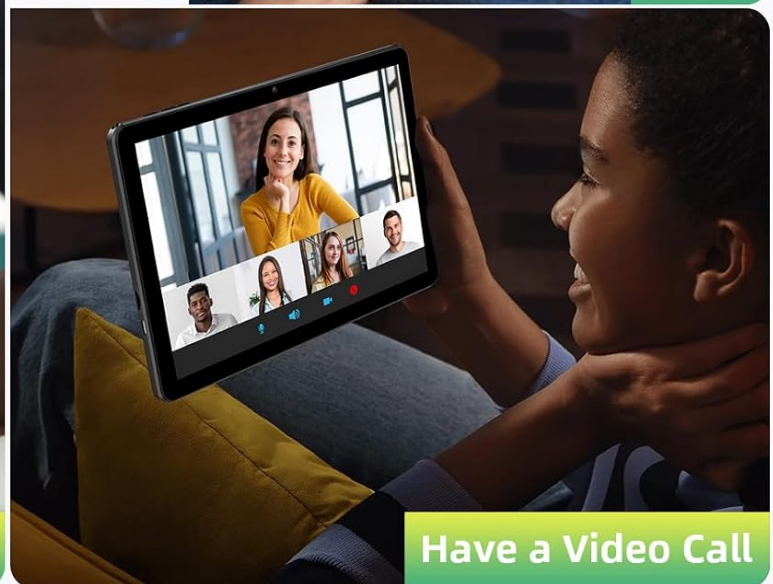 
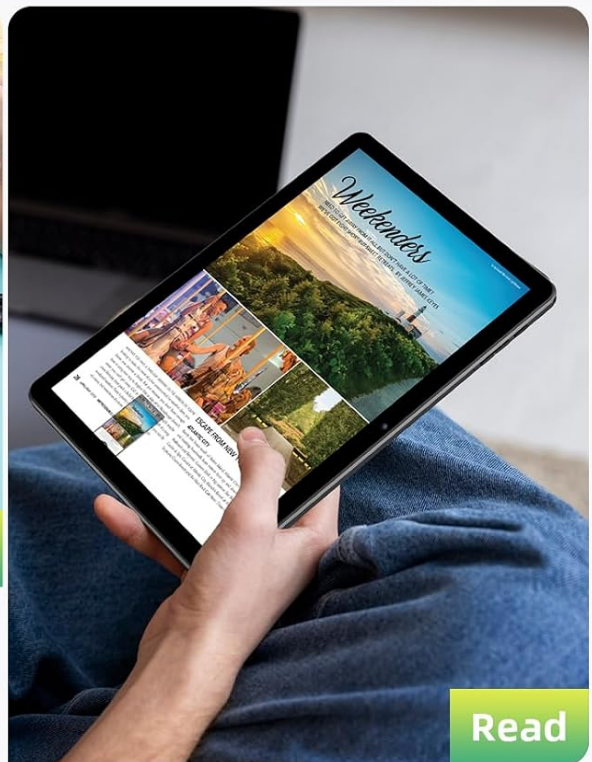 
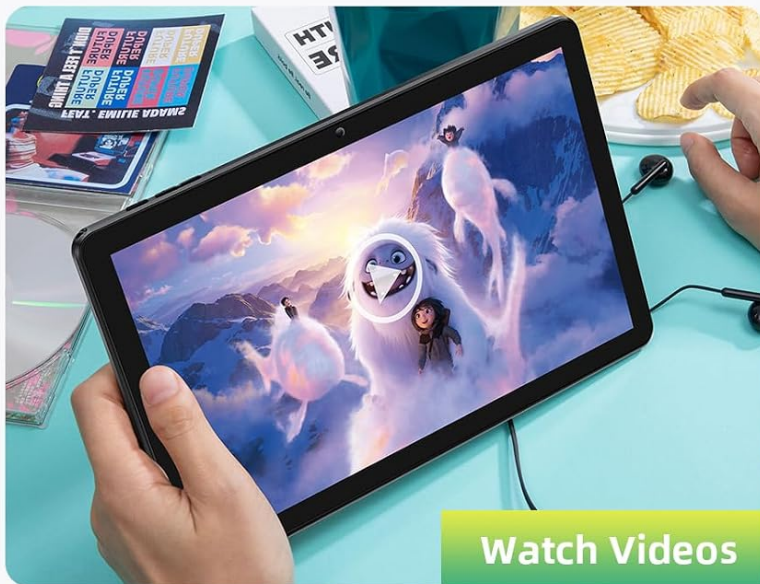 


Image: A composite image showing the tablet being used for various activities: watching videos, reading, working, and participating in a video call, demonstrating its versatility.

4. MAINTENANCE

4.1 Cleaning

- Use a soft, lint-free cloth to clean the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

4.2 Battery Care

The tablet is equipped with a 6000mAh battery. To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Unplug the charger once the tablet is fully charged.
- Adjust screen brightness and close unused apps to conserve power.

Long Lasting Battery

-  **8** hrs Video
-  **10** hrs Music
-  **16** hrs Calling
-  **20** hrs E-Books
-  **72** hrs Standby



-  **Dual Speakers**
-  **Immersive Sound**
-  **Endless Fun**

Image: The tablet showing a large 6000mAh battery icon and estimated usage times for video, music, calling, e-books, and standby, along with icons for dual speakers and immersive sound.

4.3 Software Updates

Regularly check for and install software updates to ensure your Android 15 operating system is secure and performing optimally. Go to **Settings > System > System update**.

4.4 Storage Optimization

Periodically review your installed apps and files. Uninstall unused apps and delete unnecessary files to maintain optimal performance and free up storage space.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

- **Tablet not powering on:** Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again.
- **Wi-Fi connection issues:** Restart your Wi-Fi router and the tablet. Forget the network in tablet settings and reconnect.
- **Apps crashing or freezing:** Close the app from recent apps. Clear the app's cache (**Settings > Apps > See all apps > select app > Storage & cache > Clear cache**). If the issue persists, uninstall and reinstall the app.
- **Slow performance:** Close unused background apps. Clear cache for frequently used apps. Consider freeing up storage space.

5.2 Factory Reset

If you encounter persistent issues, a factory reset may resolve them. **Warning: This will erase all data on your tablet. Back up important data before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your choice and follow the on-screen instructions.

6. SPECIFICATIONS

Feature	Specification
Model	K70
Operating System	Android 15
Processor	Octa-Core (2.0 GHz)
RAM	18GB (6GB + 12GB virtual)
Internal Storage	128GB
Expandable Storage	Up to 1TB via microSD card (not included)
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels IPS
Rear Camera	8MP
Front Camera	5MP
Battery Capacity	6000mAh

Feature	Specification
Connectivity	Wi-Fi 6 (2.4G/5G), Bluetooth 5.4, GPS
Ports	USB-C, 3.5mm Headphone Jack
Dimensions (LxWxH)	9.7 x 6.42 x 0.38 inches
Weight	1.13 pounds
Special Features	Widevine L1, Dual Speakers, Face Unlock, Multitasking Split-Screen, Wireless Projection

Octa-core T310 CPU & Android 15 Os

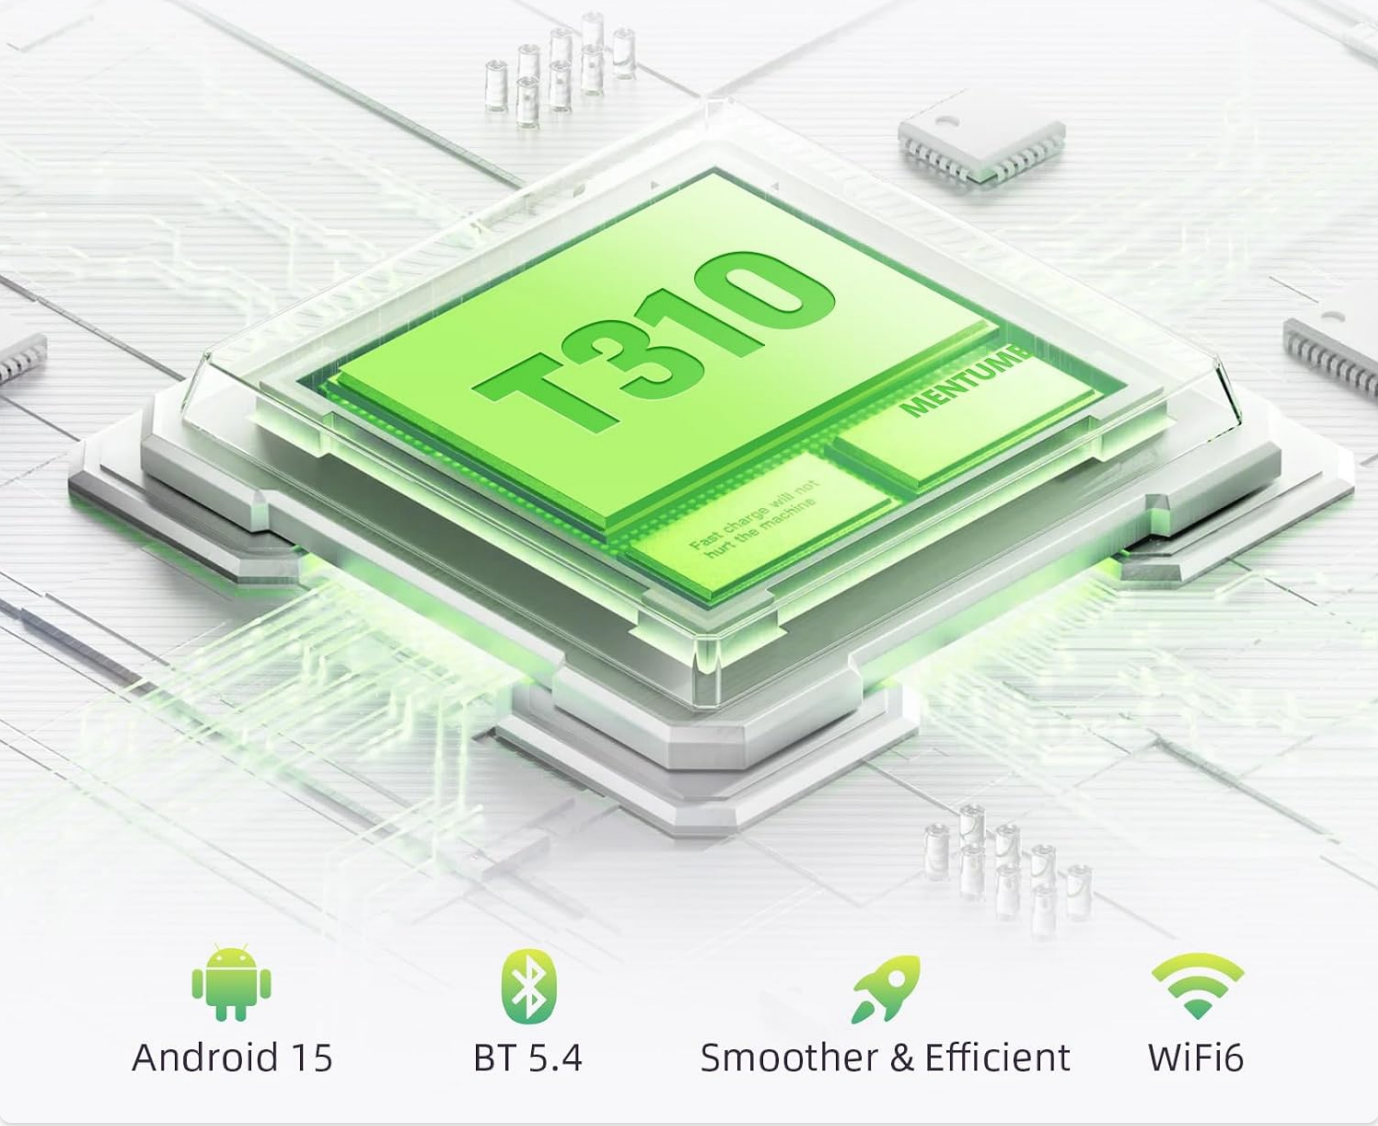 


Image: An illustration highlighting the tablet's Octa-core T310 CPU and Android 15 OS, along with icons for BT 5.4, smoother & efficient performance, and WiFi6.

7. WARRANTY AND SUPPORT

MENTUME provides a 1-year warranty and 24-hour customer service to address any issues you may encounter with your tablet.

7.1 Contacting Support

For assistance, please follow these steps:

1. Log in to your Amazon account.
2. Navigate to 'Your Orders'.
3. Find the order for your MENTUME K70 Tablet.
4. Click on 'Contact Seller' to reach our customer service team.

© 2025 MENTUME. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question