

[Manuals.plus](#) /

› [MENTUME](#) /

› MENTUME Android 15 Tablet K80 User Manual

MENTUME K80

MENTUME Android 15 Tablet K80 User Manual

Model: K80

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your MENTUME Android 15 Tablet K80. Featuring the latest Android 15 OS and a 2.0 GHz octa-core processor, this 10-inch tablet is designed for smooth performance and multitasking. It includes a 10.1-inch FHD (1280 x 800) IPS display with Widevine L1 certification for high-quality streaming, 24GB (8+16) RAM, 128GB ROM (expandable up to 1TB via microSD), dual-band 2.4G/5G WiFi, Bluetooth 5.4, GPS, and a 6000mAh battery.

2. WHAT'S IN THE BOX

Verify that all items are present in your product package:

- 1x MENTUME Android 15 Tablet K80
- 1x Tablet Case
- 1x Bluetooth Keyboard
- 1x Wireless Mouse
- 1x Stylus
- 1x Power Adapter
- 1x Data Cable (USB-C)



Image: MENTUME Android 15 Tablet K80 with its accessories, including a keyboard, mouse, stylus, case, charger, and USB-C cable.



Image: A detailed layout of the MENTUME Android 15 Tablet K80 and all its components as they appear when unboxed.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing process of the MENTUME Android Tablet, showcasing all included accessories and the tablet itself.

3. PRODUCT OVERVIEW

The MENTUME Android 15 Tablet K80 features a sleek design with essential ports and controls for ease of use.

Device Layout

- **Front Camera:** 5MP for video calls and face unlock.
- **Rear Camera:** 8MP for capturing photos and videos.
- **Display:** 10.1-inch IPS screen with 1280x800 resolution.
- **Ports:** USB-C for charging and data transfer, 3.5mm headphone jack, MicroSD card slot.
- **Buttons:** Power button, Volume up/down.
- **Speakers:** Dual speakers for immersive audio.

Family-Shared Tablet



Image: Close-up view highlighting the 8MP rear camera and 5MP front camera of the MENTUME Android 15 Tablet K80.

4. SETUP

4.1 Powering On/Off

- **To Power On:** Press and hold the Power button until the MENTUME logo appears.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

4.2 Charging the Tablet

Connect the provided USB-C cable to the tablet's USB-C port and the power adapter. Plug the adapter into a wall outlet. The battery icon on the screen will indicate charging status. Ensure the tablet is fully charged before first use for optimal battery performance.

4.3 Connecting Accessories (Keyboard, Mouse)

The MENTUME Tablet K80 supports Bluetooth accessories like the included keyboard and mouse.

1. **Enable Bluetooth:** Go to **Settings > Connected devices > Bluetooth** and toggle it ON.
2. **Pair Keyboard:** Turn on the Bluetooth keyboard. Press the 'Connect' button on the keyboard. On your tablet, tap 'Pair new device' and select 'Bluetooth Keyboard' from the list.
3. **Pair Mouse:** Insert the battery into the wireless mouse. Turn on the mouse. On your tablet, tap 'Pair new device' and select the mouse (e.g., 'BT5.2 Mouse') from the list.

Your browser does not support the video tag.

Video: This video demonstrates the process of connecting the Bluetooth keyboard and mouse to the MENTUME Android 15 Tablet K80, showing how to enable Bluetooth and pair devices.

4.4 Initial Android Setup

Upon first power-on, follow the on-screen prompts to select your language, connect to Wi-Fi, sign in with your Google account, and set up basic preferences.

5. OPERATING INSTRUCTIONS

 
5.1 Navigation and Interface

- **Home Screen:** Swipe left/right to navigate between screens.
- **Notifications:** Swipe down from the top of the screen to access notifications and quick settings.
- **App Drawer:** Swipe up from the bottom of the screen to view all installed applications.

5.2 Wi-Fi and Bluetooth Connectivity

The tablet supports dual-band 2.4G/5G WiFi and Bluetooth 5.4 for stable wireless connections.

- **Wi-Fi:** Go to **Settings > Network & internet > Wi-Fi** to connect to available networks.
- **Bluetooth:** Go to **Settings > Connected devices > Bluetooth** to manage Bluetooth devices.

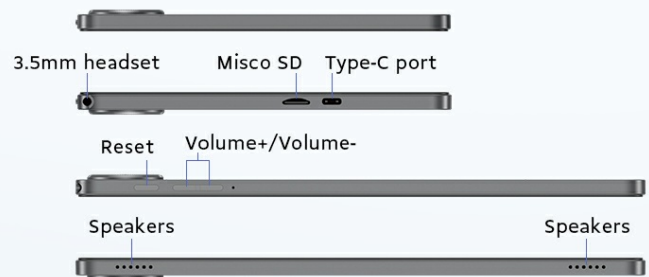

What's in the Box ?

- 1x Stylus 1x Tablet 1x Power Adapter 1x Data Cable
1x Leather Sheath 1x Bluetooth keyboard 1x Wireless mouse



Image: Visual representation of the tablet's high-speed 2.4G+5G WiFi and Bluetooth 5.4 power-saving capabilities, suitable for presentations or wireless projection.

5.3 Camera Functions

Utilize the 5MP front camera for video calls and selfies, and the 8MP rear camera for capturing photos and videos.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo or the video icon to record.
3. Switch between front and rear cameras using the camera toggle icon.

 
5.4 Apps and Google Play

The tablet comes with Google Play pre-installed, allowing you to download a wide variety of applications.

- Open the **Play Store** app to browse and download apps.
- Pre-installed apps include Google, Assistant, Photos, Meet, and more.

Super Long Battery Life

6000mAh battery with fast charging, meet your daily entertainment or work needs, you can enjoy uninterrupted use at any time. No more anxiety about battery power!

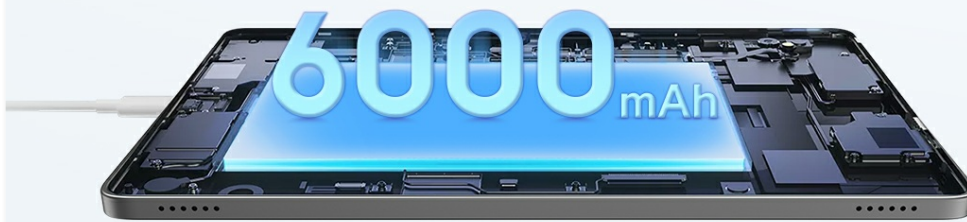

 **8** hrs
Video

 **10** hrs
Music

 **16** hrs
Calling

 **20** hrs
E-Books

 **72** hrs
Standby

Image: The MENTUME Android 15 Tablet K80 displaying a variety of popular applications, illustrating its versatility for different uses.

5.5 Split-Screen Multitasking

To use two applications simultaneously:

1. Open the first app.
2. Swipe up from the bottom of the screen and hold to access recent apps.
3. Tap the app icon at the top of the first app's window and select 'Split screen'.
4. Choose the second app from your recent apps or app drawer.



Image: A user demonstrating the split-screen feature on the MENTUME Android 15 Tablet K80, showing two applications running side-by-side.

5.6 Face Unlock

Register your facial information in the settings to quickly unlock the tablet without revealing your password.

1. Go to **Settings > Security & privacy > Face unlock**.
2. Follow the on-screen instructions to register your face.



Image: A person using the face unlock feature on the MENTUME Android 15 Tablet K80, illustrating the quick and secure access.

5.7 Widevine L1 Streaming

The tablet is Widevine L1 certified, enabling you to enjoy smooth streaming of Full HD content on popular platforms like Netflix and Prime Video.



Face Unlock

The front camera supports face unlock. Register your facial information in the settings to quickly unlock the tablet without revealing your password.



Image: The MENTUME Android 15 Tablet K80 showcasing its Widevine L1 support, indicating compatibility with various streaming services for high-definition content.

6. MAINTENANCE

6.1 General Device Care

- Keep the tablet dry. Avoid exposure to moisture or humidity.
- Clean the screen with a soft, lint-free cloth. Do not use harsh chemicals.
- Avoid extreme temperatures.
- Protect the screen from scratches using a screen protector.

6.2 Battery Information

The tablet is equipped with a 6000mAh high-capacity battery. To maximize battery life:

- Charge the tablet regularly, but avoid overcharging.
- Reduce screen brightness.
- Turn off Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.



Image: An infographic detailing the long-lasting 6000mAh battery of the MENTUME Android 15 Tablet K80, showing estimated usage times for various activities.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

- **Tablet not powering on:** Ensure the battery is charged. Connect to the charger and try again. If unresponsive, press and hold the power button for 10-15 seconds to force a restart.
- **Screen is unresponsive:** Restart the tablet. If the issue persists, perform a factory reset (note: this will erase all data).
- **Wi-Fi connection issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the network and reconnect.
- **Bluetooth device not connecting:** Ensure Bluetooth is enabled on both devices. Make sure the accessory is in pairing mode. Try unpairing and re-pairing the device.
- **Apps crashing or freezing:** Clear the app's cache and data in **Settings > Apps**. Update the app to the latest version. If the problem continues, uninstall and reinstall the app.
- **Slow performance:** Close unused apps. Clear cache regularly. Consider uninstalling unnecessary apps or moving large files to an SD card.

8. SPECIFICATIONS

Feature	Specification
Brand	MENTUME
Model Number	K80
Operating System	Android 15
Processor	2.0 GHz Octa-Core (Unisoc T615)
RAM	24GB (8GB physical + 16GB virtual)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB via MicroSD card (not included)
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels (FHD IPS)
Widevine Certification	Widevine L1
Rear Camera	8MP
Front Camera	5MP
Battery Capacity	6000mAh
Average Battery Life	6 Hours (usage dependent)
Wireless Connectivity	2.4G/5G WiFi (802.11a/b/g/n/ac), Bluetooth 5.4
GPS	Yes
Dimensions (LxWxH)	9.55 x 6.35 x 0.34 inches
Item Weight	1.13 pounds

Storage What You Like



Image: An illustration detailing the Unisoc T615 processor, highlighting its 1.8GHz speed, Mali-G57 MP1 GPU, 12nm process, and Android 15 compatibility.

Capture Happiness

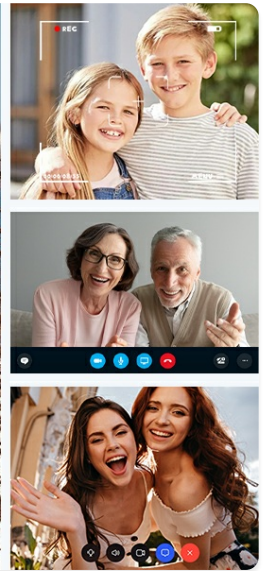 


Image: A visual representation of the MENTUME Android 15 Tablet K80's storage capabilities, including 24GB (8+16) RAM, 128GB ROM, and 1TB expandable storage.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The MENTUME Android 15 Tablet K80 comes with a 1-year warranty.

9.2 Customer Support

For any questions or support needs, please contact our 24-hour online customer service. You can reach us by:

- Logging into your Amazon account.
- Navigating to 'Your Orders'.
- Finding your order for the MENTUME Android 15 Tablet K80.
- Clicking 'Contact Seller'.

© 2025 MENTUME. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question